 
This document is not an ASTM standard and is intended only to provide the user of an ASTM standard an indication of what changes have been made to the previous version. Because it may not be technically possible to adequately depict all changes accurately, ASTM recommends that users consult prior editions as appropriate. In all cases only the current version of the standard as published by ASTM is to be considered the official document.



Standard Practice for Calibration and Use of Torque Meters Used in Packaging Applications¹

This standard is issued under the fixed designation D3474; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ε) indicates an editorial change since the last revision or reapproval.

1. Scope

1.1 This practice covers the calibration and use of torque meters of the type normally used in packaging applications.

1.2 This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety, health, and environmental practices and determine the applicability of regulatory limitations prior to use.

1.3 This international standard was developed in accordance with internationally recognized principles on standardization established in the Decision on Principles for the Development of International Standards, Guides and Recommendations issued by the World Trade Organization Technical Barriers to Trade (TBT) Committee.

2. Referenced Documents

2.1 ASTM Standards:²



3. Terminology

<u>ASTM D3474-23</u>

3.1 Definitions—For definitions of application torque and removal torque, see Test Method D3198.

3.1.1 *stripping torque*—a force or system of forces acting in a tightening direction that causes overrunning of the threads or rotation of an overshell a threaded or lug style closure system with respect to its supporting member.

4. Summary of Practice

4.1 *Calibration*—Reference torque values are obtained by means of vertically suspended dead weights acting at specific distances from the axis of the mounting platform of the tester.

4.2 *Use*—Torque values to apply or remove closures are obtained by mounting containers on the platform and either applying or removing the closures. In some applications, the closure is mounted on the platform and the container is rotated.

¹ This practice is under the jurisdiction of ASTM Committee F02 on Primary Barrier Packaging and is the direct responsibility of Subcommittee F02.25 on Rigid Container Closure Systems.

Current edition approved April 15, 2018Nov. 1, 2023. Published June 2018November 2023. Originally approved in 1976. Last previous edition approved in 20122018 as D3474 – 90 (2018). (2012). DOI: 10.1520/D3474-90R18.10.1520/D3474-23.

² For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For Annual Book of ASTM Standards volume information, refer to the standard's Document Summary page on the ASTM website.

³ The last approved version of this historical standard is referenced on www.astm.org.

🖽 D3474 – 23

5. Significance and Use

5.1 This practice can be used to check devices used to measure the application and removal torques of continuous or intermittent thread and lug closures.

5.2 This practice can be used to determine the amount of torque to either apply or remove a closure.

6. Apparatus

6.1 *Adapter*—A circular plate that can be mounted concentrically on the platform of the tester. If the platform itself is suitable, an adapter is not necessary. The adapter should be of such diameter that its radius multiplied by appropriate weights will give torque values equal to $\frac{1}{4}$, $\frac{1}{2}$, and full-scale meter readings. (Typical devices for packaging applications have ranges from: 0 to 10, 0 to 25, 0 to 50, and 0 to 100 lbf-in. (0 to 1.13, 0 to 2.8, 0 to 5.7, and 0 to 11.3 N/m, respectively).

6.2 *Connecting Means*—A very flexible, thin filament, such as a wire or fishing line that transmits the force of hanging weights to the circumference of the adapter.

6.3 Pulley, low friction, used to change the direction of the connecting means from horizontal to vertical.

6.4 Appropriate Dead Weights, for example: 2, 4, and 7-lb (0.9, 1.8, and 3.2-kg) for a torque meter with a 7 in. (178 mm) diameter plate or platform and a range of 0 to 25 in-lbsin.lb (0 to 2.8 N-m).

7. Conditioning

7.1 Prior to calibration, the torque meter and weights shall be allowed to come to ambient room conditions.

8. Calibration Procedures (see Fig. 1) OS3//SUAL

8.1 Spring-Loaded Type Testers:

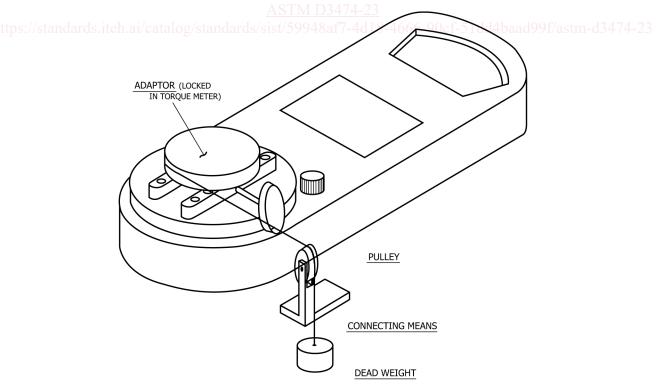


FIG. 1 Torque Meter Calibration Set Up