

INTERNATIONAL STANDARD

NORME INTERNATIONALE



**Digital addressable lighting interface –
Part 103: General requirements – Control devices**

**Interface d'éclairage adressable numérique –
Partie 103: Exigences générales – Dispositifs de commande**

[IEC 62386-103:2014](https://standards.iteh.ai/standards/iec/8e155559-2180-4175-9aea-8325c0cb5fbc/iec-62386-103-2014)

<https://standards.iteh.ai/standards/iec/8e155559-2180-4175-9aea-8325c0cb5fbc/iec-62386-103-2014>



THIS PUBLICATION IS COPYRIGHT PROTECTED
Copyright © 2018 IEC, Geneva, Switzerland

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either IEC or IEC's member National Committee in the country of the requester. If you have any questions about IEC copyright or have an enquiry about obtaining additional rights to this publication, please contact the address below or your local IEC member National Committee for further information.

Droits de reproduction réservés. Sauf indication contraire, aucune partie de cette publication ne peut être reproduite ni utilisée sous quelque forme que ce soit et par aucun procédé, électronique ou mécanique, y compris la photocopie et les microfilms, sans l'accord écrit de l'IEC ou du Comité national de l'IEC du pays du demandeur. Si vous avez des questions sur le copyright de l'IEC ou si vous désirez obtenir des droits supplémentaires sur cette publication, utilisez les coordonnées ci-après ou contactez le Comité national de l'IEC de votre pays de résidence.

IEC Central Office
3, rue de Varembe
CH-1211 Geneva 20
Switzerland

Tel.: +41 22 919 02 11
info@iec.ch
www.iec.ch

About the IEC

The International Electrotechnical Commission (IEC) is the leading global organization that prepares and publishes International Standards for all electrical, electronic and related technologies

About IEC publications

The technical content of IEC publications is kept under constant review by the IEC. Please make sure that you have the latest edition, a corrigenda or an amendment might have been published.

IEC Catalogue - webstore.iec.ch/catalogue

The stand-alone application for consulting the entire bibliographical information on IEC International Standards, Technical Specifications, Technical Reports and other documents. Available for PC, Mac OS, Android Tablets and iPad.

IEC publications search - webstore.iec.ch/advsearchform

The advanced search enables to find IEC publications by a variety of criteria (reference number, text, technical committee,...). It also gives information on projects, replaced and withdrawn publications.

IEC Just Published - webstore.iec.ch/justpublished

Stay up to date on all new IEC publications. Just Published details all new publications released. Available online and also once a month by email.

Electropedia - www.electropedia.org

The world's leading online dictionary of electronic and electrical terms containing 21 000 terms and definitions in English and French, with equivalent terms in 16 additional languages. Also known as the International Electrotechnical Vocabulary (IEV) online.

IEC Glossary - std.iec.ch/glossary

67 000 electrotechnical terminology entries in English and French extracted from the Terms and Definitions clause of IEC publications issued since 2002. Some entries have been collected from earlier publications of IEC TC 37, 77, 86 and CISPR.

IEC Customer Service Centre - webstore.iec.ch/csc

If you wish to give us your feedback on this publication or need further assistance, please contact the Customer Service Centre: sales@iec.ch.

A propos de l'IEC

La Commission Electrotechnique Internationale (IEC) est la première organisation mondiale qui élabore et publie des Normes internationales pour tout ce qui a trait à l'électricité, à l'électronique et aux technologies apparentées.

A propos des publications IEC

Le contenu technique des publications IEC est constamment revu. Veuillez vous assurer que vous possédez l'édition la plus récente, un corrigendum ou amendement peut avoir été publié.

Catalogue IEC - webstore.iec.ch/catalogue

Application autonome pour consulter tous les renseignements bibliographiques sur les Normes internationales, Spécifications techniques, Rapports techniques et autres documents de l'IEC. Disponible pour PC, Mac OS, tablettes Android et iPad.

Recherche de publications IEC - webstore.iec.ch/advsearchform

La recherche avancée permet de trouver des publications IEC en utilisant différents critères (numéro de référence, texte, comité d'études,...). Elle donne aussi des informations sur les projets et les publications remplacées ou retirées.

IEC Just Published - webstore.iec.ch/justpublished

Restez informé sur les nouvelles publications IEC. Just Published détaille les nouvelles publications parues. Disponible en ligne et aussi une fois par mois par email.

Electropedia - www.electropedia.org

Le premier dictionnaire en ligne de termes électroniques et électriques. Il contient 21 000 termes et définitions en anglais et en français, ainsi que les termes équivalents dans 16 langues additionnelles. Egalement appelé Vocabulaire Electrotechnique International (IEV) en ligne.

Glossaire IEC - std.iec.ch/glossary

67 000 entrées terminologiques électrotechniques, en anglais et en français, extraites des articles Termes et Définitions des publications IEC parues depuis 2002. Plus certaines entrées antérieures extraites des publications des CE 37, 77, 86 et CISPR de l'IEC.

Service Clients - webstore.iec.ch/csc

Si vous désirez nous donner des commentaires sur cette publication ou si vous avez des questions contactez-nous: sales@iec.ch.

INTERNATIONAL STANDARD

NORME INTERNATIONALE



**Digital addressable lighting interface –
Part 103: General requirements – Control devices**

**Interface d'éclairage adressable numérique –
Partie 103: Exigences générales – Dispositifs de commande**

INTERNATIONAL
ELECTROTECHNICAL
COMMISSION

COMMISSION
ELECTROTECHNIQUE
INTERNATIONALE

ICS 29.140.50; 29.140.99

ISBN 978-2-8322-6096-8

**Warning! Make sure that you obtained this publication from an authorized distributor.
Attention! Veuillez vous assurer que vous avez obtenu cette publication via un distributeur agréé.**

Withdrawn

iTech Standards
(<https://standards.iteh.ai>)
Document Preview

[IEC 62386-103:2014](#)

<https://standards.iteh.ai/Catalogue/standards/iec/8e155559-2180-4175-9aea-8325c0cb5fbe/iec-62386-103-2014>

REDLINE VERSION

VERSION REDLINE



**Digital addressable lighting interface –
Part 103: General requirements – Control devices**

**Interface d'éclairage adressable numérique –
Partie 103: Exigences générales – Dispositifs de commande**

[IEC 62386-103:2014](https://standards.iteh.ai/standards/iec/8e155559-2180-4175-9aea-8325c0cb5fbc/iec-62386-103-2014)

<https://standards.iteh.ai/standards/iec/8e155559-2180-4175-9aea-8325c0cb5fbc/iec-62386-103-2014>

| | | |
|--------|--|----|
| 9.8 | System failure | 31 |
| 9.9 | Operating a control device | 31 |
| 9.9.1 | Enable/disable the application controller | 31 |
| 9.9.5 | Application controller always active | 31 |
| 9.9.2 | Enable/disable event messages | 32 |
| 9.9.3 | Quiescent mode | 32 |
| 9.9.4 | Modes of operation | 32 |
| 9.10 | Memory banks | 33 |
| 9.10.1 | General | 33 |
| 9.10.2 | Memory map | 33 |
| 9.10.3 | Selecting a memory bank location | 34 |
| 9.10.4 | Memory bank reading | 34 |
| 9.10.5 | Memory bank writing | 35 |
| 9.10.6 | Memory bank 0 | 36 |
| 9.10.7 | Memory bank 1 | 38 |
| 9.10.8 | Manufacturer specific memory banks | 40 |
| 9.10.9 | Reserved memory banks | 40 |
| 9.11 | Reset | 40 |
| 9.11.1 | Reset operation | 40 |
| 9.11.2 | Reset memory bank operation | 40 |
| 9.12 | Power on behaviour | 40 |
| 9.12.1 | Power on | 40 |
| 9.12.2 | Power cycle notification | 41 |
| 9.13 | Priority use | 41 |
| 9.13.1 | General | 41 |
| 9.13.2 | Priority of input notifications | 42 |
| 9.14 | Assigning short addresses | 42 |
| 9.14.1 | General | 42 |
| 9.14.2 | Random address allocation | 42 |
| 9.14.3 | Identification of a device | 42 |
| 9.15 | Exception handling | 43 |
| 9.16 | Device capabilities and status information | 43 |
| 9.16.1 | Device capabilities | 43 |
| 9.16.2 | Device status | 43 |
| 9.16.3 | Instance status | 44 |
| 9.17 | Non-volatile memory | 44 |
| 10 | Declaration of variables | 45 |
| 11 | Definition of commands | 47 |
| 11.1 | General | 47 |
| 11.2 | Overview sheets | 47 |
| 11.3 | Event messages | 54 |
| 11.3.1 | INPUT NOTIFICATION (<i>device/instance, event</i>) | 54 |
| 11.3.2 | POWER NOTIFICATION (<i>device</i>) | 54 |
| 11.4 | Device control instructions | 54 |
| 11.4.1 | General | 54 |
| 11.4.2 | IDENTIFY DEVICE | 54 |
| 11.4.3 | RESET POWER CYCLE SEEN | 55 |
| 11.5 | Device configuration instructions | 55 |
| 11.5.1 | General | 55 |

| | | |
|---------|--|----|
| 11.5.2 | RESET | 55 |
| 11.5.3 | RESET MEMORY BANK (<i>DTR0</i>) | 55 |
| 11.5.4 | SET SHORT ADDRESS (<i>DTR0</i>) | 55 |
| 11.5.5 | ENABLE WRITE MEMORY | 56 |
| 11.5.6 | ENABLE APPLICATION CONTROLLER | 56 |
| 11.5.7 | DISABLE APPLICATION CONTROLLER | 56 |
| 11.5.8 | SET OPERATING MODE (<i>DTR0</i>) | 56 |
| 11.5.9 | ADD TO DEVICE GROUPS 0-15 (<i>DTR2:DTR1</i>) | 56 |
| 11.5.10 | ADD TO DEVICE GROUPS 16-31 (<i>DTR2:DTR1</i>) | 56 |
| 11.5.11 | REMOVE FROM DEVICE GROUPS 0-15 (<i>DTR2:DTR1</i>) | 56 |
| 11.5.12 | REMOVE FROM DEVICE GROUPS 16-31 (<i>DTR2:DTR1</i>) | 56 |
| 11.5.13 | START QUIESCENT MODE | 56 |
| 11.5.14 | STOP QUIESCENT MODE | 57 |
| 11.5.15 | ENABLE POWER CYCLE NOTIFICATION | 57 |
| 11.5.16 | DISABLE POWER CYCLE NOTIFICATION | 57 |
| 11.5.17 | SAVE PERSISTENT VARIABLES | 57 |
| 11.6 | Device queries | 57 |
| 11.6.1 | General | 57 |
| 11.6.2 | QUERY DEVICE CAPABILITIES | 57 |
| 11.6.3 | QUERY DEVICE STATUS | 58 |
| 11.6.4 | QUERY APPLICATION CONTROLLER ERROR | 58 |
| 11.6.5 | QUERY INPUT DEVICE ERROR | 58 |
| 11.6.6 | QUERY MISSING SHORT ADDRESS | 58 |
| 11.6.7 | QUERY VERSION NUMBER | 58 |
| 11.6.8 | QUERY CONTENT <i>DTR0</i> | 58 |
| 11.6.9 | QUERY NUMBER OF INSTANCES | 58 |
| 11.6.10 | QUERY CONTENT <i>DTR1</i> | 59 |
| 11.6.11 | QUERY CONTENT <i>DTR2</i> | 59 |
| 11.6.12 | QUERY RANDOM ADDRESS (H) | 59 |
| 11.6.13 | QUERY RANDOM ADDRESS (M) | 59 |
| 11.6.14 | QUERY RANDOM ADDRESS (L) | 59 |
| 11.6.15 | READ MEMORY LOCATION (<i>DTR1</i> , <i>DTR0</i>) | 59 |
| 11.6.16 | QUERY APPLICATION CONTROLLER ENABLED | 59 |
| 11.6.17 | QUERY OPERATING MODE | 59 |
| 11.6.18 | QUERY MANUFACTURER SPECIFIC MODE | 59 |
| 11.6.19 | QUERY QUIESCENT MODE | 60 |
| 11.6.20 | QUERY DEVICE GROUPS 0-7 | 60 |
| 11.6.21 | QUERY DEVICE GROUPS 8-15 | 60 |
| 11.6.22 | QUERY DEVICE GROUPS 16-23 | 60 |
| 11.6.23 | QUERY DEVICE GROUPS 24-31 | 60 |
| 11.6.24 | QUERY POWER CYCLE NOTIFICATION | 60 |
| 11.6.25 | QUERY EXTENDED VERSION NUMBER(<i>DTR0</i>) | 60 |
| 11.6.26 | QUERY RESET STATE | 60 |
| 11.6.27 | QUERY APPLICATION CONTROLLER ALWAYS ACTIVE | 60 |
| 11.6.28 | QUERY FEATURE TYPE | 60 |
| 11.6.29 | QUERY NEXT FEATURE TYPE | 60 |
| 11.7 | Instance control instructions | 61 |

| | | |
|----------|---|----|
| 11.8 | Instance configuration instructions..... | 61 |
| 11.8.1 | General | 61 |
| 11.8.2 | ENABLE INSTANCE | 61 |
| 11.8.3 | DISABLE INSTANCE | 61 |
| 11.8.4 | SET PRIMARY INSTANCE GROUP (<i>DTR0</i>) | 61 |
| 11.8.5 | SET INSTANCE GROUP 1 (<i>DTR0</i>)..... | 61 |
| 11.8.6 | SET INSTANCE GROUP 2 (<i>DTR0</i>)..... | 62 |
| 11.8.7 | SET EVENT SCHEME (<i>DTR0</i>) | 62 |
| 11.8.8 | SET EVENT PRIORITY (<i>DTR0</i>)..... | 62 |
| 11.8.9 | SET EVENT FILTER (<i>DTR2, DTR1, DTR0</i>) | 62 |
| 11.9 | Instance queries..... | 62 |
| 11.9.1 | General | 62 |
| 11.9.2 | QUERY INSTANCE TYPE | 62 |
| 11.9.3 | QUERY RESOLUTION | 63 |
| 11.9.4 | QUERY INSTANCE ERROR..... | 63 |
| 11.9.5 | QUERY INSTANCE STATUS..... | 63 |
| 11.9.6 | QUERY INSTANCE ENABLED | 63 |
| 11.9.7 | QUERY PRIMARY INSTANCE GROUP | 63 |
| 11.9.8 | QUERY INSTANCE GROUP 1..... | 63 |
| 11.9.9 | QUERY INSTANCE GROUP 2..... | 63 |
| 11.9.10 | QUERY EVENT SCHEME | 63 |
| 11.9.11 | QUERY INPUT VALUE..... | 64 |
| 11.9.12 | QUERY INPUT VALUE LATCH..... | 64 |
| 11.9.13 | QUERY EVENT PRIORITY | 64 |
| 11.9.14 | QUERY FEATURE TYPE | 64 |
| 11.9.15 | QUERY NEXT FEATURE TYPE | 64 |
| 11.9.16 | QUERY EVENT FILTER 0-7 | 64 |
| 11.9.17 | QUERY EVENT FILTER 8-15 | 65 |
| 11.9.18 | QUERY EVENT FILTER 16-23 | 65 |
| 11.10 | Special commands | 65 |
| 11.10.1 | General | 65 |
| 11.10.2 | TERMINATE | 65 |
| 11.10.3 | INITIALISE (<i>device</i>) | 65 |
| 11.10.4 | RANDOMISE | 66 |
| 11.10.5 | COMPARE..... | 66 |
| 11.10.6 | WITHDRAW..... | 66 |
| 11.10.7 | SEARCHADDRH (<i>data</i>) | 66 |
| 11.10.8 | SEARCHADDRM (<i>data</i>)..... | 66 |
| 11.10.9 | SEARCHADDRL (<i>data</i>)..... | 67 |
| 11.10.10 | PROGRAM SHORT ADDRESS (<i>data</i>) | 67 |
| 11.10.11 | VERIFY SHORT ADDRESS (<i>data</i>) | 67 |
| 11.10.12 | QUERY SHORT ADDRESS..... | 67 |
| 11.10.13 | WRITE MEMORY LOCATION (<i>DTR1, DTR0, data</i>)..... | 67 |
| 11.10.14 | WRITE MEMORY LOCATION – NO REPLY (<i>DTR1, DTR0, data</i>)..... | 68 |
| 11.10.15 | DTR0 (<i>data</i>) | 68 |
| 11.10.16 | DTR1 (<i>data</i>) | 68 |
| 11.10.17 | DTR2 (<i>data</i>) | 68 |
| 11.10.18 | DIRECT WRITE MEMORY (<i>DTR1, offset, data</i>)..... | 68 |
| 11.10.19 | DTR1:DTR0 (<i>data1, data0</i>) | 69 |

| | | |
|----------|--|-----|
| 11.10.20 | DTR2:DTR1 (<i>data2, data1</i>) | 69 |
| 11.10.21 | SEND TESTFRAME (<i>data</i>)..... | 69 |
| 12 | Test procedures | 70 |
| 12.1 | General notes on test | 70 |
| 12.1.1 | General | 70 |
| 12.1.2 | Test execution | 70 |
| 12.1.3 | Data transmission | 70 |
| 12.1.4 | Test setup..... | 71 |
| 12.1.5 | Test output | 71 |
| 12.1.6 | Test notation..... | 71 |
| 12.1.7 | Test execution limitations | 73 |
| 12.1.8 | Test results..... | 73 |
| 12.1.9 | Exception handling..... | 73 |
| 12.1.10 | Unexpected answer..... | 73 |
| 12.2 | Preamble | 75 |
| 12.2.1 | Test preamble..... | 75 |
| 12.3 | Physical operational parameters..... | 86 |
| 12.3.1 | Polarity test | 86 |
| 12.3.2 | Maximum and minimum system voltage | 87 |
| 12.3.3 | Overvoltage protection test..... | 87 |
| 12.3.4 | Current rating test | 88 |
| 12.3.5 | Transmitter voltages | 89 |
| 12.3.6 | Transmitter rising and falling edges..... | 91 |
| 12.3.7 | Transmitter bit timing | 93 |
| 12.3.8 | Transmitter frame timing | 95 |
| 12.3.9 | Receiver start-up behavior | 96 |
| 12.3.10 | Receiver threshold..... | 97 |
| 12.3.11 | Receiver bit timing | 98 |
| 12.3.12 | Extended receiver bit timing | 102 |
| 12.3.13 | Receiver forward frame violation | 104 |
| 12.3.14 | Receiver settling timing..... | 104 |
| 12.3.15 | Receiver frame timing FF-FF send twice..... | 105 |
| 12.3.16 | Transmitter collision avoidance by priority | 107 |
| 12.3.17 | Transmitter collision detection for truncated idle phase | 108 |
| 12.3.18 | Transmitter collision detection for extended active phase..... | 111 |
| 12.4 | Device configuration instructions | 114 |
| 12.4.1 | RESET deviceGroups | 114 |
| 12.4.2 | RESET quiescentMode | 115 |
| 12.4.3 | RESET instance groups | 116 |
| 12.4.4 | RESET event filter | 117 |
| 12.4.5 | RESET event scheme | 118 |
| 12.4.6 | RESET: timeout / command in-between..... | 119 |
| 12.4.7 | Send twice timeout (device) | 121 |
| 12.4.8 | Send twice timeout (instance)..... | 124 |
| 12.4.9 | Commands in-between (device)..... | 126 |
| 12.4.10 | Commands in-between (instance)..... | 129 |
| 12.4.11 | SAVE PERSISTENT VARIABLES | 132 |
| 12.4.12 | SET OPERATING MODE | 132 |
| 12.4.13 | Device Disable/Enable Application Controller..... | 133 |

| | | |
|---------|---|-----|
| 12.4.14 | Multi Master Control Device PING | 134 |
| 12.4.15 | Quiescent Mode..... | 135 |
| 12.4.16 | Device power cycle notification..... | 136 |
| 12.4.17 | SET SHORT ADDRESS | 137 |
| 12.4.18 | Reset/Power-on values (device) | 138 |
| 12.4.19 | Reset/Power-on values (instance) | 140 |
| 12.4.20 | DTR0 / DTR1 / DTR2 | 141 |
| 12.4.21 | DTR1:DTR0 and DTR2:DTR1 | 142 |
| 12.4.22 | Device Groups | 143 |
| 12.5 | Device queries | 144 |
| 12.5.1 | Device query capabilities..... | 144 |
| 12.5.2 | QUERY VERSION NUMBER | 144 |
| 12.5.3 | Device power cycle seen..... | 145 |
| 12.5.4 | Input device error..... | 145 |
| 12.6 | Device Memory banks | 146 |
| 12.6.1 | READ MEMORY LOCATION on Memory Bank 0..... | 146 |
| 12.6.2 | READ MEMORY LOCATION on Memory Bank 1..... | 151 |
| 12.6.3 | READ MEMORY LOCATION on other Memory Banks | 153 |
| 12.6.4 | Memory bank writing | 155 |
| 12.6.5 | ENABLE WRITE MEMORY: writeEnableState..... | 160 |
| 12.6.6 | ENABLE WRITE MEMORY: timeout / command in-between | 162 |
| 12.6.7 | RESET MEMORY BANK: timeout / command in-between..... | 163 |
| 12.6.8 | RESET MEMORY BANK | 166 |
| 12.7 | Device Special commands..... | 167 |
| 12.7.1 | INITIALISE – timer | 167 |
| 12.7.2 | TERMINATE | 168 |
| 12.7.3 | INITIALISE - device addressing..... | 169 |
| 12.7.4 | RANDOMISE | 170 |
| 12.7.5 | COMPARE..... | 171 |
| 12.7.6 | WITHDRAW..... | 172 |
| 12.7.7 | SEARCHADDRH / SEARCHADDRM / SEARCHADDRL..... | 173 |
| 12.7.8 | PROGRAM SHORT ADDRESS..... | 174 |
| 12.7.9 | VERIFY SHORT ADDRESS..... | 176 |
| 12.7.10 | QUERY SHORT ADDRESS | 177 |
| 12.7.11 | IDENTIFY DEVICE..... | 179 |
| 12.8 | Logical unit cross contamination..... | 181 |
| 12.8.1 | DTR0..... | 181 |
| 12.8.2 | NVM variables | 182 |
| 12.8.3 | Random address generation..... | 182 |
| 12.8.4 | Addressing 1..... | 183 |
| 12.8.5 | Addressing 2..... | 184 |
| 12.8.6 | Addressing 3..... | 187 |
| 12.9 | Instance addressing | 187 |
| 12.9.1 | Instance Type Addressing | 187 |
| 12.9.2 | Instance Primary Group..... | 188 |
| 12.9.3 | Instance Group 2 | 190 |
| 12.9.4 | Instance Group 1 | 191 |
| 12.9.5 | Instance Group Combinations | 193 |
| 12.9.6 | Multiple Instances Answer..... | 194 |

- 12.10 Instance configuration instructions..... 195
 - 12.10.1 Instance Enable/Disable..... 195
 - 12.10.2 Event Scheme..... 198
 - 12.10.3 Input Resolution & Input Value 202
 - 12.10.4 Event Filter 203
- 12.11 Instance queries..... 203
 - 12.11.1 Instance Number and Types..... 203
 - 12.11.2 Instance Status 204
 - 12.11.3 Instance Error 205
- 12.12 Instance cross contamination 205
 - 12.12.1 Instance Event Priority 205
- 12.13 Reserved Commands 206
 - 12.13.1 Reserved standard device commands..... 206
 - 12.13.2 Reserved instance commands (instance type 0)..... 207
 - 12.13.3 Reserved special commands..... 208
- 12.14 General subsequences..... 209
 - 12.14.1 Reset Device 209
 - 12.14.2 EnableApplicationControllerAndAllInstances..... 209
 - 12.14.3 DisableApplicationControllerAndAllInstances..... 209
 - 12.14.4 HasApplicationController..... 210
 - 12.14.5 GetVersionNumber..... 210
 - 12.14.6 AddDeviceGroups 210
 - 12.14.7 RemoveDeviceGroups..... 211
 - 12.14.8 ClearAllDeviceGroups..... 211
 - 12.14.9 CheckDeviceGroups..... 211
 - 12.14.10 GetDeviceGroups..... 212
 - 12.14.11 PowerCycle..... 212
 - 12.14.12 PowerCycleAndWaitForBusPower..... 213
 - 12.14.13 PowerCycleAndWaitForDecoder..... 213
 - 12.14.14 SetupTestFrame..... 214
 - 12.14.15 GetNumberOfInstances..... 214
 - 12.14.16 GetEventFilter..... 214
 - 12.14.17 SetEventFilter..... 214
 - 12.14.18 GetNumberOfLogicalUnits..... 215
 - 12.14.19 GetIndexOfLogicalUnit..... 215
 - 12.14.20 GetRandomAddress..... 215
 - 12.14.21 GetLimitedRandomAddress..... 215
 - 12.14.22 SetSearchAddress..... 216
 - 12.14.23 SetShortAddress..... 216
 - 12.14.24 ReadMemBankMultibyteLocation..... 217
 - 12.14.25 FindImplementedMemoryBank..... 217
 - 12.14.26 FindAllImplementedMemoryBanks..... 218
 - 12.14.27 ShortAddress..... 218
 - 12.14.28 GroupAddress..... 218
 - 12.14.29 Broadcast..... 218
 - 12.14.30 BroadcastUnaddressed..... 219
 - 12.14.31 InstanceNumber..... 219
 - 12.14.32 InstanceGroup..... 219
 - 12.14.33 InstanceType..... 219

| | |
|--|-----|
| 12.14.34 InstanceBroadcast | 220 |
| 12.14.35 FeatureOfInstanceNumber | 220 |
| 12.14.36 FeatureOfInstanceGroup | 220 |
| 12.14.37 FeatureOfInstanceType | 220 |
| 12.14.38 FeatureOfInstanceBroadcast | 221 |
| 12.14.39 FeatureOfDevice | 221 |
| 12.14.40 FeatureOfDeviceWithGroupAddress | 221 |
| 12.14.41 FeatureOfDeviceWithBroadcast | 221 |
| Bibliography | 223 |

| | |
|---|----|
| Figure 1 - IEC 62386 graphical overview | 14 |
| Figure 2 – Current rating test | 89 |

| | |
|---|----|
| Table 1 – 24-bit command frame encoding | 20 |
| Table 2 – Instance byte in a command frame | 21 |
| Table 3 – 24-bit event message frame encoding | 22 |
| Table 4 – Instance types | 25 |
| Table 5 – Feature types | 25 |
| Table 6 – Instance group variables | 26 |
| Table 7 – Device address information in power cycle event | 28 |
| Table 8 – Event addressing schemes | 28 |
| Table 9 – Signal level (~50%) versus resolution and input value | 30 |
| Table 10 – Example querying sequence to read a 4-byte input value | 30 |
| Table 11 – Basic memory map of memory banks | 34 |
| Table 12 – Memory map of memory bank 0 | 36 |
| Table 13 – Memory map of memory bank 1 | 39 |
| Table 14 – Control device capabilities | 43 |
| Table 15 – Control device status | 44 |
| Table 16 – Instance status | 44 |
| Table 17 – Declaration of device variables | 46 |
| Table 18 – Declaration of instance variables | 47 |
| Table 19 – Instance event messages | 47 |
| Table 20 – Device event messages | 47 |
| Table 21 – Standard commands | 48 |
| Table 22 – Special commands (implemented by both application controller and input device) | 53 |
| Table 23 – Device addressing with “INITIALISE (<i>device</i>)” | 65 |
| Table 24 – Unexpected outcome | 73 |
| Table 25 – Parameters for test sequence Check Factory Default 103 | 80 |
| Table 26 – Parameters for test sequence CheckFactoryDefault103PerLogicalUnit | 84 |
| Table 27 – Parameters for test sequence Transmitter bit timing | 86 |
| Table 28 – Parameters for test sequence Maximum and minimum system voltage | 87 |
| Table 29 – Parameters for test sequence Transmitter voltages | 91 |
| Table 30 – Parameters for test sequence Transmitter rising and falling edges | 92 |

| | |
|--|-----|
| Table 31 – Parameters for test sequence Transmitter bit timing | 95 |
| Table 32 – Parameters for test sequence Receiver frame timing | 96 |
| Table 33 – Parameters for test sequence Receiver start-up behavior | 97 |
| Table 34 – Parameters for test sequence Receiver bit timing | 99 |
| Table 35 – Parameters for test sequence extended receiver bit timing | 103 |
| Table 36 – Parameters for test sequence Receiver frame violation and recovering after frame size violation..... | 104 |
| Table 37 – Parameters for test sequence Receiver frame timing | 105 |
| Table 38 – Parameters for test sequence transmitter collision avoidance by priority | 108 |
| Table 39 – Parameters for test sequence transmitter collision detection for truncated idle phase..... | 111 |
| Table 40 – Parameters for test sequence transmitter collision detection for extended active phase | 114 |
| Table 41 – Parameters for test sequence RESET instance groups | 117 |
| Table 42 – Parameters for test sequence Send twice timeout (device) | 123 |
| Table 43 – Parameters for test sequence Send twice timeout (instance) | 125 |
| Table 44 – Parameters for test sequence Commands in-between (device) | 128 |
| Table 45 – Parameters for test sequence Commands in-between..... | 131 |
| Table 46 – Parameters for test sequence SET SHORT ADDRESS | 138 |
| Table 47 – Parameters for test sequence Reset/Power-on values (device) | 139 |
| Table 48 – Parameters for test sequence Reset/Power-on values (instance) | 141 |
| Table 49 – Parameters for test sequence DTR0 / DTR1 / DTR2 | 142 |
| Table 50 – Parameters for test sequence DTR1:DTR0 and DTR2:DTR1 | 143 |
| Table 51 – Parameters for test sequence READ MEMORY LOCATION on Memory Bank 0..... | 150 |
| Table 52 – Parameters for test sequence READ MEMORY LOCATION on Memory Bank 1..... | 153 |
| Table 53 – Parameters for test sequence Memory bank writing..... | 158 |
| Table 54 – Parameters for test sequence ENABLE WRITE MEMORY: writeEnableState..... | 161 |
| Table 55 – Parameters for test sequence ENABLE WRITE MEMORY: timeout / command in-between..... | 163 |
| Table 56 – Parameters for test sequence RESET MEMORY BANK: timeout / command in-between..... | 166 |
| Table 57 – Parameters for test sequence RESET MEMORY BANK | 167 |
| Table 58 – Parameters for test sequence INITIALISE - device addressing..... | 170 |
| Table 59 – Parameters for test sequence COMPARE..... | 172 |
| Table 60 – Parameters for test sequence WITHDRAW..... | 173 |
| Table 61 – Parameters for test sequence PROGRAM SHORT ADDRESS | 176 |
| Table 62 – Parameters for test sequence VERIFY SHORT ADDRESS | 177 |
| Table 63 – Parameters for test sequence QUERY SHORT ADDRESS..... | 178 |
| Table 64 – Parameters for test sequence IDENTIFY DEVICE..... | 181 |
| Table 65 – Parameters for test sequence Addressing 2 | 186 |
| Table 66 – Parameters for test sequence Reserved commands: standard device commands..... | 207 |
| Table 67 – Parameters for test sequence Reserved instance commands (instance type 0)..... | 208 |