



SLOVENSKI STANDARD SIST ETS 300 557 E1:2003

01-december-2003

9 j fcdg]'X][]HUb]'W'] b]'h'Y_ca i b]_UW'g_] 'g]ghYa 'fZUnU&L'È'GdYWZ]_UW'UfYhY
d'Ugh'nUj a Ygb]_a cV]'bY[UfUX]Uf] GA '\$('\$, Ł

European digital cellular telecommunications system (Phase 2); Mobile radio interface;
Layer 3 specification (GSM 04.08)

iteh STANDARD PREVIEW
(standards.iteh.ai)

Ta slovenski standard je istoveten z: ^{SIST ETS 300 557 E1:2003} **ETS 300 557 Edition 1**
<https://standards.iteh.ai/catalog/standards/sist/44e3150c-e667-4668-ab01-34837a484ded/sist-ets-300-557-e1-2003>

ICS:

33.070.50	Globalni sistem za mobilno telekomunikacijo (GSM)	Global System for Mobile Communication (GSM)
-----------	---	--


SIST ETS 300 557 E1:2003

en

iTeh STANDARD PREVIEW
(standards.iteh.ai)

[SIST ETS 300 557 E1:2003](#)

<https://standards.iteh.ai/catalog/standards/sist/44e3130c-e667-4b68-ab01-34837a484ded/sist-ets-300-557-e1-2003>

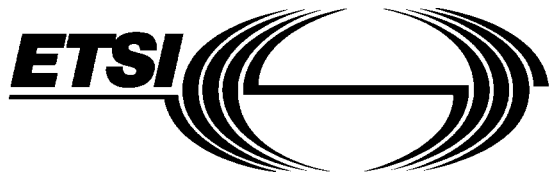

EUROPEAN
TELECOMMUNICATION
STANDARD

ETS 300 557

February 1995

Source: ETSI TC-SMG

Reference: DE/SMG-030408P

ICS: 33.060.30

Key words: European digital cellular telecommunications system, Global System for Mobile communications (GSM)

iTeh STANDARD PREVIEW

**European digital cellular telecommunications system (Phase 2);
Mobile radio interface layer 3 specification**

[SIST ETS 300 557 E1:2003](https://standards.iteh.ai/catalog/standards/sist/ets-300-557-e1-2003)

<https://standards.iteh.ai/catalog/standards/sist/ets-300-557-e1-2003>
(GSM 04.08)

ETSI

European Telecommunications Standards Institute

ETSI Secretariat

Postal address: F-06921 Sophia Antipolis CEDEX - FRANCE

Office address: 650 Route des Lucioles - Sophia Antipolis - Valbonne - FRANCE

X.400: c=fr, a=atlas, p=etsi, s=secretariat - **Internet:** secretariat@etsi.fr

Tel.: +33 92 94 42 00 - Fax: +33 93 65 47 16

Copyright Notification: No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 1995. All rights reserved.

iTeh STANDARD PREVIEW
(standards.iteh.ai)

[SIST ETS 300 557 E1:2003](https://standards.iteh.ai/catalog/standards/sist/44e3130c-e667-4b68-ab01-34837a484ded/sist-ets-300-557-e1-2003)

<https://standards.iteh.ai/catalog/standards/sist/44e3130c-e667-4b68-ab01-34837a484ded/sist-ets-300-557-e1-2003>

Contents

Foreword.....	17
0 Scope	19
0.1 Scope of the Technical Specification.....	19
0.2 Application to the interface structures	19
0.3 Structure of layer 3 procedures.....	19
0.4 Test procedures.....	19
0.5 Use of logical channels	20
0.6 Overview of control procedures.....	20
0.6.1 List of procedures	20
1 Normative references	22
2 Definitions and abbreviations	26
2.1 Random values	26
2.2 Vocabulary	26
3 Radio Resource management procedures.....	27
3.1 Overview/General	27
3.1.1 General	27
3.1.2 Services provided to upper layers.....	27
3.1.2.1 Idle mode.....	27
3.1.2.2 Establishment and release of a RR connection.....	27
3.1.2.3 RR connected mode	27
3.1.3 Services required from data link and physical layers.....	28
3.1.4 Change of dedicated channels.....	28
3.1.4.1 Change of dedicated channels using SAPI = 0	28
3.1.4.2 Change of dedicated channels using other SAPIs than 0	28
3.1.4.3 Sequenced message transfer operation	28
3.1.4.3.1 Variables and sequence numbers	29
3.1.4.3.2 Procedures for the initiation, transfer execution and termination of the sequenced message transfer operation	29
3.1.5 Procedure for Service Request and Contention Resolution.....	29
3.2 Idle mode procedures.....	30
3.2.1 Mobile station side	30
3.2.2 Network side.....	30
3.2.2.1 System information broadcasting	30
3.2.2.2 Paging	31
3.3 RR connection establishment	31
3.3.1 RR connection establishment initiated by the mobile station: immediate assignment procedure	31
3.3.1.1 Permission to access the network.....	31
3.3.1.2 Initiation of the immediate assignment procedure	32
3.3.1.3 Answer from the network	33
3.3.1.3.1 On receipt of a CHANNEL REQUEST message	33
3.3.1.3.2 Assignment rejection.....	34
3.3.1.4 Assignment completion.....	34
3.3.1.5 Abnormal cases.....	34
3.3.2 Paging procedure	34
3.3.2.1 Paging initiation by the network.....	35
3.3.2.2 Paging response.....	36

ETS 300 557: February 1995 (GSM 04.08 version 4.10.1)

	4.2.1.1	Selection of the Service State after Power On.....	57
	4.2.1.2	Other Cases	57
4.2.2		Detailed Description of the MS behaviour in MM IDLE State.....	57
	4.2.2.1	Service State, NORMAL SERVICE	58
	4.2.2.2	Service State, ATTEMPTING TO UPDATE.....	58
	4.2.2.3	Service State, LIMITED SERVICE	58
	4.2.2.4	Service State, NO IMSI.....	58
	4.2.2.5	Service State, SEARCH FOR PLMN, NORMAL SERVICE	59
	4.2.2.6	Service State, SEARCH FOR PLMN	59
4.2.3		Service state when back to state MM IDLE from another state.....	59
4.3		MM common procedures	59
	4.3.1	TMSI reallocation procedure	60
	4.3.1.1	TMSI reallocation initiation by the network	60
	4.3.1.2	TMSI reallocation completion by the Mobile Station.....	60
	4.3.1.3	TMSI reallocation completion in the network.	60
	4.3.1.4	Abnormal cases.....	61
4.3.2		Authentication procedure.....	61
	4.3.2.1	Authentication request by the network	62
	4.3.2.2	Authentication response by the Mobile Station	62
	4.3.2.3	Authentication processing in the network	62
	4.3.2.4	Ciphering key sequence number	62
	4.3.2.5	Unsuccessful authentication	62
	4.3.2.6	Abnormal cases.....	63
4.3.3		Identification procedure.....	63
	4.3.3.1	Identity request by the network.....	63
	4.3.3.2	Identification response by the Mobile Station	63
	4.3.3.3	Abnormal cases.....	64
4.3.4		IMSI detach procedure	64
	4.3.4.1	IMSI detach initiation by the Mobile Station.....	64
	4.3.4.2	IMSI detach procedure in the network.....	64
	4.3.4.3	IMSI detach completion by the Mobile Station.....	64
	4.3.4.4	Abnormal cases.....	65
4.3.5		Abort procedure	65
	4.3.5.1	Abort procedure initiation by the network.....	65
	4.3.5.2	Abort procedure in the Mobile Station.....	65
4.4		MM specific procedures	65
	4.4.1	Location updating procedure	66
	4.4.2	Periodic updating.....	66
	4.4.3	IMSI attach procedure.....	67
	4.4.4	Generic Location Updating procedure	67
	4.4.4.1	Location updating initiation by the Mobile Station.....	67
	4.4.4.1a	Network Request for Additional MS Capability Information	68
	4.4.4.2	Identification request from the network.....	68
	4.4.4.3	Authentication by the network	68
	4.4.4.4	Ciphering mode setting by the network.....	68
	4.4.4.5	Attempt Counter	68
	4.4.4.6	Location updating accepted by the network	68
	4.4.4.7	Location updating not accepted by the network.....	69
	4.4.4.8	Release of RR connection after location updating.....	69
	4.4.4.9	Abnormal cases on the Mobile Station side.....	70
	4.4.4.10	Abnormal cases on the network side.....	71
4.5		Connection management sublayer service provision	71
	4.5.1	MM connection establishment.....	72
	4.5.1.1	MM connection establishment initiated by the mobile station	72
	4.5.1.2	Abnormal cases.....	74
	4.5.1.3	MM connection establishment initiated by the network.....	75
	4.5.1.4	Abnormal cases.....	75
	4.5.1.5	MM connection establishment for emergency calls	75
	4.5.1.6	Call re-establishment	76

	4.5.1.6.1	Call re-establishment, initiation by the mobile station.....	76
	4.5.1.6.2	Abnormal cases	78
	4.5.1.7	Forced release during MO MM connection establishment...	78
4.5.2		MM connection information transfer phase.....	79
	4.5.2.1	Sending CM messages	79
	4.5.2.2	Receiving CM messages	79
	4.5.2.3	Abnormal cases.....	79
4.5.3		MM connection release	80
	4.5.3.1	Release of associated RR connection	80
4.6		Receiving a MM STATUS message by a MM entity.	80
5		Elementary procedures for circuit-switched Call Control	81
5.1		Overview	81
	5.1.1	General	81
	5.1.2	Call Control States	84
	5.1.2.1	Call states at the Mobile Station side of the interface.....	84
	5.1.2.1.1	Null (State U0).....	84
	5.1.2.1.2	MM Connection pending (U0.1).....	84
	5.1.2.1.3	Call initiated (U1).....	84
	5.1.2.1.4	Mobile originating call proceeding (U3) .	84
	5.1.2.1.5	Call delivered (U4)	84
	5.1.2.1.6	Call present (U6)	84
	5.1.2.1.7	Call received (U7).....	84
	5.1.2.1.8	Connect Request (U8)	84
	5.1.2.1.9	Mobile terminating call confirmed (U9)..	84
	5.1.2.1.10	Active (U10).....	84
	5.1.2.1.11	Disconnect request (U11).....	85
	5.1.2.1.12	Disconnect indication (U12)	85
	5.1.2.1.13	Release request (U19).....	85
	5.1.2.1.14	Mobile originating modify (U26).....	85
	5.1.2.1.15	Mobile terminating modify (U27)	85
	5.1.2.2	Network call states	85
	5.1.2.2.1	Null (State N0).....	85
	5.1.2.2.2	MM connection pending (N0.1)	85
	5.1.2.2.3	Call initiated (N1).....	85
	5.1.2.2.4	Mobile originating call proceeding (N3) .	85
	5.1.2.2.5	Call delivered (N4)	85
	5.1.2.2.6	Call present (N6)	85
	5.1.2.2.7	Call received (N7).....	86
	5.1.2.2.8	Connect request (N8).....	86
	5.1.2.2.9	Mobile terminating call confirmed (N9)..	86
	5.1.2.2.10	Active (N10).....	86
	5.1.2.2.11	{Not used}.....	86
	5.1.2.2.12	Disconnect indication (N12)	86
	5.1.2.2.13	Release request (N19).....	86
	5.1.2.2.14	Mobile originating modify (N26).....	86
	5.1.2.2.15	Mobile terminating modify (N27)	86
	5.1.2.2.16	Connect Indication (N28).....	86
5.2		Call establishment procedures.....	86
	5.2.1	Mobile originating call establishment.....	87
	5.2.1.1	Call initiation	87
	5.2.1.2	Receipt of a setup message	88
	5.2.1.3	Receipt of a CALL PROCEEDING message.....	89
	5.2.1.4	Notification of progressing mobile originated call.....	89
	5.2.1.4.1	Notification of interworking in connection with mobile originated call establishment.....	90
	5.2.1.4.2	Call progress in the PLMN/ISDN environment	90

ETS 300 557: February 1995 (GSM 04.08 version 4.10.1)

	5.2.1.5	Alerting	91
	5.2.1.6	Call connected.....	92
	5.2.1.7	Call rejection	92
	5.2.1.8	Transit network selection.....	93
	5.2.1.9	Traffic channel assignment at mobile originating call establishment	93
	5.2.1.10	Call queuing at mobile originating call establishment	93
5.2.2		Mobile terminating call establishment	93
	5.2.2.1	Call indication	93
	5.2.2.2	Compatibility checking.....	94
	5.2.2.3	Call confirmation.....	94
	5.2.2.3.1	Response to SETUP.....	94
	5.2.2.3.2	Receipt of CALL CONFIRMED and ALERTING by the network.....	95
	5.2.2.3.3	Call failure procedures.....	95
	5.2.2.3.4	Called Mobile Station clearing during mobile terminating call establishment ...	95
	5.2.2.4	Notification of interworking in connection with mobile terminating call establishment	95
	5.2.2.5	Call accept.....	96
	5.2.2.6	Active indication.....	96
	5.2.2.7	Traffic channel assignment at mobile terminating call establishment	96
	5.2.2.8	Call queuing at mobile terminating call establishment	97
	5.2.2.9	User connection attachment during a mobile terminating call	97
5.3		Signalling procedures during the "active" state	97
	5.3.1	User notification procedure.....	97
	5.3.2	Call rearrangements.....	97
	5.3.3	DTMF protocol control procedure	97
	5.3.3.1	Start DTMF request by the Mobile Station	97
	5.3.3.2	Start DTMF response by the network.....	98
	5.3.3.3	Stop DTMF request by the Mobile Station	98
	5.3.3.4	Stop DTMF response by the network.....	98
	5.3.3.5	Sequencing of subsequent start DTMF requests by the Mobile Station	98
5.3.4		Support of Dual Services	99
	5.3.4.1	Service Description.....	99
	5.3.4.2	Call establishment.....	99
	5.3.4.2.1	Mobile Originating Establishment.....	100
	5.3.4.2.2	Mobile Terminating Establishment.....	101
	5.3.4.3	Changing the Call Mode	101
	5.3.4.3.1	Initiation of in-call modification	101
	5.3.4.3.2	Successful completion of in-call modification	102
	5.3.4.3.3	Change of the channel configuration... ..	102
	5.3.4.3.4	Failure of in-call modification	102
	5.3.4.4	Abnormal procedures.....	103
5.4		Call clearing.....	104
	5.4.1	Terminology	104
	5.4.2	Exception conditions	104
	5.4.3	Clearing initiated by the Mobile Station.....	104
	5.4.3.1	Initiation of call clearing.....	104
	5.4.3.2	Receipt of a DISCONNECT message from the Mobile Station.....	105
	5.4.3.3	Receipt of a RELEASE message from the network.....	105
	5.4.3.4	Receipt of a RELEASE COMPLETE message from the Mobile Station	105
	5.4.3.5	Abnormal cases.....	105
5.4.4		Clearing initiated by the network.....	105

	5.4.4.1	Clearing when tones/announcements provided	105
	5.4.4.1.1	Receipt of a DISCONNECT message with progress indicator #8 from the network	106
	5.4.4.1.2	Expiry of timer T306	106
	5.4.4.2	Clearing when tones/announcements not provided	106
	5.4.4.2.1	Receipt of a DISCONNECT message without progress indicator or with progress indicator different from #8 from the network	106
	5.4.4.2.2	Receipt of a RELEASE message from the Mobile Station	106
	5.4.4.2.3	Abnormal cases	106
	5.4.4.3	Completion of clearing	106
	5.4.4.3.1	Abnormal cases	107
	5.4.5	Clear collision	107
5.5		Miscellaneous procedures	107
	5.5.1	In-band tones and announcements	107
	5.5.2	Call collisions	107
	5.5.3	Status procedures	108
	5.5.3.1	Status enquiry procedure	108
	5.5.3.2	Reception of a STATUS message by a CC entity	108
	5.5.3.2.1	STATUS message with incompatible state	108
	5.5.3.2.2	STATUS message with compatible state	108
	5.5.4	Call re-establishment, mobile station side	109
	5.5.4.1	Indication from the mobility management sublayer	109
	5.5.4.2	Reaction of call control	109
	5.5.4.3	Completion of re-establishment	109
	5.5.4.4	Unsuccessful outcome	109
	5.5.5	Call re-establishment, network side	109
	5.5.5.1	State alignment	109
	5.5.6	Progress	110
6		Support of packet services	111
7		Examples of structured procedures	112
	7.1	General	112
	7.1.1	Paging request	112
	7.1.2	Immediate assignment	113
	7.1.3	Service request and contention resolution	113
	7.1.4	Authentication	113
	7.1.5	Ciphering mode setting	114
	7.1.6	Transaction phase	114
	7.1.6.1	Transmission mode change	114
	7.1.7	Channel release	114
	7.2	Abnormal cases	115
	7.3	Selected examples	115
	7.3.1	Location updating	116
	7.3.2	Mobile originating call establishment	117
	7.3.3	Mobile terminating call establishment	121
	7.3.4	Call clearing	124
	7.3.5	DTMF protocol control	126
	7.3.6	Handover	127
	7.3.7	In-call modification	130
	7.3.8	Call re-establishment	131
8		Handling of unknown, unforeseen, and erroneous protocol data	132
	8.1	General	132

8.2	Message too short	132
8.3	Unknown or unforeseen transaction identifier	133
8.4	Unknown or unforeseen message type	133
8.5	Non-semantic mandatory information element errors	134
8.5.1	Radio resource management	134
8.5.2	Mobility management	134
8.5.3	Call control	135
8.6	Unknown and unforeseen IEs in the non-imperative message part	135
8.6.1	IEs unknown in the message	135
8.6.2	Out of sequence IEs	135
8.6.3	Repeated IEs	135
8.7	Non-imperative message part errors	135
8.7.1	Syntactically incorrect optional IEs	135
8.7.2	Conditional IE errors	136
8.8	Messages with semantically incorrect contents	136
9	MESSAGE FUNCTIONAL DEFINITIONS AND CONTENTS	137
9.1	Messages for Radio Resources management	138
9.1.1	Additional assignment	140
9.1.1.1	Mobile Allocation	140
9.1.1.2	Starting Time	140
9.1.2	Assignment command	141
9.1.2.1	Mode of the First Channel	142
9.1.2.2	Description of the Second Channel	142
9.1.2.3	Mode of the Second Channel	142
9.1.2.4	Mobile Allocation and Frequency List, after the starting time	142
9.1.2.5	Starting Time	142
9.1.2.6	Reference cell frequency list	143
9.1.2.7	Cell Channel Description	143
9.1.2.8	Cipher Mode Setting	143
9.1.3	Assignment complete	144
9.1.4	Assignment failure	144
9.1.5	Channel mode modify	145
9.1.5.1	Channel Description	145
9.1.6	Channel mode modify acknowledge	145
9.1.7	Channel release	146
9.1.8	Channel request	147
9.1.9	Ciphering mode command	148
9.1.10	Ciphering mode complete	149
9.1.10.1	Mobile Equipment Identity	149
9.1.11	Classmark change	149
9.1.11.1	Additional Mobile Station Classmark Information	150
9.1.12	Classmark enquiry	150
9.1.13	Frequency redefinition	151
9.1.13.1	Cell Channel Description	151
9.1.14	Handover access	152
9.1.15	Handover command	153
9.1.15.1	Synchronization Indication	154
9.1.15.2	Mode of the First Channel	154
9.1.15.3	Description of the Second Channel	154
9.1.15.4	Mode of the Second Channel	154
9.1.15.5	Frequency Channel Sequence, Frequency List, Frequency short list and Mobile Allocation, after time	155
9.1.15.6	Starting Time	155
9.1.15.7	Reference cell frequency list	156
9.1.15.8	Real Time Difference	156
9.1.15.9	Timing Advance	156
9.1.15.10	Cipher Mode Setting	156
9.1.16	Handover complete	156

	9.1.16.1	Mobile Observed Time Difference	156
9.1.17		Handover failure	157
9.1.18		Immediate assignment	158
	9.1.18.1	Mobile Allocation	158
	9.1.18.2	Starting Time	158
	9.1.18.3	IA Rest Octets (Frequency parameters, before time)	159
9.1.19		Immediate assignment extended	159
	9.1.19.1	Unnecessary IEs	160
	9.1.19.2	Mobile Allocation	160
	9.1.19.3	Starting Time	160
	9.1.19.4	Maximum message length	160
	9.1.19.5	IAX Rest Octets	160
9.1.20		Immediate assignment reject	161
	9.1.20.1	Use of the indexes	161
	9.1.20.2	Filling of the message	162
9.1.21		Measurement report	162
9.1.22		Paging request type 1	163
	9.1.22.1	Unnecessary IE	164
	9.1.22.2	Channels needed for Mobiles 1 and 2	164
	9.1.22.3	Mobile Identities	164
	9.1.22.4	P1 Rest Octets	164
9.1.23		Paging request type 2	164
	9.1.23.1	Channels needed for Mobiles 1 and 2	165
	9.1.23.2	Mobile Identity 3	165
	9.1.23.3	P2 Rest Octets	165
9.1.24		Paging request type 3	165
	9.1.24.1	Channels needed for Mobiles 1 and 2	166
	9.1.24.2	P3 Rest Octets	166
9.1.25		Paging response	166
9.1.26		Partial release	167
	9.1.26.1	Channel Description	167
9.1.27		Partial release complete	167
9.1.28		Physical information	168
9.1.29		RR Status	168
9.1.30		Synchronization channel information	169
9.1.31		System information Type 1	170
9.1.32		System information type 2	171
9.1.33		System information type 2bis	172
9.1.34		System information type 3	173
9.1.35		System information type 4	174
	9.1.35.1	CBCH Channel description	175
	9.1.35.2	CBCH Mobile Allocation	175
	9.1.35.3	SI 4 Rest Octets	175
9.1.36		System information type 5	175
9.1.37		System information type 5bis	176
9.1.38		System information type 6	177
	9.1.38.1	Cell Identity	177
	9.1.38.2	Location Area Identification	177
	9.1.38.3	Cell Options	177
	9.1.38.4	NCC permitted	177
9.1.39		System information type 7	178
9.1.40		System information type 8	178
9.2		Messages for mobility management	179
	9.2.1	Authentication reject	180
	9.2.2	Authentication request	180
	9.2.3	Authentication response	181
	9.2.4	CM Re-establishment request	181
	9.2.4.1	Location area identification	182
	9.2.5	CM service accept	182
	9.2.6	CM service reject	182

ETS 300 557: February 1995 (GSM 04.08 version 4.10.1)

9.2.7	CM service abort.....	183	
9.2.8	Abort.....	183	
9.2.9	CM service request	184	
9.2.10	Identity request.....	185	
9.2.11	Identity response.....	185	
9.2.12	IMSI detach indication	186	
9.2.13	Location updating accept	186	
	9.2.13.1 Follow on proceed	187	
9.2.14	Location updating reject.....	187	
9.2.15	Location updating request	188	
	9.2.15.1 Location area identification	188	
9.2.16	MM Status.....	189	
9.2.17	TMSI reallocation command.....	189	
9.2.18	TMSI reallocation complete.....	190	
9.3	Messages for circuit-switched call control	191	
9.3.1	Alerting.....	192	
	9.3.1.1 Alerting (network to mobile station direction).....	192	
		9.3.1.1.1 Facility.....	192
		9.3.1.1.2 Progress indicator	192
		9.3.1.1.3 User-user	192
	9.3.1.2 Alerting (mobile station to network direction).....	193	
		9.3.1.2.1 Facility.....	193
		9.3.1.2.2 User-user	193
		9.3.1.2.3 SS version	193
9.3.2	Call confirmed.....	194	
	9.3.2.1 Repeat indicator	194	
	9.3.2.2 Bearer capability 1 and bearer capability 2	194	
	9.3.2.3 Cause.....	195	
9.3.3	Call proceeding.....	195	
	9.3.3.1 Repeat indicator	195	
	9.3.3.2 Bearer capability 1 and bearer capability 2	195	
	9.3.3.3 Facility.....	195	
	9.3.3.4 Progress Indicator.....	196	
9.3.4	Congestion control.....	196	
	9.3.4.1 Cause.....	196	
9.3.5	Connect.....	197	
	9.3.5.1 Connect (network to mobile station direction).....	197	
		9.3.5.1.1 Facility.....	197
		9.3.5.1.2 Progress indicator	197
		9.3.5.1.3 User-user	197
	9.3.5.2 Connect (mobile station to network direction).....	198	
		9.3.5.2.1 Facility.....	198
		9.3.5.2.2 User-user	198
		9.3.5.2.3 SS version	198
9.3.6	Connect acknowledge.....	199	
9.3.7	Disconnect.....	199	
	9.3.7.1 Disconnect (network to mobile station direction).....	199	
		9.3.7.1.1 Facility.....	200
		9.3.7.1.2 Progress indicator	200
		9.3.7.1.3 User-user	200
	9.3.7.2 Disconnect (mobile station to network direction).....	200	
		9.3.7.2.1 Facility.....	200
		9.3.7.2.2 User-user	200
		9.3.7.2.3 SS version	201
9.3.8	Emergency setup	201	
	9.3.8.1 Bearer capability	201	
9.3.9	Facility.....	202	
	9.3.9.1 Facility (network to mobile station direction).....	202	
	9.3.9.2 Facility (mobile station to network direction).....	203	
		9.3.9.2.1 SS version	203

9.3.10	Hold	204
9.3.11	Hold Acknowledge	204
9.3.12	Hold Reject	205
9.3.13	Modify	206
9.3.13.1	Low layer compatibility	206
9.3.13.2	High layer compatibility	206
9.3.13.3	Reverse call setup direction	206
9.3.14	Modify complete	207
9.3.14.1	Low layer compatibility	207
9.3.14.2	High layer compatibility	207
9.3.14.3	Reverse call setup direction	207
9.3.15	Modify reject	208
9.3.15.1	Low layer compatibility	208
9.3.15.2	High layer compatibility	208
9.3.16	Notify	209
9.3.17	Progress	209
9.3.17.1	User-user	210
9.3.18	Release	210
9.3.18.1	Release (network to mobile station direction)	210
9.3.18.1.1	Cause	210
9.3.18.1.2	Second cause	210
9.3.18.1.3	Facility	210
9.3.18.1.4	User-user	211
9.3.18.2	Release (mobile station to network direction)	211
9.3.18.2.1	Cause	211
9.3.18.2.2	Second cause	211
9.3.18.2.3	Facility	211
9.3.18.2.4	User-user	212
9.3.18.2.5	SS version	212
9.3.19	Release complete	212
9.3.19.1	Release complete (network to mobile station direction)	212
9.3.19.1.1	Cause	212
9.3.19.1.2	Facility	212
9.3.19.1.3	User-user	213
9.3.19.2	Release complete (mobile station to network direction)	213
9.3.19.2.1	Cause	213
9.3.19.2.2	Facility	213
9.3.19.2.3	User-user	213
9.3.19.2.4	SS version	214
9.3.20	Retrieve	214
9.3.21	Retrieve Acknowledge	214
9.3.22	Retrieve Reject	215
9.3.23	Setup	216
9.3.23.1	Setup (mobile terminated call establishment)	216
9.3.23.1.1	BC repeat indicator	217
9.3.23.1.2	Bearer capability 1 and bearer capability 2	217
9.3.23.1.3	Facility	217
9.3.23.1.4	Progress indicator	217
9.3.23.1.5	Called party subaddress	217
9.3.23.1.6	LLC repeat indicator	217
9.3.23.1.7	Low layer compatibility I	217
9.3.23.1.8	Low layer compatibility II	217
9.3.23.1.9	HLC repeat indicator	218
9.3.23.1.10	High layer compatibility i	218
9.3.23.1.11	High layer compatibility ii	218
9.3.23.1.12	User-user	218
9.3.23.2	Setup (mobile originating call establishment)	219
9.3.23.2.1	BC repeat indicator	220
9.3.23.2.2	Facility	220

ETS 300 557: February 1995 (GSM 04.08 version 4.10.1)

	9.3.23.2.3	LLC repeat indicator.....	220
	9.3.23.2.4	Low layer compatibility I	220
	9.3.23.2.5	Low layer compatibility II	220
	9.3.23.2.6	HLC repeat indicator.....	220
	9.3.23.2.7	High layer compatibility i.....	220
	9.3.23.2.8	High layer compatibility ii.....	220
	9.3.23.2.9	User-user	221
	9.3.23.2.10	SS version	221
	9.3.23.2.11	CLIR suppression.....	221
	9.3.23.2.12	CLIR invocation.....	221
9.3.24	Start DTMF		221
9.3.25	Start DTMF Acknowledge.....		222
	9.3.25.1	Keypad facility.....	222
9.3.26	Start DTMF reject		222
9.3.27	Status		223
	9.3.27.1	Auxiliary states	223
9.3.28	Status enquiry.....		223
9.3.29	Stop DTMF.....		224
9.3.30	Stop DTMF acknowledge.....		224
9.3.31	User information.....		225
	9.3.31.1	User-user.....	225
	9.3.31.2	More data.....	225
10	General message format and information elements coding.....		226
10.1	Overview.....		226
10.2	Protocol Discriminator		226
10.3	Skip indicator and transaction identifier.....		226
	10.3.1	Skip indicator	226
	10.3.2	Transaction identifier.....	227
10.4	Message Type.....		227
10.5	Other information elements.....		230
	10.5.1	Common information elements.....	232
		10.5.1.1	Cell identity.....
		10.5.1.2	Ciphering Key Sequence Number.....
		10.5.1.3	Location Area Identification
		10.5.1.4	Mobile Identity.....
		10.5.1.5	Mobile Station Classmark 1
		10.5.1.6	Mobile Station Classmark 2.....
		10.5.1.7	Mobile Station Classmark 3.....
		10.5.1.8	Spare Half Octet
	10.5.2	Radio Resource management information elements.....	244
		10.5.2.1a	BA Range
		10.5.2.1b	Cell Channel Description.....
			10.5.2.1b.1
			10.5.2.1b.2
			10.5.2.1b.3
			10.5.2.1b.4
			10.5.2.1b.5
			10.5.2.1b.6
			10.5.2.1b.7
		10.5.2.2	Cell Description
		10.5.2.3	Cell Options
		10.5.2.4	Cell Selection Parameters
		10.5.2.5	Channel Description
		10.5.2.6	Channel Mode
		10.5.2.7	Channel Mode 2
		10.5.2.8	Channel Needed
		10.5.2.9	Cipher Mode Setting.....
		10.5.2.10	Cipher Response.....
		10.5.2.11	Control Channel Description.....