



**Universal Mobile Telecommunications System (UMTS);
LTE;
Non-Access-Stratum (NAS)
protocol for Evolved Packet System (EPS);
Stage 3
(3GPP TS 24.301 version 10.14.0 Release 10)**



ReferenceRTS/TSGC-0124301vae0

Keywords

LTE,UMTS

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 - Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

The present document can be downloaded from:

<http://www.etsi.org>

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the only prevailing document is the print of the Portable Document Format (PDF) version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

<http://portal.etsi.org/tb/status/status.asp>

If you find errors in the present document, please send your comment to one of the following services:

http://portal.etsi.org/chaicor/ETSI_support.asp

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2014.

All rights reserved.

DECTTM, PLUGTESTSTM, UMTSTM and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members.
3GPPTM and LTETM are Trade Marks of ETSI registered for the benefit of its Members and
of the 3GPP Organizational Partners.
GSM[®] and the GSM logo are Trade Marks registered and owned by the GSM Association.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: *"Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards"*, which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<http://ipr.etsi.org>).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under <http://webapp.etsi.org/key/queryform.asp>.

Modal verbs terminology

In the present document "**shall**", "**shall not**", "**should**", "**should not**", "**may**", "**may not**", "**need**", "**need not**", "**will**", "**will not**", "**can**" and "**cannot**" are to be interpreted as described in clause 3.2 of the [ETSI Drafting Rules](#) (Verbal forms for the expression of provisions).

"**must**" and "**must not**" are **NOT** allowed in ETSI deliverables except when used in direct citation.

Contents

Intellectual Property Rights	2
Foreword.....	2
Modal verbs terminology.....	2
Foreword.....	16
1 Scope	17
2 References	17
3 Definitions and abbreviations.....	19
3.1 Definitions	19
3.2 Abbreviations	23
4 General	24
4.1 Overview	24
4.2 Linkage between the protocols for EPS mobility management and EPS session management	24
4.2.A Handling of NAS signalling low priority indication	24
4.3 UE mode of operation	25
4.3.1 General.....	25
4.3.2 Change of UE mode of operation	25
4.3.2.1 General.....	25
4.3.2.2 Change of UE's usage setting.....	28
4.3.2.3 Change of voice domain preference for E-UTRAN.....	29
4.3.2.4 Change of IMS registration status.....	30
4.3.2.5 Change of configuration regarding the use of SMS.....	31
4.4 NAS security	32
4.4.1 General.....	32
4.4.2 Handling of EPS security contexts	32
4.4.2.1 General.....	32
4.4.2.2 Establishment of a mapped EPS security context during intersystem handover	33
4.4.2.3 Establishment of secure exchange of NAS messages	34
4.4.2.4 Change of security keys	35
4.4.3 Handling of NAS COUNT and NAS sequence number	35
4.4.3.1 General.....	35
4.4.3.2 Replay protection	36
4.4.3.3 Integrity protection and verification.....	36
4.4.3.4 Ciphering and deciphering.....	36
4.4.3.5 NAS COUNT wrap around.....	36
4.4.4 Integrity protection of NAS signalling messages.....	37
4.4.4.1 General.....	37
4.4.4.2 Integrity checking of NAS signalling messages in the UE	37
4.4.4.3 Integrity checking of NAS signalling messages in the MME	38
4.4.5 Ciphering of NAS signalling messages	39
4.5 Disabling and re-enabling of UE's E-UTRA capability	40
4.6 Applicability of procedures	40
4.6.1 Relay nodes.....	40
5 Elementary procedures for EPS mobility management.....	40
5.1 Overview	40
5.1.1 General.....	40
5.1.2 Types of EMM procedures	41
5.1.3 EMM sublayer states	42
5.1.3.1 General.....	42
5.1.3.2 EMM sublayer states in the UE.....	42
5.1.3.2.1 General	42
5.1.3.2.2 Main states.....	42
5.1.3.2.2.1 EMM-NULL	42

5.1.3.2.2.2	EMM-DEREGISTERED	42
5.1.3.2.2.3	EMM-REGISTERED-INITIATED	42
5.1.3.2.2.4	EMM-REGISTERED	42
5.1.3.2.2.5	EMM-DEREGISTERED-INITIATED	42
5.1.3.2.2.6	EMM-TRACKING-AREA-UPDATING-INITIATED	43
5.1.3.2.2.7	EMM-SERVICE-REQUEST-INITIATED	43
5.1.3.2.3	Substates of state EMM-DEREGISTERED	43
5.1.3.2.3.1	General	43
5.1.3.2.3.2	EMM-DEREGISTERED.NORMAL-SERVICE	43
5.1.3.2.3.3	EMM-DEREGISTERED.LIMITED-SERVICE	44
5.1.3.2.3.4	EMM-DEREGISTERED.ATTEMPTING-TO-ATTACH	44
5.1.3.2.3.5	EMM-DEREGISTERED.PLMN-SEARCH	44
5.1.3.2.3.6	EMM-DEREGISTERED.NO-IMSI	44
5.1.3.2.3.7	EMM-DEREGISTERED.ATTACH-NEEDED	44
5.1.3.2.3.8	EMM-DEREGISTERED.NO-CELL-AVAILABLE	44
5.1.3.2.4	Substates of state EMM-REGISTERED	44
5.1.3.2.4.1	General	44
5.1.3.2.4.2	EMM-REGISTERED.NORMAL-SERVICE	44
5.1.3.2.4.3	EMM-REGISTERED.ATTEMPTING-TO-UPDATE	44
5.1.3.2.4.4	EMM-REGISTERED.LIMITED-SERVICE	44
5.1.3.2.4.5	EMM-REGISTERED.PLMN-SEARCH	44
5.1.3.2.4.6	EMM-REGISTERED.UPDATE-NEEDED	45
5.1.3.2.4.7	EMM-REGISTERED.NO-CELL-AVAILABLE	45
5.1.3.2.4.8	EMM-REGISTERED.ATTEMPTING-TO-UPDATE-MM	45
5.1.3.2.4.9	EMM-REGISTERED.IMSI-DETACH-INITIATED	45
5.1.3.3	EPS update status	45
5.1.3.4	EMM sublayer states in the MME	45
5.1.3.4.1	EMM-DEREGISTERED	45
5.1.3.4.2	EMM-COMMON-PROCEDURE-INITIATED	46
5.1.3.4.3	EMM-REGISTERED	46
5.1.3.4.4	EMM-DEREGISTERED-INITIATED	46
5.1.4	Coordination between EMM and GMM	46
5.1.5	Coordination between EMM and MM	47
5.2	Behaviour of the UE in state EMM-DEREGISTERED and state EMM-REGISTERED	47
5.2.1	General	47
5.2.2	UE behaviour in state EMM-DEREGISTERED	47
5.2.2.1	General	47
5.2.2.2	Primary substate selection	47
5.2.2.2.1	Selection of the substate after power on	47
5.2.2.3	Detailed description of UE behaviour in state EMM-DEREGISTERED	48
5.2.2.3.1	NORMAL-SERVICE	48
5.2.2.3.2	LIMITED-SERVICE	48
5.2.2.3.3	ATTEMPTING-TO-ATTACH	48
5.2.2.3.4	PLMN-SEARCH	48
5.2.2.3.5	NO-IMSI	48
5.2.2.3.6	ATTACH-NEEDED	48
5.2.2.3.7	NO-CELL-AVAILABLE	49
5.2.2.4	Substate when back to state EMM-DEREGISTERED from another EMM state	49
5.2.3	UE behaviour in state EMM-REGISTERED	49
5.2.3.1	General	49
5.2.3.2	Detailed description of UE behaviour in state EMM-REGISTERED	49
5.2.3.2.1	NORMAL-SERVICE	49
5.2.3.2.2	ATTEMPTING-TO-UPDATE	50
5.2.3.2.3	LIMITED-SERVICE	50
5.2.3.2.4	PLMN-SEARCH	50
5.2.3.2.5	UPDATE-NEEDED	50
5.2.3.2.6	NO-CELL-AVAILABLE	50
5.2.3.2.7	ATTEMPTING-TO-UPDATE-MM	50
5.2.3.2.8	IMSI-DETACH-INITIATED	51
5.3	General on elementary EMM procedures	51
5.3.1	EMM modes and NAS signalling connection	51
5.3.1.1	Establishment of the NAS signalling connection	51

5.3.1.2	Release of the NAS signalling connection	52
5.3.2	Lists of forbidden tracking areas.....	52
5.3.3	List of forbidden PLMNs for attach in S101 mode.....	53
5.3.4	Equivalent PLMNs list.....	53
5.3.5	Handling of the periodic tracking area update timer and mobile reachable timer (S1 mode only).....	53
5.3.6	Handling of timer T3402	54
5.3.7	Handling of the Local Emergency Numbers List	54
5.3.7a	Specific requirements for UE configured to use timer T3245	55
5.3.8	Abnormal cases in the UE	55
5.3.9	Handling of NAS level mobility management congestion control	55
5.4	EMM common procedures	56
5.4.1	GUTI reallocation procedure	56
5.4.1.1	General	56
5.4.1.2	GUTI reallocation initiation by the network	56
5.4.1.3	GUTI reallocation completion by the UE	57
5.4.1.4	GUTI reallocation completion by the network.....	57
5.4.1.5	Abnormal cases in the UE.....	57
5.4.1.6	Abnormal cases on the network side	57
5.4.2	Authentication procedure.....	58
5.4.2.1	General	58
5.4.2.2	Authentication initiation by the network.....	59
5.4.2.3	Authentication response by the UE	59
5.4.2.4	Authentication completion by the network	60
5.4.2.5	Authentication not accepted by the network	60
5.4.2.6	Authentication not accepted by the UE.....	61
5.4.2.7	Abnormal cases	61
5.4.3	Security mode control procedure	65
5.4.3.1	General	65
5.4.3.2	NAS security mode control initiation by the network.....	65
5.4.3.3	NAS security mode command accepted by the UE.....	67
5.4.3.4	NAS security mode control completion by the network	68
5.4.3.5	NAS security mode command not accepted by the UE.....	68
5.4.3.6	Abnormal cases in the UE.....	68
5.4.3.7	Abnormal cases on the network side	69
5.4.4	Identification procedure.....	69
5.4.4.1	General	69
5.4.4.2	Identification initiation by the network.....	70
5.4.4.3	Identification response by the UE	70
5.4.4.4	Identification completion by the network	70
5.4.4.5	Abnormal cases in the UE.....	70
5.4.4.6	Abnormal cases on the network side	70
5.4.5	EMM information procedure	71
5.4.5.1	General	71
5.4.5.2	EMM information procedure initiation by the network	72
5.4.5.3	EMM information procedure in the UE	72
5.4.5.4	Abnormal cases on the network side	72
5.5	EMM specific procedures	72
5.5.1	Attach procedure.....	72
5.5.1.1	General	72
5.5.1.2	Attach procedure for EPS services.....	73
5.5.1.2.1	General	73
5.5.1.2.2	Attach procedure initiation	73
5.5.1.2.3	EMM common procedure initiation	75
5.5.1.2.4	Attach accepted by the network.....	75
5.5.1.2.5	Attach not accepted by the network.....	77
5.5.1.2.5A	Attach for emergency bearer services not accepted by the network.....	80
5.5.1.2.5B	Attach for initiating a PDN connection for emergency bearer services not accepted by the network.....	80
5.5.1.2.6	Abnormal cases in the UE	81
5.5.1.2.7	Abnormal cases on the network side	82
5.5.1.3	Combined attach procedure for EPS services and non-EPS services (S1 mode only)	84
5.5.1.3.1	General	84

5.5.1.3.2	Combined attach procedure initiation.....	84
5.5.1.3.3	EMM common procedure initiation	84
5.5.1.3.4	Combined attach accepted by the network	84
5.5.1.3.4.1	General.....	84
5.5.1.3.4.2	Combined attach successful	84
5.5.1.3.4.3	Combined attach successful for EPS services only.....	85
5.5.1.3.5	Combined attach not accepted by the network	86
5.5.1.3.6	Abnormal cases in the UE	89
5.5.1.3.7	Abnormal cases on the network side	90
5.5.2	Detach procedure	90
5.5.2.1	General	90
5.5.2.2	UE initiated detach procedure	91
5.5.2.2.1	UE initiated detach procedure initiation.....	91
5.5.2.2.2	UE initiated detach procedure completion for EPS services only	92
5.5.2.2.3	UE initiated combined detach procedure completion.....	92
5.5.2.2.4	Abnormal cases in the UE	92
5.5.2.2.5	Abnormal cases on the network side	94
5.5.2.3	Network initiated detach procedure	94
5.5.2.3.1	Network initiated detach procedure initiation	94
5.5.2.3.2	Network initiated detach procedure completion by the UE	95
5.5.2.3.3	Network initiated detach procedure completion by the network	98
5.5.2.3.4	Abnormal cases in the UE	98
5.5.2.3.5	Abnormal cases on the network side	98
5.5.3	Tracking area updating procedure (S1 mode only).....	99
5.5.3.1	General	99
5.5.3.2	Normal and periodic tracking area updating procedure	101
5.5.3.2.1	General	101
5.5.3.2.2	Normal and periodic tracking area updating procedure initiation	101
5.5.3.2.3	EMM common procedure initiation	103
5.5.3.2.4	Normal and periodic tracking area updating procedure accepted by the network	104
5.5.3.2.5	Normal and periodic tracking area updating procedure not accepted by the network	107
5.5.3.2.5A	Tracking area updating procedure for initiating a PDN connection for emergency bearer services not accepted by the network	111
5.5.3.2.6	Abnormal cases in the UE	111
5.5.3.2.7	Abnormal cases on the network side	113
5.5.3.3	Combined tracking area updating procedure.....	114
5.5.3.3.1	General	114
5.5.3.3.2	Combined tracking area updating procedure initiation.....	114
5.5.3.3.3	EMM common procedure initiation	115
5.5.3.3.4	Combined tracking area updating procedure accepted by the network	116
5.5.3.3.4.1	General.....	116
5.5.3.3.4.2	Combined tracking area updating successful	116
5.5.3.3.4.3	Combined tracking area updating successful for EPS services only.....	117
5.5.3.3.5	Combined tracking area updating procedure not accepted by the network	118
5.5.3.3.6	Abnormal cases in the UE	122
5.5.3.3.7	Abnormal cases on the network side	123
5.6	EMM connection management procedures (S1 mode only)	123
5.6.1	Service request procedure	123
5.6.1.1	General	123
5.6.1.2	Service request procedure initiation	125
5.6.1.3	EMM common procedure initiation	126
5.6.1.4	Service request procedure accepted by the network.....	126
5.6.1.5	Service request procedure not accepted by the network.....	127
5.6.1.5A	Service request procedure for initiating a PDN connection for emergency bearer services not accepted by the network.....	132
5.6.1.6	Abnormal cases in the UE.....	132
5.6.1.7	Abnormal cases on the network side	135
5.6.2	Paging procedure	136
5.6.2.1	General	136
5.6.2.2	Paging for EPS services	137
5.6.2.2.1	Paging for EPS services through E-UTRAN using S-TMSI	137
5.6.2.2.2	Paging for EPS services through E-UTRAN using IMSI.....	137

5.6.2.3	Paging for CS fallback to A/Gb or Iu mode	138
5.6.2.3.1	General	138
5.6.2.3.2	Abnormal cases in the UE	139
5.6.2.3.3	Void	139
5.6.2.4	Paging for SMS	139
5.6.3	Transport of NAS messages procedure	139
5.6.3.1	General	139
5.6.3.2	UE initiated transport of NAS messages	139
5.6.3.3	Network initiated transport of NAS messages	139
5.6.3.4	Abnormal cases in the UE	140
5.6.3.5	Abnormal cases on the network side	140
5.6.4	Generic transport of NAS messages procedure	140
5.6.4.1	General	140
5.6.4.2	UE initiated generic transport of NAS messages	140
5.6.4.3	Network initiated transport of NAS messages	140
5.6.4.4	Abnormal cases in the UE	140
5.6.4.5	Abnormal cases on the network side	141
5.7	Reception of an EMM STATUS message by an EMM entity	141
6	Elementary procedures for EPS session management	141
6.1	Overview	141
6.1.1	General	141
6.1.2	Types of ESM procedures	142
6.1.3	ESM sublayer states	143
6.1.3.1	General	143
6.1.3.2	ESM sublayer states in the UE	143
6.1.3.2.1	BEARER CONTEXT INACTIVE	143
6.1.3.2.2	BEARER CONTEXT ACTIVE	143
6.1.3.2.3	PROCEDURE TRANSACTION INACTIVE	143
6.1.3.2.4	PROCEDURE TRANSACTION PENDING	143
6.1.3.3	ESM sublayer states in the MME	144
6.1.3.3.1	BEARER CONTEXT INACTIVE	144
6.1.3.3.2	BEARER CONTEXT ACTIVE PENDING	144
6.1.3.3.3	BEARER CONTEXT ACTIVE	144
6.1.3.3.4	BEARER CONTEXT INACTIVE PENDING	144
6.1.3.3.5	BEARER CONTEXT MODIFY PENDING	144
6.1.3.3.6	PROCEDURE TRANSACTION INACTIVE	145
6.1.3.3.7	PROCEDURE TRANSACTION PENDING	145
6.1.4	Coordination between ESM and SM	145
6.1.5	Coordination between ESM and EMM for supporting ISR	146
6.2	IP address allocation	146
6.2.1	General	146
6.2.2	IP address allocation via NAS signalling	147
6.3	General on elementary ESM procedures	148
6.3.1	Services provided by lower layers	148
6.3.2	Principles of address handling for ESM procedures	148
6.3.3	Abnormal cases in the UE	149
6.3.4	Abnormal cases in the network	150
6.3.5	Handling of APN based congestion control	150
6.4	Network initiated ESM procedures	150
6.4.1	Default EPS bearer context activation procedure	150
6.4.1.1	General	150
6.4.1.2	Default EPS bearer context activation initiated by the network	150
6.4.1.3	Default EPS bearer context activation accepted by the UE	151
6.4.1.4	Default EPS bearer context activation not accepted by the UE	151
6.4.1.5	Abnormal cases in the UE	151
6.4.1.6	Abnormal cases on the network side	152
6.4.2	Dedicated EPS bearer context activation procedure	152
6.4.2.1	General	152
6.4.2.2	Dedicated EPS bearer context activation initiated by the network	152
6.4.2.3	Dedicated EPS bearer context activation accepted by the UE	153
6.4.2.4	Dedicated EPS bearer context activation not accepted by the UE	153

6.4.2.5	Abnormal cases in the UE	154
6.4.2.6	Abnormal cases on the network side	155
6.4.3	EPS bearer context modification procedure	155
6.4.3.1	General	155
6.4.3.2	EPS bearer context modification initiated by the network	155
6.4.3.3	EPS bearer context modification accepted by the UE	156
6.4.3.4	EPS bearer context modification not accepted by the UE	156
6.4.3.5	Abnormal cases in the UE	158
6.4.3.6	Abnormal cases on the network side	158
6.4.4	EPS bearer context deactivation procedure	159
6.4.4.1	General	159
6.4.4.2	EPS bearer context deactivation initiated by the network	159
6.4.4.3	EPS bearer context deactivation accepted by the UE	160
6.4.4.4	Abnormal cases in the UE	161
6.4.4.5	Abnormal cases on the network side	161
6.4.4.6	Local EPS bearer context deactivation without ESM signalling	161
6.5	UE requested ESM procedures	162
6.5.1	UE requested PDN connectivity procedure	162
6.5.1.1	General	162
6.5.1.2	UE requested PDN connectivity procedure initiation	162
6.5.1.3	UE requested PDN connectivity procedure accepted by the network	163
6.5.1.4	UE requested PDN connectivity procedure not accepted by the network	164
6.5.1.5	Abnormal cases in the UE	167
6.5.1.6	Abnormal cases on the network side	167
6.5.2	UE requested PDN disconnect procedure	168
6.5.2.1	General	168
6.5.2.2	UE requested PDN disconnection procedure initiation	168
6.5.2.3	UE requested PDN disconnection procedure accepted by the network	168
6.5.2.4	UE requested PDN disconnection procedure not accepted by the network	169
6.5.2.5	Abnormal cases in the UE	169
6.5.2.6	Abnormal cases on the network side	169
6.5.3	UE requested bearer resource allocation procedure	170
6.5.3.1	General	170
6.5.3.2	UE requested bearer resource allocation procedure initiation	170
6.5.3.3	UE requested bearer resource allocation procedure accepted by the network	170
6.5.3.4	UE requested bearer resource allocation procedure not accepted by the network	171
6.5.3.5	Abnormal cases in the UE	173
6.5.3.6	Abnormal cases on the network side	173
6.5.4	UE requested bearer resource modification procedure	173
6.5.4.1	General	173
6.5.4.2	UE requested bearer resource modification procedure initiation	174
6.5.4.3	UE requested bearer resource modification procedure accepted by the network	174
6.5.4.4	UE requested bearer resource modification procedure not accepted by the network	175
6.5.4.5	Abnormal cases in the UE	178
6.5.4.6	Abnormal cases on the network side	178
6.6	Miscellaneous procedures	179
6.6.1	Exchange of protocol configuration options	179
6.6.1.1	General	179
6.6.1.2	ESM information request procedure	179
6.6.1.2.1	General	179
6.6.1.2.2	ESM information request initiated by the network	179
6.6.1.2.3	ESM information request completion by the UE	179
6.6.1.2.4	ESM information request completion by the network	179
6.6.1.2.5	Abnormal cases in the UE	180
6.6.1.2.6	Abnormal cases on the network side	180
6.6.1.3	Exchange of protocol configuration options in other messages	180
6.6.2	Notification procedure	180
6.6.2.1	General	180
6.6.2.2	Notification procedure initiation by the network	180
6.6.2.3	Notification procedure in the UE	180
6.6.2.4	Abnormal cases on the network side	181
6.7	Reception of an ESM STATUS message by an ESM entity	181

7	Handling of unknown, unforeseen, and erroneous protocol data	182
7.1	General	182
7.2	Message too short	182
7.3	Unknown or unforeseen procedure transaction identity or EPS bearer identity	182
7.3.1	Procedure transaction identity	182
7.3.2	EPS bearer identity	184
7.4	Unknown or unforeseen message type	185
7.5	Non-semantical mandatory information element errors	185
7.5.1	Common procedures	185
7.5.2	EPS mobility management	186
7.5.3	EPS session management	186
7.6	Unknown and unforeseen IEs in the non-imperative message part	187
7.6.1	IEs unknown in the message	187
7.6.2	Out of sequence IEs	187
7.6.3	Repeated IEs	187
7.7	Non-imperative message part errors	187
7.7.1	Syntactically incorrect optional IEs	187
7.7.2	Conditional IE errors	187
7.8	Messages with semantically incorrect contents	188
8	Message functional definitions and contents	188
8.1	Overview	188
8.2	EPS mobility management messages	189
8.2.1	Attach accept	189
8.2.1.1	Message definition	189
8.2.1.2	GUTI	190
8.2.1.3	Location area identification	190
8.2.1.4	MS identity	190
8.2.1.5	EMM cause	190
8.2.1.6	T3402 value	190
8.2.1.7	T3423 value	190
8.2.1.8	Equivalent PLMNs	190
8.2.1.9	Emergency number list	190
8.2.1.10	EPS network feature support	190
8.2.1.11	Additional update result	190
8.2.1.12	T3412 extended value	190
8.2.2	Attach complete	190
8.2.3	Attach reject	191
8.2.3.1	Message definition	191
8.2.3.2	ESM message container	191
8.2.3.3	T3346 value	191
8.2.3.4	T3402 value	191
8.2.4	Attach request	192
8.2.4.1	Message definition	192
8.2.4.2	Old P-TMSI signature	193
8.2.4.3	Additional GUTI	193
8.2.4.4	Last visited registered TAI	193
8.2.4.5	DRX parameter	193
8.2.4.6	MS network capability	193
8.2.4.7	Old location area identification	193
8.2.4.8	TMSI status	193
8.2.4.9	Mobile station classmark 2	193
8.2.4.10	Mobile station classmark 3	193
8.2.4.11	Supported Codecs	193
8.2.4.12	Additional update type	193
8.2.4.13	Voice domain preference and UE's usage setting	193
8.2.4.14	Device properties	194
8.2.4.15	Old GUTI type	194
8.2.4.16	MS network feature support	194
8.2.5	Authentication failure	194
8.2.5.1	Message definition	194
8.2.5.2	Authentication failure parameter	194

8.2.6	Authentication reject.....	194
8.2.7	Authentication request.....	195
8.2.8	Authentication response.....	195
8.2.9	CS service notification.....	196
8.2.9.1	Message definition.....	196
8.2.9.2	CLI.....	196
8.2.9.3	SS Code.....	196
8.2.9.4	LCS indicator.....	196
8.2.9.5	LCS client identity.....	196
8.2.10	Detach accept.....	196
8.2.10.1	Detach accept (UE originating detach).....	196
8.2.10.2	Detach accept (UE terminated detach).....	197
8.2.11	Detach request.....	197
8.2.11.1	Detach request (UE originating detach).....	197
8.2.11.2	Detach request (UE terminated detach).....	198
8.2.11.2.1	Message definition.....	198
8.2.11.2.2	EMM cause.....	198
8.2.12	Downlink NAS Transport.....	198
8.2.13	EMM information.....	198
8.2.13.1	Message definition.....	198
8.2.13.2	Full name for network.....	199
8.2.13.3	Short name for network.....	199
8.2.13.4	Local time zone.....	199
8.2.13.5	Universal time and local time zone.....	199
8.2.13.6	Network daylight saving time.....	200
8.2.14	EMM status.....	200
8.2.15	Extended service request.....	200
8.2.15.1	Message definition.....	200
8.2.15.2	CSFB response.....	201
8.2.15.3	EPS bearer context status.....	201
8.2.15.4	Device properties.....	201
8.2.16	GUTI reallocation command.....	201
8.2.16.1	Message definition.....	201
8.2.16.2	TAI list.....	202
8.2.17	GUTI reallocation complete.....	202
8.2.18	Identity request.....	202
8.2.19	Identity response.....	203
8.2.20	Security mode command.....	203
8.2.20.1	Message definition.....	203
8.2.20.2	IMEISV request.....	204
8.2.20.3	Replayed nonce _{UE}	204
8.2.20.4	Nonce _{MME}	204
8.2.21	Security mode complete.....	204
8.2.21.1	Message definition.....	204
8.2.21.2	IMEISV.....	205
8.2.22	Security mode reject.....	205
8.2.23	Security protected NAS message.....	205
8.2.24	Service reject.....	205
8.2.24.1	Message definition.....	205
8.2.24.2	T3442 value.....	206
8.2.24.3	T3346 value.....	206
8.2.25	Service request.....	206
8.2.26	Tracking area update accept.....	206
8.2.26.1	Message definition.....	206
8.2.26.2	T3412 value.....	207
8.2.26.3	GUTI.....	207
8.2.26.4	TAI list.....	207
8.2.26.5	EPS bearer context status.....	208
8.2.26.6	Location area identification.....	208
8.2.26.7	MS identity.....	208
8.2.26.8	EMM cause.....	208
8.2.26.9	T3402 value.....	208

8.2.26.10	T3423 value.....	208
8.2.26.11	Equivalent PLMNs.....	208
8.2.26.12	Emergency number list	208
8.2.26.13	EPS network feature support.....	208
8.2.26.14	Additional EPS result.....	208
8.2.26.15	T3412 extended value	208
8.2.27	Tracking area update complete	208
8.2.28	Tracking area update reject.....	209
8.2.28.1	Message definition	209
8.2.28.2	T3346 value.....	209
8.2.29	Tracking area update request	209
8.2.29.1	Message definition	209
8.2.29.2	Non-current native NAS key set identifier.....	211
8.2.29.3	GPRS ciphering key sequence number	211
8.2.29.4	Old P-TMSI signature.....	211
8.2.29.5	Additional GUTI	211
8.2.29.6	Nonce _{UE}	211
8.2.29.7	UE network capability.....	211
8.2.29.8	Last visited registered TAI.....	211
8.2.29.9	DRX parameter	211
8.2.29.10	UE radio capability information update needed.....	211
8.2.29.11	EPS bearer context status	211
8.2.29.12	MS network capability	211
8.2.29.13	Old location area identification.....	211
8.2.29.14	TMSI status	211
8.2.29.15	Mobile station classmark 2.....	212
8.2.29.16	Mobile station classmark 3.....	212
8.2.29.17	Supported Codecs	212
8.2.29.18	Additional update type	212
8.2.29.19	Voice domain preference and UE's usage setting.....	212
8.2.29.20	Old GUTI type	212
8.2.29.21	Device properties	212
8.2.29.22	MS network feature support.....	212
8.2.30	Uplink NAS Transport.....	212
8.2.31	Downlink generic NAS transport.....	213
8.2.31.1	Message definition	213
8.2.31.2	Additional information.....	213
8.2.32	Uplink generic NAS transport	213
8.2.32.1	Message definition	213
8.2.32.2	Additional information.....	214
8.3	EPS session management messages	214
8.3.1	Activate dedicated EPS bearer context accept.....	214
8.3.1.1	Message definition	214
8.3.1.2	Protocol configuration options	214
8.3.2	Activate dedicated EPS bearer context reject	214
8.3.2.1	Message definition	214
8.3.2.2	Protocol configuration options	215
8.3.3	Activate dedicated EPS bearer context request.....	215
8.3.3.1	Message definition	215
8.3.3.2	Transaction identifier	216
8.3.3.3	Negotiated QoS	216
8.3.3.4	Negotiated LLC SAPI.....	216
8.3.3.5	Radio priority	216
8.3.3.6	Packet flow identifier	216
8.3.3.7	Protocol configuration options	216
8.3.4	Activate default EPS bearer context accept	217
8.3.4.1	Message definition	217
8.3.4.2	Protocol configuration options	217
8.3.5	Activate default EPS bearer context reject	217
8.3.5.1	Message definition	217
8.3.5.2	Protocol configuration options	218
8.3.6	Activate default EPS bearer context request.....	218

8.3.6.1	Message definition	218
8.3.6.2	Transaction identifier	218
8.3.6.3	Negotiated QoS	218
8.3.6.4	Negotiated LLC SAPI	219
8.3.6.5	Radio priority	219
8.3.6.6	Packet flow identifier	219
8.3.6.7	APN-AMBR	219
8.3.6.8	ESM cause	219
8.3.6.9	Protocol configuration options	219
8.3.6.10	Connectivity type	219
8.3.7	Bearer resource allocation reject	219
8.3.7.1	Message definition	219
8.3.7.2	Protocol configuration options	220
8.3.7.3	T3396 value	220
8.3.8	Bearer resource allocation request	220
8.3.8.1	Message definition	220
8.3.8.2	Protocol configuration options	221
8.3.8.3	Device properties	221
8.3.9	Bearer resource modification reject	221
8.3.9.1	Message definition	221
8.3.9.2	Protocol configuration options	222
8.3.9.3	T3396 value	222
8.3.10	Bearer resource modification request	222
8.3.10.1	Message definition	222
8.3.10.2	Required traffic flow QoS	223
8.3.10.3	ESM cause	223
8.3.10.4	Protocol configuration options	223
8.3.10.5	Device properties	223
8.3.11	Deactivate EPS bearer context accept	223
8.3.11.1	Message definition	223
8.3.11.2	Protocol configuration options	224
8.3.12	Deactivate EPS bearer context request	224
8.3.12.1	Message definition	224
8.3.12.2	Protocol configuration options	224
8.3.13	ESM information request	224
8.3.14	ESM information response	225
8.3.14.1	Message definition	225
8.3.14.2	Access point name	225
8.3.14.3	Protocol configuration options	225
8.3.15	ESM status	225
8.3.16	Modify EPS bearer context accept	226
8.3.16.1	Message definition	226
8.3.16.2	Protocol configuration options	226
8.3.17	Modify EPS bearer context reject	226
8.3.17.1	Message definition	226
8.3.17.2	Protocol configuration options	227
8.3.18	Modify EPS bearer context request	227
8.3.18.1	Message definition	227
8.3.18.2	New EPS QoS	228
8.3.18.3	TFT	228
8.3.18.4	New QoS	228
8.3.18.5	Negotiated LLC SAPI	228
8.3.18.6	Radio priority	228
8.3.18.7	Packet flow identifier	228
8.3.18.8	APN-AMBR	229
8.3.18.9	Protocol configuration options	229
8.3.18A	Notification	229
8.3.19	PDN connectivity reject	229
8.3.19.1	Message definition	229
8.3.19.2	Protocol configuration options	230
8.3.19.3	T3396 value	230
8.3.20	PDN connectivity request	230