



SLOVENSKI STANDARD SIST ETS 300 557 E6:2003

01-december-2003

8 [[]HJb]`W] b]`hY`ca i b]_UW`g_]`g]ghYa `fZuU&L`E`GdYWZ]_UW`U`fYhY`d`Ugh]`nU
j a Ygb]_`a cV]`bY[UfUX]Uf] GA `\$('\$, Ł

Digital cellular telecommunications system (Phase 2) (GSM); Mobile radio interface;
Layer 3 specification (GSM 04.08)

iTeh STANDARD PREVIEW
(standards.iteh.ai)

Ta slovenski standard je istoveten z: ^{SIST ETS 300 557 E6:2003} **ETS 300 557 Edition 6**
<https://standards.iteh.ai/catalog/standards/sist/1d8a283-60e5-4652-abd4-9ee37db961c/sist-ets-300-557-e6-2003>

ICS:

33.070.50	Globalni sistem za mobilno telekomunikacijo (GSM)	Global System for Mobile Communication (GSM)
-----------	---	--


SIST ETS 300 557 E6:2003

en

iTeh STANDARD PREVIEW
(standards.iteh.ai)

[SIST ETS 300 557 E6:2003](#)

<https://standards.iteh.ai/catalog/standards/sist/fdf8a283-60e3-4632-abd4-9eef37db961c/sist-ets-300-557-e6-2003>

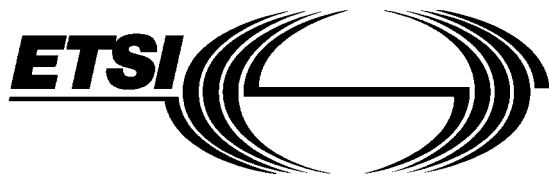

EUROPEAN
TELECOMMUNICATION
STANDARD

ETS 300 557

October 1996

Sixth Edition

Source: ETSI TC-SMG

Reference: RE/SMG-030408PR5

ICS: 33.060.50

Key words: Digital cellular telecommunications system, Global System for Mobile communications (GSM)



**Digital cellular telecommunications system (Phase2);
Mobile radio interface layer 3 specification
(GSM 04.08)**

ETSI

European Telecommunications Standards Institute

ETSI Secretariat

Postal address: F-06921 Sophia Antipolis CEDEX - FRANCE

Office address: 650 Route des Lucioles - Sophia Antipolis - Valbonne - FRANCE

X.400: c=fr, a=atlas, p=etsi, s=secretariat - **Internet:** secretariat@etsi.fr

Tel.: +33 4 92 94 42 00 - Fax: +33 4 93 65 47 16

Copyright Notification: No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 1996. All rights reserved.

iTeh STANDARD PREVIEW (standards.iteh.ai)

[SIST ETS 300 557 E6:2003](https://standards.iteh.ai/catalog/standards/sist/fdf8a283-60e3-4632-abd4-9eef37db961c/sist-ets-300-557-e6-2003)

<https://standards.iteh.ai/catalog/standards/sist/fdf8a283-60e3-4632-abd4-9eef37db961c/sist-ets-300-557-e6-2003>

Contents

Foreword	17
0 Scope	19
0.1 Scope of the Technical Specification	19
0.2 Application to the interface structures	19
0.3 Structure of layer 3 procedures	19
0.4 Test procedures	19
0.5 Use of logical channels	20
0.6 Overview of control procedures	20
0.6.1 List of procedures	20
1 Normative references	22
2 Definitions and abbreviations	26
2.1 Random values	26
2.2 Vocabulary	26
3 Radio Resource management procedures	27
3.1 Overview/General	27
3.1.1 General	27
3.1.2 Services provided to upper layers	27
3.1.2.1 Idle mode	27
3.1.2.2 Establishment and release of a RR connection	27
3.1.2.3 RR connected mode	27
3.1.3 Services required from data link and physical layers	28
3.1.4 Change of dedicated channels	28
3.1.4.1 Change of dedicated channels using SAPI = 0	28
3.1.4.2 Change of dedicated channels using other SAPIs than 0	28
3.1.4.3 Sequenced message transfer operation	28
3.1.4.3.1 Variables and sequence numbers	28
3.1.4.3.2 Procedures for the initiation, transfer execution and termination of the sequenced message transfer operation	29
3.1.5 Procedure for Service Request and Contention Resolution	30
3.2 Idle mode procedures	30
3.2.1 Mobile station side	30
3.2.2 Network side	31
3.2.2.1 System information broadcasting	31
3.2.2.2 Paging	31
3.3 RR connection establishment	32
3.3.1 RR connection establishment initiated by the mobile station: immediate assignment procedure	32
3.3.1.1 Permission to access the network	32
3.3.1.2 Initiation of the immediate assignment procedure	32
3.3.1.3 Answer from the network	33
3.3.1.3.1 On receipt of a CHANNEL REQUEST message	33
3.3.1.3.2 Assignment rejection	34
3.3.1.4 Assignment completion	35
3.3.1.5 Abnormal cases	35
3.3.2 Paging procedure	36
3.3.2.1 Paging initiation by the network	36
3.3.2.2 Paging response	37

	3.3.2.3	Abnormal cases	37			
3.4	RR connection transfer phase.....		38			
	3.4.1	SACCH procedures.....	38			
		3.4.1.1	General.....	38		
		3.4.1.2	Measurement report.....	38		
	3.4.2	Transfer of messages and link layer service provision.....	38			
	3.4.3	Channel assignment procedure	38			
		3.4.3.1	Channel assignment initiation.....	39		
		3.4.3.2	Assignment completion	41		
		3.4.3.3	Abnormal cases	41		
	3.4.4	Handover procedure.....	42			
		3.4.4.1	Handover initiation	42		
		3.4.4.2	Physical channel establishment.....	43		
			3.4.4.2.1	Finely synchronized cell case	43	
			3.4.4.2.2	Non synchronized cell case	44	
			3.4.4.2.3	Pseudo-synchronized cell case	44	
			3.4.4.2.4	Pre-synchronized cell case	44	
		3.4.4.3	Handover completion	45		
		3.4.4.4	Abnormal cases	45		
	3.4.5	Frequency redefinition procedure	46			
		3.4.5.1	Abnormal cases	46		
	3.4.6	Channel mode modify procedure.....	47			
		3.4.6.1	Initiation of the channel mode modify procedure.....	47		
		3.4.6.2	Completion of channel mode modify procedure.....	47		
		3.4.6.3	Abnormal cases	47		
	3.4.7	Ciphering mode setting procedure.....	47			
		3.4.7.1	Ciphering mode setting initiation	47		
		3.4.7.2	Ciphering mode setting completion	48		
	3.4.8	Additional channel assignment procedure.....	48			
		3.4.8.1	Additional assignment procedure initiation	49		
		3.4.8.2	Additional assignment procedure completion	49		
		3.4.8.3	Abnormal cases	49		
	3.4.9	Partial channel release procedure	49			
		3.4.9.1	Partial release procedure initiation.....	49		
		3.4.9.2	Abnormal cases	49		
	3.4.10	Classmark change procedure	50			
	3.4.11	Classmark interrogation procedure.....	50			
		3.4.11.1	Classmark interrogation initiation	50		
		3.4.11.2	Classmark interrogation completion	50		
3.5	RR connection release procedure		51			
	3.5.1	Normal release procedure	51			
		3.5.1.1	Channel release procedure initiation.....	51		
		3.5.1.2	Abnormal cases	51		
	3.5.2	Radio link failure	51			
		3.5.2.1	Mobile side.....	52		
		3.5.2.2	Network side	52		
	3.5.3	RR connection abortion	52			
3.6	Receiving a RR STATUS message by a RR entity.....		52			
4	Elementary procedures for Mobility Management		53			
	4.1	General	53			
		4.1.1	Type of MM procedures.....	53		
		4.1.2	MM sublayer states	54		
			4.1.2.1	MM sublayer states in the Mobile Station	54	
				4.1.2.1.1	Main states	54
				4.1.2.1.2	Substates of the MM IDLE state	57
			4.1.2.2	The update Status.....	58	
			4.1.2.3	MM sublayer states on the network side.....	59	
	4.2	Behaviour in MM IDLE State.....	59			
		4.2.1	Primary Service State selection	60		

ETS 300 557: October 1996 (GSM 04.08 Version 4.15.0)

	4.2.1.1	Selection of the Service State after Power On.	60
	4.2.1.2	Other Cases.....	60
4.2.2		Detailed Description of the MS behaviour in MM IDLE State.	60
	4.2.2.1	Service State, NORMAL SERVICE	61
	4.2.2.2	Service State, ATTEMPTING TO UPDATE.....	61
	4.2.2.3	Service State, LIMITED SERVICE	61
	4.2.2.4	Service State, NO IMSI.....	61
	4.2.2.5	Service State, SEARCH FOR PLMN, NORMAL SERVICE .	61
	4.2.2.6	Service State, SEARCH FOR PLMN	62
4.2.3		Service state when back to state MM IDLE from another state	62
4.3		MM common procedures	63
	4.3.1	TMSI reallocation procedure.....	63
	4.3.1.1	TMSI reallocation initiation by the network	63
	4.3.1.2	TMSI reallocation completion by the Mobile Station	63
	4.3.1.3	TMSI reallocation completion in the network.....	63
	4.3.1.4	Abnormal cases.....	64
4.3.2		Authentication procedure.....	64
	4.3.2.1	Authentication request by the network	65
	4.3.2.2	Authentication response by the Mobile Station.....	65
	4.3.2.3	Authentication processing in the network.....	65
	4.3.2.4	Ciphering key sequence number.....	65
	4.3.2.5	Unsuccessful authentication	65
	4.3.2.6	Abnormal cases.....	66
4.3.3		Identification procedure.....	67
	4.3.3.1	Identity request by the network	67
	4.3.3.2	Identification response by the Mobile Station.....	67
	4.3.3.3	Abnormal cases.....	67
4.3.4		IMSI detach procedure	68
	4.3.4.1	IMSI detach initiation by the Mobile Station	68
	4.3.4.2	IMSI detach procedure in the network	68
	4.3.4.3	IMSI detach completion by the Mobile Station	68
	4.3.4.4	Abnormal cases.....	68
4.3.5		Abort procedure.....	68
	4.3.5.1	Abort procedure initiation by the network	69
	4.3.5.2	Abort procedure in the Mobile Station.....	69
4.4		MM specific procedures.....	69
	4.4.1	Location updating procedure.....	69
	4.4.2	Periodic updating.....	70
	4.4.3	IMSI attach procedure	71
	4.4.4	Generic Location Updating procedure.....	71
	4.4.4.1	Location updating initiation by the Mobile Station	71
	4.4.4.1a	Network Request for Additional MS Capability Information .	71
	4.4.4.2	Identification request from the network	71
	4.4.4.3	Authentication by the network	71
	4.4.4.4	Ciphering mode setting by the network	72
	4.4.4.5	Attempt Counter	72
	4.4.4.6	Location updating accepted by the network.....	72
	4.4.4.7	Location updating not accepted by the network	73
	4.4.4.8	Release of RR connection after location updating	73
	4.4.4.9	Abnormal cases on the Mobile Station side	73
	4.4.4.10	Abnormal cases on the network side	75
4.5		Connection management sublayer service provision	76
	4.5.1	MM connection establishment.....	76
	4.5.1.1	MM connection establishment initiated by the mobile station.....	76
	4.5.1.2	Abnormal cases.....	78
	4.5.1.3	MM connection establishment initiated by the network	79
	4.5.1.4	Abnormal cases.....	79
	4.5.1.5	MM connection establishment for emergency calls.....	79
	4.5.1.6	Call re-establishment.....	80

	4.5.1.6.1	Call re-establishment, initiation by the mobile station	80
	4.5.1.6.2	Abnormal cases.....	82
	4.5.1.7	Forced release during MO MM connection establishment...	82
4.5.2		MM connection information transfer phase.....	83
	4.5.2.1	Sending CM messages.....	83
	4.5.2.2	Receiving CM messages	83
	4.5.2.3	Abnormal cases	83
4.5.3		MM connection release	84
	4.5.3.1	Release of associated RR connection.....	84
4.6		Receiving a MM STATUS message by a MM entity.....	84
5		Elementary procedures for circuit-switched Call Control.....	85
5.1		Overview	85
	5.1.1	General.....	85
	5.1.2	Call Control States.....	88
	5.1.2.1	Call states at the Mobile Station side of the interface.....	88
	5.1.2.1.1	Null (State U0).....	88
	5.1.2.1.2	MM Connection pending (U0.1).....	88
	5.1.2.1.3	Call initiated (U1)	88
	5.1.2.1.4	Mobile originating call proceeding (U3) ..	88
	5.1.2.1.5	Call delivered (U4)	88
	5.1.2.1.6	Call present (U6)	88
	5.1.2.1.7	Call received (U7)	88
	5.1.2.1.8	Connect Request (U8).....	88
	5.1.2.1.9	Mobile terminating call confirmed (U9) ..	88
	5.1.2.1.10	Active (U10)	88
	5.1.2.1.11	Disconnect request (U11)	89
	5.1.2.1.12	Disconnect indication (U12).....	89
	5.1.2.1.13	Release request (U19)	89
	5.1.2.1.14	Mobile originating modify (U26).....	89
	5.1.2.1.15	Mobile terminating modify (U27).....	89
	5.1.2.2	Network call states.....	89
	5.1.2.2.1	Null (State N0).....	89
	5.1.2.2.2	MM connection pending (N0.1).....	89
	5.1.2.2.3	Call initiated (N1)	89
	5.1.2.2.4	Mobile originating call proceeding (N3) ..	89
	5.1.2.2.5	Call delivered (N4)	89
	5.1.2.2.6	Call present (N6)	89
	5.1.2.2.7	Call received (N7)	90
	5.1.2.2.8	Connect request (N8).....	90
	5.1.2.2.9	Mobile terminating call confirmed (N9) ..	90
	5.1.2.2.10	Active (N10)	90
	5.1.2.2.11	{Not used}.....	90
	5.1.2.2.12	Disconnect indication (N12).....	90
	5.1.2.2.13	Release request (N19)	90
	5.1.2.2.14	Mobile originating modify (N26).....	90
	5.1.2.2.15	Mobile terminating modify (N27).....	90
	5.1.2.2.16	Connect Indication (N28)	90
5.2		Call establishment procedures	91
	5.2.1	Mobile originating call establishment.....	91
	5.2.1.1	Call initiation	91
	5.2.1.2	Receipt of a setup message	92
	5.2.1.3	Receipt of a CALL PROCEEDING message	94
	5.2.1.4	Notification of progressing mobile originated call.....	95
	5.2.1.4.1	Notification of interworking in connection with mobile originated call establishment	95
	5.2.1.4.2	Call progress in the PLMN/ISDN environment.....	95

ETS 300 557: October 1996 (GSM 04.08 Version 4.15.0)

	5.2.1.5	Alerting	95
	5.2.1.6	Call connected	96
	5.2.1.7	Call rejection.....	97
	5.2.1.8	Transit network selection.....	97
	5.2.1.9	Traffic channel assignment at mobile originating call establishment	97
	5.2.1.10	Call queuing at mobile originating call establishment.....	97
5.2.2		Mobile terminating call establishment.....	97
	5.2.2.1	Call indication	97
	5.2.2.2	Compatibility checking	98
	5.2.2.3	Call confirmation	98
	5.2.2.3.1	Response to SETUP	98
	5.2.2.3.2	Receipt of CALL CONFIRMED and ALERTING by the network	99
	5.2.2.3.3	Call failure procedures	99
	5.2.2.3.4	Called Mobile Station clearing during mobile terminating call establishment....	99
	5.2.2.4	Notification of interworking in connection with mobile terminating call establishment.....	99
	5.2.2.5	Call accept	100
	5.2.2.6	Active indication	100
	5.2.2.7	Traffic channel assignment at mobile terminating call establishment	100
	5.2.2.8	Call queuing at mobile terminating call establishment.....	101
	5.2.2.9	User connection attachment during a mobile terminating call.....	101
5.3		Signalling procedures during the "active" state	102
	5.3.1	User notification procedure.....	102
	5.3.2	Call rearrangements	102
	5.3.3	Not used	102
	5.3.4	Support of Dual Services.....	102
	5.3.4.1	Service Description	102
	5.3.4.2	Call establishment.....	103
	5.3.4.2.1	Mobile Originating Establishment	103
	5.3.4.2.2	Mobile Terminating Establishment	104
	5.3.4.3	Changing the Call Mode.....	104
	5.3.4.3.1	Initiation of in-call modification.....	104
	5.3.4.3.2	Successful completion of in-call modification.....	104
	5.3.4.3.3	Change of the channel configuration ...	105
	5.3.4.3.4	Failure of in-call modification.....	105
	5.3.4.4	Abnormal procedures	105
5.4		Call clearing	107
	5.4.1	Terminology	107
	5.4.2	Exception conditions	107
	5.4.3	Clearing initiated by the Mobile Station	107
	5.4.3.1	Initiation of call clearing	107
	5.4.3.2	Receipt of a DISCONNECT message from the Mobile Station.	108
	5.4.3.3	Receipt of a RELEASE message from the network	108
	5.4.3.4	Receipt of a RELEASE COMPLETE message from the Mobile Station.....	108
	5.4.3.5	Abnormal cases.....	108
	5.4.4	Clearing initiated by the network	109
	5.4.4.1	Clearing when tones/announcements provided.....	109
	5.4.4.1.1	Receipt of a DISCONNECT message with progress indicator #8 from the network	109
	5.4.4.1.2	Expiry of timer T306	109
	5.4.4.2	Clearing when tones/announcements not provided	109

	5.4.4.2.1	Receipt of a DISCONNECT message without progress indicator or with progress indicator different from #8 from the network	109
	5.4.4.2.2	Receipt of a RELEASE message from the Mobile Station	109
	5.4.4.2.3	Abnormal cases	110
	5.4.4.3	Completion of clearing	110
	5.4.4.3.1	Abnormal cases	110
5.4.5		Clear collision	110
5.5		Miscellaneous procedures	111
5.5.1		In-band tones and announcements	111
5.5.2		Call collisions	111
5.5.3		Status procedures	111
	5.5.3.1	Status enquiry procedure	111
	5.5.3.2	Reception of a STATUS message by a CC entity	112
	5.5.3.2.1	STATUS message with incompatible state	112
	5.5.3.2.2	STATUS message with compatible state	112
5.5.4		Call re-establishment, mobile station side	112
	5.5.4.1	Indication from the mobility management sublayer	112
	5.5.4.2	Reaction of call control	112
	5.5.4.3	Completion of re-establishment	112
	5.5.4.4	Unsuccessful outcome	113
5.5.5		Call re-establishment, network side	113
	5.5.5.1	State alignment	113
5.5.6		Progress	113
5.5.7		DTMF protocol control procedure	113
	5.5.7.1	Start DTMF request by the Mobile Station	113
	5.5.7.2	Start DTMF response by the network	114
	5.5.7.3	Stop DTMF request by the Mobile Station	114
	5.5.7.4	Stop DTMF response by the network	114
	5.5.7.5	Sequencing of subsequent start DTMF requests by the Mobile Station	114
6		Support of packet services	116
7		Examples of structured procedures	117
7.1		General	117
	7.1.1	Paging request	117
	7.1.2	Immediate assignment	118
	7.1.3	Service request and contention resolution	118
	7.1.4	Authentication	119
	7.1.5	Ciphering mode setting	119
	7.1.6	Transaction phase	120
	7.1.6.1	Transmission mode change	120
	7.1.7	Channel release	120
7.2		Abnormal cases	120
7.3		Selected examples	120
	7.3.1	Location updating	121
	7.3.2	Mobile originating call establishment	122
	7.3.3	Mobile terminating call establishment	127
	7.3.4	Call clearing	130
	7.3.5	DTMF protocol control	132
	7.3.6	Handover	133
	7.3.7	In-call modification	136
	7.3.8	Call re-establishment	137
8		Handling of unknown, unforeseen, and erroneous protocol data	138

8.1	General	138
8.2	Message too short	138
8.3	Unknown or unforeseen transaction identifier	138
8.4	Unknown or unforeseen message type	139
8.5	Non-semantic mandatory information element errors	139
8.5.1	Radio resource management	140
8.5.2	Mobility management	140
8.5.3	Call control	140
8.6	Unknown and unforeseen IEs in the non-imperative message part	140
8.6.1	IEs unknown in the message	140
8.6.2	Out of sequence IEs	140
8.6.3	Repeated IEs	141
8.7	Non-imperative message part errors	141
8.7.1	Syntactically incorrect optional IEs	141
8.7.2	Conditional IE errors	141
8.8	Messages with semantically incorrect contents	141
9	Message functional definitions and contents	142
9.1	Messages for Radio Resources management	143
9.1.1	Additional assignment	145
9.1.1.1	Mobile Allocation	145
9.1.1.2	Starting Time	145
9.1.2	Assignment command	146
9.1.2.1	Mode of the First Channel	147
9.1.2.2	Description of the Second Channel	147
9.1.2.3	Mode of the Second Channel	147
9.1.2.4	Mobile Allocation and Frequency List, after the starting time	147
9.1.2.5	Starting Time	147
9.1.2.6	Reference cell frequency list	149
9.1.2.7	Cell Channel Description	149
9.1.2.8	Cipher Mode Setting	149
9.1.3	Assignment complete	150
9.1.4	Assignment failure	151
9.1.5	Channel mode modify	152
9.1.5.1	Channel Description	152
9.1.6	Channel mode modify acknowledge	153
9.1.7	Channel release	154
9.1.8	Channel request	155
9.1.9	Ciphering mode command	157
9.1.10	Ciphering mode complete	157
9.1.10.1	Mobile Equipment Identity	157
9.1.11	Classmark change	158
9.1.11.1	Additional Mobile Station Classmark Information	158
9.1.11.2	Mobile Station Classmark	158
9.1.12	Classmark enquiry	158
9.1.13	Frequency redefinition	159
9.1.13.1	Cell Channel Description	159
9.1.14	Handover access	159
9.1.15	Handover command	160
9.1.15.1	Synchronization Indication	161
9.1.15.2	Mode of the First Channel	161
9.1.15.3	Description of the Second Channel	162
9.1.15.4	Mode of the Second Channel	162
9.1.15.5	Frequency Channel Sequence, Frequency List, Frequency short list and Mobile Allocation, after time	162
9.1.15.6	Starting Time	163
9.1.15.7	Reference cell frequency list	163
9.1.15.8	Real Time Difference	163
9.1.15.9	Timing Advance	164

	9.1.15.10	Cipher Mode Setting.....	164
9.1.16		Handover complete	164
	9.1.16.1	Mobile Observed Time Difference	164
9.1.17		Handover failure.....	165
9.1.18		Immediate assignment	166
	9.1.18.1	Mobile Allocation.....	167
	9.1.18.2	Starting Time	167
	9.1.18.3	IA Rest Octets (Frequency parameters, before time).....	167
9.1.19		Immediate assignment extended	168
	9.1.19.1	Unnecessary IEs	169
	9.1.19.2	Mobile Allocation.....	169
	9.1.19.3	Starting Time	169
	9.1.19.4	Maximum message length.....	169
	9.1.19.5	IAX Rest Octets.....	169
9.1.20		Immediate assignment reject	170
	9.1.20.1	Use of the indexes.....	171
	9.1.20.2	Filling of the message.....	171
9.1.21		Measurement report	172
9.1.22		Paging request type 1	173
	9.1.22.1	Unnecessary IE.....	174
	9.1.22.2	Channels needed for Mobiles 1 and 2	174
	9.1.22.3	Mobile Identities.....	174
	9.1.22.4	P1 Rest Octets.....	174
9.1.23		Paging request type 2.....	175
	9.1.23.1	Channels needed for Mobiles 1 and 2	176
	9.1.23.2	Mobile Identity 3	176
	9.1.23.3	P2 Rest Octets	176
9.1.24		Paging request type 3.....	177
	9.1.24.1	Channels needed for Mobiles 1 and 2	178
	9.1.24.2	P3 Rest Octets.....	178
9.1.25		Paging response.....	178
	9.1.25.1	Mobile Station Classmark	179
9.1.26		Partial release	179
	9.1.26.1	Channel Description.....	179
9.1.27		Partial release complete.....	179
9.1.28		Physical information	180
9.1.29		RR Status	180
9.1.30		Synchronization channel information.....	181
9.1.31		System information Type 1	182
9.1.32		System information type 2.....	182
9.1.33		System information type 2bis.....	183
9.1.34		System information type 2ter	184
9.1.35		System information type 3.....	185
9.1.36		System information type 4.....	186
	9.1.36.1	CBCH Channel description	187
	9.1.36.2	CBCH Mobile Allocation.....	187
	9.1.36.3	SI 4 Rest Octets.....	187
9.1.37		System information type 5.....	187
9.1.38		System information type 5bis.....	188
9.1.39		System information type 5ter	189
9.1.40		System information type 6.....	189
	9.1.40.1	Cell Identity	190
	9.1.40.2	Location Area Identification	190
	9.1.40.3	Cell Options.....	190
	9.1.40.4	NCC permitted	190
9.1.41		System information type 7	190
9.1.42		System information type 8.....	191
9.2		Messages for mobility management	192
	9.2.1	Authentication reject.....	193
	9.2.2	Authentication request.....	193

ETS 300 557: October 1996 (GSM 04.08 Version 4.15.0)

9.2.3	Authentication response	194
9.2.4	CM Re-establishment request.....	194
9.2.4.1	Location area identification	194
9.2.4.2	Mobile Station Classmark	195
9.2.5	CM service accept.....	195
9.2.6	CM service reject	195
9.2.7	CM service abort.....	196
9.2.8	Abort	196
9.2.9	CM service request.....	197
9.2.9.1	Mobile Station Classmark	197
9.2.10	Identity request	197
9.2.11	Identity response.....	198
9.2.12	IMSI detach indication.....	198
9.2.12.1	Mobile Station Classmark	198
9.2.13	Location updating accept.....	199
9.2.13.1	Follow on proceed	199
9.2.14	Location updating reject	199
9.2.15	Location updating request	200
9.2.15.1	Location area identification	200
9.2.15.2	Mobile Station Classmark	200
9.2.16	MM Status	201
9.2.17	TMSI reallocation command	201
9.2.18	TMSI reallocation complete	202
9.3	Messages for circuit-switched call control.....	203
9.3.1	Alerting	204
9.3.1.1	Alerting (network to mobile station direction)	204
9.3.1.1.1	Facility	204
9.3.1.1.2	Progress indicator	204
9.3.1.1.3	User-user.....	204
9.3.1.2	Alerting (mobile station to network direction)	205
9.3.1.2.1	Facility.....	205
9.3.1.2.2	User-user.....	205
9.3.1.2.3	SS version	205
9.3.2	Call confirmed	206
9.3.2.1	Repeat indicator	207
9.3.2.2	Bearer capability 1 and bearer capability 2	207
9.3.2.3	Cause	207
9.3.2.4	CC Capabilities.....	207
9.3.3	Call proceeding	208
9.3.3.1	Repeat indicator	209
9.3.3.2	Bearer capability 1 and bearer capability 2	209
9.3.3.3	Facility	209
9.3.3.4	Progress Indicator	209
9.3.4	Congestion control.....	209
9.3.4.1	Cause	210
9.3.5	Connect.....	210
9.3.5.1	Connect (network to mobile station direction)	210
9.3.5.1.1	Facility.....	210
9.3.5.1.2	Progress indicator	210
9.3.5.1.3	User-user.....	210
9.3.5.2	Connect (mobile station to network direction)	211
9.3.5.2.1	Facility.....	211
9.3.5.2.2	User-user.....	211
9.3.5.2.3	SS version	211
9.3.6	Connect acknowledge.....	212
9.3.7	Disconnect.....	212
9.3.7.1	Disconnect (network to mobile station direction)	212
9.3.7.1.1	Facility.....	213
9.3.7.1.2	Progress indicator	213
9.3.7.1.3	User-user.....	213

iTeh STANDARD PREVIEW
(standards.iteh.ai)

SIST ETS 300 557 E6:2003

<https://standards.iteh.ai/catalog/standards/sist/fd18a283-6083-4633-abd4-9ef37db961e/sist-ets-300-557-e6-2003>

9.3.7.2	Disconnect (mobile station to network direction)	213
9.3.7.2.1	Facility	214
9.3.7.2.2	User-user	214
9.3.7.2.3	SS version.....	214
9.3.8	Emergency setup.....	214
9.3.8.1	Bearer capability	214
9.3.9	Facility	215
9.3.9.1	Facility (network to mobile station direction)	215
9.3.9.2	Facility (mobile station to network direction)	216
9.3.9.2.1	SS version.....	216
9.3.10	Hold.....	217
9.3.11	Hold Acknowledge	217
9.3.12	Hold Reject	218
9.3.13	Modify	219
9.3.13.1	Low layer compatibility	219
9.3.13.2	High layer compatibility	219
9.3.13.3	Reverse call setup direction	219
9.3.14	Modify complete	220
9.3.14.1	Low layer compatibility	220
9.3.14.2	High layer compatibility	220
9.3.14.3	Reverse call setup direction	220
9.3.15	Modify reject	221
9.3.15.1	Low layer compatibility	221
9.3.15.2	High layer compatibility	221
9.3.16	Notify	222
9.3.17	Progress	222
9.3.17.1	User-user	222
9.3.18	Release	223
9.3.18.1	Release (network to mobile station direction)	223
9.3.18.1.1	Cause.....	224
9.3.18.1.2	Second cause.....	224
9.3.18.1.3	Facility	224
9.3.18.1.4	User-user	224
9.3.18.2	Release (mobile station to network direction)	224
9.3.18.2.1	Cause.....	225
9.3.18.2.2	Second cause.....	225
9.3.18.2.3	Facility	225
9.3.18.2.4	User-user.....	225
9.3.18.2.5	SS version.....	225
9.3.19	Release complete.....	225
9.3.19.1	Release complete (network to mobile station direction)	225
9.3.19.1.1	Cause.....	226
9.3.19.1.2	Facility	226
9.3.19.1.3	User-user.....	226
9.3.19.2	Release complete (mobile station to network direction)	226
9.3.19.2.1	Cause.....	227
9.3.19.2.2	Facility	227
9.3.19.2.3	User-user.....	227
9.3.19.2.4	SS version.....	227
9.3.20	Retrieve	227
9.3.21	Retrieve Acknowledge.....	228
9.3.22	Retrieve Reject.....	228
9.3.23	Setup.....	229
9.3.23.1	Setup (mobile terminated call establishment).....	229
9.3.23.1.1	BC repeat indicator.....	230
9.3.23.1.2	Bearer capability 1 and bearer capability 2.....	230
9.3.23.1.3	Facility	230
9.3.23.1.4	Progress indicator.....	231
9.3.23.1.5	Called party subaddress.....	231

ETS 300 557: October 1996 (GSM 04.08 Version 4.15.0)

	9.3.23.1.6	LLC repeat indicator	231		
	9.3.23.1.7	Low layer compatibility I	231		
	9.3.23.1.8	Low layer compatibility II	231		
	9.3.23.1.9	HLC repeat indicator	231		
	9.3.23.1.10	High layer compatibility i	231		
	9.3.23.1.11	High layer compatibility ii	231		
	9.3.23.1.12	User-user	231		
9.3.23.2	Setup (mobile originating call establishment)		232		
	9.3.23.2.1	BC repeat indicator	233		
	9.3.23.2.2	Facility	233		
	9.3.23.2.3	LLC repeat indicator	233		
	9.3.23.2.4	Low layer compatibility I	234		
	9.3.23.2.5	Low layer compatibility II	234		
	9.3.23.2.6	HLC repeat indicator	234		
	9.3.23.2.7	High layer compatibility i	234		
	9.3.23.2.8	High layer compatibility ii	234		
	9.3.23.2.9	User-user	234		
	9.3.23.2.10	SS version	234		
	9.3.23.2.11	CLIR suppression	234		
	9.3.23.2.12	CLIR invocation	234		
	9.3.23.2.13	CC Capabilities	234		
9.3.24	Start DTMF		235		
9.3.25	Start DTMF Acknowledge		235		
	9.3.25.1	Keypad facility	235		
9.3.26	Start DTMF reject		236		
9.3.27	Status		236		
	9.3.27.1	Auxiliary states	236		
9.3.28	Status enquiry		237		
9.3.29	Stop DTMF		237		
9.3.30	Stop DTMF acknowledge		238		
9.3.31	User information		238		
	9.3.31.1	User-user	238		
	9.3.31.2	More data	238		
10	General message format and information elements coding		239		
10.1	Overview		239		
10.2	Protocol Discriminator		240		
10.3	Skip indicator and transaction identifier		240		
	10.3.1	Skip indicator	240		
	10.3.2	Transaction identifier	240		
10.4	Message Type		241		
10.5	Other information elements		245		
	10.5.1	Common information elements	247		
		10.5.1.1	Cell identity	247	
		10.5.1.2	Ciphering Key Sequence Number	248	
		10.5.1.3	Location Area Identification	249	
		10.5.1.4	Mobile Identity	251	
		10.5.1.5	Mobile Station Classmark 1	253	
		10.5.1.6	Mobile Station Classmark 2	255	
		10.5.1.7	Mobile Station Classmark 3	258	
		10.5.1.8	Spare Half Octet	259	
	10.5.2	Radio Resource management information elements	260		
		10.5.2.1a	BA Range	260	
		10.5.2.1b	Cell Channel Description	262	
			10.5.2.1b.1	General description	262
			10.5.2.1b.2	Bit map 0 format	264
			10.5.2.1b.3	Range 1024 format	265
			10.5.2.1b.4	Range 512 format	267
			10.5.2.1b.5	Range 256 format	269
			10.5.2.1b.6	Range 128 format	271