

ETSI TS 124 301 V11.14.0 (2015-04)



**Universal Mobile Telecommunications System (UMTS);
LTE;
Non-Access-Stratum (NAS)
protocol for Evolved Packet System (EPS);
Stage 3
(3GPP TS 24.301 version 11.14.0 Release 11)**



Reference

RTS/TSGC-0124301vbe0

Keywords

LTE,UMTS

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

The present document can be downloaded from:

<http://www.etsi.org/standards-search>

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the only prevailing document is the print of the Portable Document Format (PDF) version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

<http://portal.etsi.org/tb/status/status.asp>

If you find errors in the present document, please send your comment to one of the following services:

<https://portal.etsi.org/People/CommitteeSupportStaff.aspx>

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2015.

All rights reserved.

DECT™, **PLUGTESTS™**, **UMTS™** and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members.
3GPP™ and **LTE™** are Trade Marks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.
GSM® and the GSM logo are Trade Marks registered and owned by the GSM Association.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: *"Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards"*, which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<http://ipr.etsi.org>).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under <http://webapp.etsi.org/key/queryform.asp>.

Modal verbs terminology

In the present document "**shall**", "**shall not**", "**should**", "**should not**", "**may**", "**need not**", "**will**", "**will not**", "**can**" and "**cannot**" are to be interpreted as described in clause 3.2 of the [ETSI Drafting Rules](#) (Verbal forms for the expression of provisions).

"**must**" and "**must not**" are **NOT** allowed in ETSI deliverables except when used in direct citation.

Contents

Intellectual Property Rights	2
Foreword.....	2
Modal verbs terminology.....	2
Foreword.....	16
1 Scope	17
2 References	17
3 Definitions and abbreviations.....	19
3.1 Definitions	19
3.2 Abbreviations	23
4 General	24
4.1 Overview	24
4.2 Linkage between the protocols for EPS mobility management and EPS session management	24
4.2.A Handling of NAS signalling low priority indication	25
4.3 UE mode of operation	25
4.3.1 General.....	25
4.3.2 Change of UE mode of operation	26
4.3.2.1 General.....	26
4.3.2.2 Change of UE's usage setting	28
4.3.2.3 Change of voice domain preference for E-UTRAN	29
4.3.2.4 Change or determination of IMS registration status.....	30
4.3.2.5 Change of configuration regarding the use of SMS.....	31
4.4 NAS security	32
4.4.1 General.....	32
4.4.2 Handling of EPS security contexts	32
4.4.2.1 General.....	32
4.4.2.2 Establishment of a mapped EPS security context during intersystem handover.....	33
4.4.2.3 Establishment of secure exchange of NAS messages	34
4.4.2.4 Change of security keys	35
4.4.2.5 Derivation of keys at CS to PS SRVCC handover from A/Gb mode to S1 mode or from Iu mode to S1 mode	35
4.4.3 Handling of NAS COUNT and NAS sequence number	36
4.4.3.1 General.....	36
4.4.3.2 Replay protection.....	37
4.4.3.3 Integrity protection and verification.....	37
4.4.3.4 Cipherng and deciphering	37
4.4.3.5 NAS COUNT wrap around.....	38
4.4.4 Integrity protection of NAS signalling messages.....	38
4.4.4.1 General.....	38
4.4.4.2 Integrity checking of NAS signalling messages in the UE	38
4.4.4.3 Integrity checking of NAS signalling messages in the MME	39
4.4.5 Cipherng of NAS signalling messages	40
4.5 Disabling and re-enabling of UE's E-UTRA capability	41
4.6 Applicability of procedures	42
4.6.1 Relay nodes.....	42
5 Elementary procedures for EPS mobility management.....	42
5.1 Overview	42
5.1.1 General.....	42
5.1.2 Types of EMM procedures	42
5.1.3 EMM sublayer states	44
5.1.3.1 General	44
5.1.3.2 EMM sublayer states in the UE.....	44
5.1.3.2.1 General	44

5.1.3.2.2	Main states.....	44
5.1.3.2.2.1	EMM-NULL.....	44
5.1.3.2.2.2	EMM-DEREGISTERED.....	44
5.1.3.2.2.3	EMM-REGISTERED-INITIATED.....	44
5.1.3.2.2.4	EMM-REGISTERED.....	44
5.1.3.2.2.5	EMM-DEREGISTERED-INITIATED.....	44
5.1.3.2.2.6	EMM-TRACKING-AREA-UPDATING-INITIATED.....	44
5.1.3.2.2.7	EMM-SERVICE-REQUEST-INITIATED.....	45
5.1.3.2.3	Substates of state EMM-DEREGISTERED.....	45
5.1.3.2.3.1	General.....	45
5.1.3.2.3.2	EMM-DEREGISTERED.NORMAL-SERVICE.....	45
5.1.3.2.3.3	EMM-DEREGISTERED.LIMITED-SERVICE.....	45
5.1.3.2.3.4	EMM-DEREGISTERED.ATTEMPTING-TO-ATTACH.....	46
5.1.3.2.3.5	EMM-DEREGISTERED.PLMN-SEARCH.....	46
5.1.3.2.3.6	EMM-DEREGISTERED.NO-IMSI.....	46
5.1.3.2.3.7	EMM-DEREGISTERED.ATTACH-NEEDED.....	46
5.1.3.2.3.8	EMM-DEREGISTERED.NO-CELL-AVAILABLE.....	46
5.1.3.2.4	Substates of state EMM-REGISTERED.....	46
5.1.3.2.4.1	General.....	46
5.1.3.2.4.2	EMM-REGISTERED.NORMAL-SERVICE.....	46
5.1.3.2.4.3	EMM-REGISTERED.ATTEMPTING-TO-UPDATE.....	46
5.1.3.2.4.4	EMM-REGISTERED.LIMITED-SERVICE.....	46
5.1.3.2.4.5	EMM-REGISTERED.PLMN-SEARCH.....	46
5.1.3.2.4.6	EMM-REGISTERED.UPDATE-NEEDED.....	46
5.1.3.2.4.7	EMM-REGISTERED.NO-CELL-AVAILABLE.....	47
5.1.3.2.4.8	EMM-REGISTERED.ATTEMPTING-TO-UPDATE-MM.....	47
5.1.3.2.4.9	EMM-REGISTERED.IMSI-DETACH-INITIATED.....	47
5.1.3.3	EPS update status.....	47
5.1.3.4	EMM sublayer states in the MME.....	47
5.1.3.4.1	EMM-DEREGISTERED.....	47
5.1.3.4.2	EMM-COMMON-PROCEDURE-INITIATED.....	47
5.1.3.4.3	EMM-REGISTERED.....	48
5.1.3.4.4	EMM-DEREGISTERED-INITIATED.....	48
5.1.4	Coordination between EMM and GMM.....	48
5.1.5	Coordination between EMM and MM.....	49
5.2	Behaviour of the UE in state EMM-DEREGISTERED and state EMM-REGISTERED.....	49
5.2.1	General.....	49
5.2.2	UE behaviour in state EMM-DEREGISTERED.....	49
5.2.2.1	General.....	49
5.2.2.2	Primary substate selection.....	49
5.2.2.2.1	Selection of the substate after power on.....	49
5.2.2.3	Detailed description of UE behaviour in state EMM-DEREGISTERED.....	50
5.2.2.3.1	NORMAL-SERVICE.....	50
5.2.2.3.2	LIMITED-SERVICE.....	50
5.2.2.3.3	ATTEMPTING-TO-ATTACH.....	50
5.2.2.3.4	PLMN-SEARCH.....	50
5.2.2.3.5	NO-IMSI.....	50
5.2.2.3.6	ATTACH-NEEDED.....	50
5.2.2.3.7	NO-CELL-AVAILABLE.....	51
5.2.2.4	Substate when back to state EMM-DEREGISTERED from another EMM state.....	51
5.2.3	UE behaviour in state EMM-REGISTERED.....	51
5.2.3.1	General.....	51
5.2.3.2	Detailed description of UE behaviour in state EMM-REGISTERED.....	51
5.2.3.2.1	NORMAL-SERVICE.....	51
5.2.3.2.2	ATTEMPTING-TO-UPDATE.....	52
5.2.3.2.3	LIMITED-SERVICE.....	52
5.2.3.2.4	PLMN-SEARCH.....	52
5.2.3.2.5	UPDATE-NEEDED.....	52
5.2.3.2.6	NO-CELL-AVAILABLE.....	52
5.2.3.2.7	ATTEMPTING-TO-UPDATE-MM.....	52
5.2.3.2.8	IMSI-DETACH-INITIATED.....	53
5.3	General on elementary EMM procedures.....	53

5.3.1	EMM modes and NAS signalling connection.....	53
5.3.1.1	Establishment of the NAS signalling connection.....	53
5.3.1.2	Release of the NAS signalling connection.....	54
5.3.2	Lists of forbidden tracking areas.....	55
5.3.3	List of forbidden PLMNs for attach in S101 mode.....	55
5.3.3a	Forbidden PLMNs for EPS services.....	55
5.3.4	Equivalent PLMNs list.....	55
5.3.5	Handling of the periodic tracking area update timer and mobile reachable timer (S1 mode only).....	56
5.3.6	Handling of timer T3402.....	57
5.3.7	Handling of the Local Emergency Numbers List.....	57
5.3.7a	Specific requirements for UE configured to use timer T3245.....	58
5.3.8	Abnormal cases in the UE.....	58
5.3.9	Handling of NAS level mobility management congestion control.....	58
5.3.10	Access class control.....	59
5.4	EMM common procedures.....	59
5.4.1	GUTI reallocation procedure.....	59
5.4.1.1	General.....	59
5.4.1.2	GUTI reallocation initiation by the network.....	59
5.4.1.3	GUTI reallocation completion by the UE.....	60
5.4.1.4	GUTI reallocation completion by the network.....	60
5.4.1.5	Abnormal cases in the UE.....	60
5.4.1.6	Abnormal cases on the network side.....	60
5.4.2	Authentication procedure.....	61
5.4.2.1	General.....	61
5.4.2.2	Authentication initiation by the network.....	62
5.4.2.3	Authentication response by the UE.....	62
5.4.2.4	Authentication completion by the network.....	63
5.4.2.5	Authentication not accepted by the network.....	63
5.4.2.6	Authentication not accepted by the UE.....	64
5.4.2.7	Abnormal cases.....	64
5.4.3	Security mode control procedure.....	69
5.4.3.1	General.....	69
5.4.3.2	NAS security mode control initiation by the network.....	69
5.4.3.3	NAS security mode command accepted by the UE.....	70
5.4.3.4	NAS security mode control completion by the network.....	72
5.4.3.5	NAS security mode command not accepted by the UE.....	72
5.4.3.6	Abnormal cases in the UE.....	72
5.4.3.7	Abnormal cases on the network side.....	72
5.4.4	Identification procedure.....	73
5.4.4.1	General.....	73
5.4.4.2	Identification initiation by the network.....	73
5.4.4.3	Identification response by the UE.....	74
5.4.4.4	Identification completion by the network.....	74
5.4.4.5	Abnormal cases in the UE.....	74
5.4.4.6	Abnormal cases on the network side.....	74
5.4.5	EMM information procedure.....	75
5.4.5.1	General.....	75
5.4.5.2	EMM information procedure initiation by the network.....	75
5.4.5.3	EMM information procedure in the UE.....	75
5.4.5.4	Abnormal cases on the network side.....	76
5.5	EMM specific procedures.....	76
5.5.1	Attach procedure.....	76
5.5.1.1	General.....	76
5.5.1.2	Attach procedure for EPS services.....	77
5.5.1.2.1	General.....	77
5.5.1.2.2	Attach procedure initiation.....	77
5.5.1.2.3	EMM common procedure initiation.....	78
5.5.1.2.4	Attach accepted by the network.....	79
5.5.1.2.5	Attach not accepted by the network.....	80
5.5.1.2.5A	Attach for emergency bearer services not accepted by the network.....	84
5.5.1.2.5B	Attach for initiating a PDN connection for emergency bearer services not accepted by the network.....	84

5.5.1.2.6	Abnormal cases in the UE	85
5.5.1.2.7	Abnormal cases on the network side	87
5.5.1.3	Combined attach procedure for EPS services and non-EPS services (S1 mode only)	88
5.5.1.3.1	General	88
5.5.1.3.2	Combined attach procedure initiation	88
5.5.1.3.3	EMM common procedure initiation	88
5.5.1.3.4	Combined attach accepted by the network	89
5.5.1.3.4.1	General	89
5.5.1.3.4.2	Combined attach successful	89
5.5.1.3.4.3	Combined attach successful for EPS services only	90
5.5.1.3.5	Combined attach not accepted by the network	91
5.5.1.3.6	Abnormal cases in the UE	94
5.5.1.3.7	Abnormal cases on the network side	95
5.5.2	Detach procedure	95
5.5.2.1	General	95
5.5.2.2	UE initiated detach procedure	96
5.5.2.2.1	UE initiated detach procedure initiation	96
5.5.2.2.2	UE initiated detach procedure completion for EPS services only	97
5.5.2.2.3	UE initiated combined detach procedure completion	97
5.5.2.2.4	Abnormal cases in the UE	97
5.5.2.2.5	Abnormal cases on the network side	99
5.5.2.3	Network initiated detach procedure	99
5.5.2.3.1	Network initiated detach procedure initiation	99
5.5.2.3.2	Network initiated detach procedure completion by the UE	100
5.5.2.3.3	Network initiated detach procedure completion by the network	103
5.5.2.3.4	Abnormal cases in the UE	103
5.5.2.3.5	Abnormal cases on the network side	103
5.5.3	Tracking area updating procedure (S1 mode only)	105
5.5.3.1	General	105
5.5.3.2	Normal and periodic tracking area updating procedure	106
5.5.3.2.1	General	106
5.5.3.2.2	Normal and periodic tracking area updating procedure initiation	106
5.5.3.2.3	EMM common procedure initiation	109
5.5.3.2.4	Normal and periodic tracking area updating procedure accepted by the network	109
5.5.3.2.5	Normal and periodic tracking area updating procedure not accepted by the network	113
5.5.3.2.5A	Tracking area updating procedure for initiating a PDN connection for emergency bearer services not accepted by the network	117
5.5.3.2.6	Abnormal cases in the UE	118
5.5.3.2.7	Abnormal cases on the network side	120
5.5.3.3	Combined tracking area updating procedure	121
5.5.3.3.1	General	121
5.5.3.3.2	Combined tracking area updating procedure initiation	121
5.5.3.3.3	EMM common procedure initiation	123
5.5.3.3.4	Combined tracking area updating procedure accepted by the network	123
5.5.3.3.4.1	General	123
5.5.3.3.4.2	Combined tracking area updating successful	123
5.5.3.3.4.3	Combined tracking area updating successful for EPS services only	124
5.5.3.3.5	Combined tracking area updating procedure not accepted by the network	125
5.5.3.3.6	Abnormal cases in the UE	130
5.5.3.3.7	Abnormal cases on the network side	131
5.6	EMM connection management procedures (S1 mode only)	131
5.6.1	Service request procedure	131
5.6.1.1	General	131
5.6.1.2	Service request procedure initiation	134
5.6.1.3	EMM common procedure initiation	134
5.6.1.4	Service request procedure accepted by the network	134
5.6.1.5	Service request procedure not accepted by the network	135
5.6.1.5A	Service request procedure for initiating a PDN connection for emergency bearer services not accepted by the network	140
5.6.1.6	Abnormal cases in the UE	141
5.6.1.7	Abnormal cases on the network side	144
5.6.2	Paging procedure	145

5.6.2.1	General	145
5.6.2.2	Paging for EPS services	146
5.6.2.2.1	Paging for EPS services through E-UTRAN using S-TMSI	146
5.6.2.2.2	Paging for EPS services through E-UTRAN using IMSI	146
5.6.2.3	Paging for CS fallback to A/Gb or Iu mode	147
5.6.2.3.1	General	147
5.6.2.3.2	Abnormal cases in the UE	148
5.6.2.3.3	Void	148
5.6.2.4	Paging for SMS	148
5.6.3	Transport of NAS messages procedure	148
5.6.3.1	General	148
5.6.3.2	UE initiated transport of NAS messages	148
5.6.3.3	Network initiated transport of NAS messages	148
5.6.3.4	Abnormal cases in the UE	149
5.6.3.5	Abnormal cases on the network side	149
5.6.4	Generic transport of NAS messages procedure	149
5.6.4.1	General	149
5.6.4.2	UE initiated generic transport of NAS messages	149
5.6.4.3	Network initiated transport of NAS messages	149
5.6.4.4	Abnormal cases in the UE	150
5.6.4.5	Abnormal cases on the network side	150
5.7	Reception of an EMM STATUS message by an EMM entity	150
6	Elementary procedures for EPS session management	151
6.1	Overview	151
6.1.1	General	151
6.1.2	Types of ESM procedures	151
6.1.3	ESM sublayer states	152
6.1.3.1	General	152
6.1.3.2	ESM sublayer states in the UE	152
6.1.3.2.1	BEARER CONTEXT INACTIVE	152
6.1.3.2.2	BEARER CONTEXT ACTIVE	152
6.1.3.2.3	PROCEDURE TRANSACTION INACTIVE	153
6.1.3.2.4	PROCEDURE TRANSACTION PENDING	153
6.1.3.3	ESM sublayer states in the MME	153
6.1.3.3.1	BEARER CONTEXT INACTIVE	153
6.1.3.3.2	BEARER CONTEXT ACTIVE PENDING	153
6.1.3.3.3	BEARER CONTEXT ACTIVE	153
6.1.3.3.4	BEARER CONTEXT INACTIVE PENDING	153
6.1.3.3.5	BEARER CONTEXT MODIFY PENDING	153
6.1.3.3.6	PROCEDURE TRANSACTION INACTIVE	154
6.1.3.3.7	PROCEDURE TRANSACTION PENDING	154
6.1.4	Coordination between ESM and SM	154
6.1.5	Coordination between ESM and EMM for supporting ISR	155
6.2	IP address allocation	156
6.2.1	General	156
6.2.2	IP address allocation via NAS signalling	156
6.3	General on elementary ESM procedures	157
6.3.1	Services provided by lower layers	157
6.3.2	Principles of address handling for ESM procedures	157
6.3.3	Abnormal cases in the UE	159
6.3.4	Abnormal cases in the network	159
6.3.5	Handling of APN based congestion control	160
6.4	Network initiated ESM procedures	160
6.4.1	Default EPS bearer context activation procedure	160
6.4.1.1	General	160
6.4.1.2	Default EPS bearer context activation initiated by the network	160
6.4.1.3	Default EPS bearer context activation accepted by the UE	161
6.4.1.4	Default EPS bearer context activation not accepted by the UE	161
6.4.1.5	Abnormal cases in the UE	161
6.4.1.6	Abnormal cases on the network side	161
6.4.2	Dedicated EPS bearer context activation procedure	162

6.4.2.1	General	162
6.4.2.2	Dedicated EPS bearer context activation initiated by the network	162
6.4.2.3	Dedicated EPS bearer context activation accepted by the UE	163
6.4.2.4	Dedicated EPS bearer context activation not accepted by the UE	163
6.4.2.5	Abnormal cases in the UE	164
6.4.2.6	Abnormal cases on the network side	165
6.4.3	EPS bearer context modification procedure	165
6.4.3.1	General	165
6.4.3.2	EPS bearer context modification initiated by the network	165
6.4.3.3	EPS bearer context modification accepted by the UE	166
6.4.3.4	EPS bearer context modification not accepted by the UE	166
6.4.3.5	Abnormal cases in the UE	168
6.4.3.6	Abnormal cases on the network side	168
6.4.4	EPS bearer context deactivation procedure	169
6.4.4.1	General	169
6.4.4.2	EPS bearer context deactivation initiated by the network	169
6.4.4.3	EPS bearer context deactivation accepted by the UE	170
6.4.4.4	Abnormal cases in the UE	171
6.4.4.5	Abnormal cases on the network side	171
6.4.4.6	Local EPS bearer context deactivation without NAS signalling	171
6.5	UE requested ESM procedures	173
6.5.0	General	173
6.5.1	UE requested PDN connectivity procedure	173
6.5.1.1	General	173
6.5.1.2	UE requested PDN connectivity procedure initiation	173
6.5.1.3	UE requested PDN connectivity procedure accepted by the network	174
6.5.1.4	UE requested PDN connectivity procedure not accepted by the network	175
6.5.1.4A	Handling the maximum number of active EPS bearer contexts	179
6.5.1.4B	Void	179
6.5.1.5	Abnormal cases in the UE	179
6.5.1.6	Abnormal cases on the network side	179
6.5.1.7	Handling PDN connectivity request for UE configured for dual priority	180
6.5.2	UE requested PDN disconnect procedure	180
6.5.2.1	General	180
6.5.2.2	UE requested PDN disconnection procedure initiation	180
6.5.2.3	UE requested PDN disconnection procedure accepted by the network	181
6.5.2.4	UE requested PDN disconnection procedure not accepted by the network	181
6.5.2.5	Abnormal cases in the UE	181
6.5.2.6	Abnormal cases on the network side	182
6.5.3	UE requested bearer resource allocation procedure	182
6.5.3.1	General	182
6.5.3.2	UE requested bearer resource allocation procedure initiation	182
6.5.3.3	UE requested bearer resource allocation procedure accepted by the network	183
6.5.3.4	UE requested bearer resource allocation procedure not accepted by the network	183
6.5.3.4A	Handling the maximum number of active EPS bearer contexts	186
6.5.3.5	Abnormal cases in the UE	186
6.5.3.6	Abnormal cases on the network side	186
6.5.4	UE requested bearer resource modification procedure	187
6.5.4.1	General	187
6.5.4.2	UE requested bearer resource modification procedure initiation	187
6.5.4.3	UE requested bearer resource modification procedure accepted by the network	188
6.5.4.4	UE requested bearer resource modification procedure not accepted by the network	189
6.5.4.5	Abnormal cases in the UE	192
6.5.4.6	Abnormal cases on the network side	192
6.5.5	Handling session management request for UE configured for dual priority	192
6.6	Miscellaneous procedures	193
6.6.1	Exchange of protocol configuration options	193
6.6.1.1	General	193
6.6.1.2	ESM information request procedure	193
6.6.1.2.1	General	193
6.6.1.2.2	ESM information request initiated by the network	193
6.6.1.2.3	ESM information request completion by the UE	194

6.6.1.2.4	ESM information request completion by the network	194
6.6.1.2.5	Abnormal cases in the UE	194
6.6.1.2.6	Abnormal cases on the network side	194
6.6.1.3	Exchange of protocol configuration options in other messages	194
6.6.2	Notification procedure	194
6.6.2.1	General	194
6.6.2.2	Notification procedure initiation by the network	194
6.6.2.3	Notification procedure in the UE	195
6.6.2.4	Abnormal cases on the network side	195
6.7	Reception of an ESM STATUS message by an ESM entity	195
7	Handling of unknown, unforeseen, and erroneous protocol data	196
7.1	General	196
7.2	Message too short	197
7.3	Unknown or unforeseen procedure transaction identity or EPS bearer identity	197
7.3.1	Procedure transaction identity	197
7.3.2	EPS bearer identity	198
7.4	Unknown or unforeseen message type	199
7.5	Non-semantic mandatory information element errors	200
7.5.1	Common procedures	200
7.5.2	EPS mobility management	200
7.5.3	EPS session management	200
7.6	Unknown and unforeseen IEs in the non-imperative message part	201
7.6.1	IEs unknown in the message	201
7.6.2	Out of sequence IEs	201
7.6.3	Repeated IEs	201
7.7	Non-imperative message part errors	201
7.7.1	Syntactically incorrect optional IEs	202
7.7.2	Conditional IE errors	202
7.8	Messages with semantically incorrect contents	202
8	Message functional definitions and contents	202
8.1	Overview	202
8.2	EPS mobility management messages	203
8.2.1	Attach accept	203
8.2.1.1	Message definition	203
8.2.1.2	GUTI	204
8.2.1.3	Location area identification	204
8.2.1.4	MS identity	204
8.2.1.5	EMM cause	204
8.2.1.6	T3402 value	204
8.2.1.7	T3423 value	205
8.2.1.8	Equivalent PLMNs	205
8.2.1.9	Emergency number list	205
8.2.1.10	EPS network feature support	205
8.2.1.11	Additional update result	205
8.2.1.12	T3412 extended value	205
8.2.2	Attach complete	205
8.2.3	Attach reject	205
8.2.3.1	Message definition	205
8.2.3.2	ESM message container	206
8.2.3.3	T3346 value	206
8.2.3.4	T3402 value	206
8.2.4	Attach request	206
8.2.4.1	Message definition	206
8.2.4.2	Old P-TMSI signature	207
8.2.4.3	Additional GUTI	208
8.2.4.4	Last visited registered TAI	208
8.2.4.5	DRX parameter	208
8.2.4.6	MS network capability	208
8.2.4.7	Old location area identification	208
8.2.4.8	TMSI status	208

8.2.4.9	Mobile station classmark 2.....	208
8.2.4.10	Mobile station classmark 3.....	208
8.2.4.11	Supported Codecs	208
8.2.4.12	Additional update type	208
8.2.4.13	Voice domain preference and UE's usage setting.....	208
8.2.4.14	Device properties	208
8.2.4.15	Old GUTI type	208
8.2.4.16	MS network feature support.....	209
8.2.4.17	TMSI based NRI container	209
8.2.5	Authentication failure	209
8.2.5.1	Message definition	209
8.2.5.2	Authentication failure parameter.....	209
8.2.6	Authentication reject.....	209
8.2.7	Authentication request	210
8.2.8	Authentication response.....	210
8.2.9	CS service notification.....	210
8.2.9.1	Message definition	210
8.2.9.2	CLI	211
8.2.9.3	SS Code.....	211
8.2.9.4	LCS indicator	211
8.2.9.5	LCS client identity	211
8.2.10	Detach accept.....	211
8.2.10.1	Detach accept (UE originating detach)	211
8.2.10.2	Detach accept (UE terminated detach).....	212
8.2.11	Detach request	212
8.2.11.1	Detach request (UE originating detach).....	212
8.2.11.2	Detach request (UE terminated detach).....	213
8.2.11.2.1	Message definition.....	213
8.2.11.2.2	EMM cause.....	213
8.2.12	Downlink NAS Transport	213
8.2.13	EMM information	213
8.2.13.1	Message definition.....	213
8.2.13.2	Full name for network	214
8.2.13.3	Short name for network.....	214
8.2.13.4	Local time zone	214
8.2.13.5	Universal time and local time zone	214
8.2.13.6	Network daylight saving time	215
8.2.14	EMM status.....	215
8.2.15	Extended service request	215
8.2.15.1	Message definition	215
8.2.15.2	CSFB response	216
8.2.15.3	EPS bearer context status	216
8.2.15.4	Device properties	216
8.2.16	GUTI reallocation command	216
8.2.16.1	Message definition	216
8.2.16.2	TAI list	217
8.2.17	GUTI reallocation complete	217
8.2.18	Identity request	217
8.2.19	Identity response.....	218
8.2.20	Security mode command	218
8.2.20.1	Message definition	218
8.2.20.2	IMEISV request	219
8.2.20.3	Replayed nonce _{UE}	219
8.2.20.4	Nonce _{MME}	219
8.2.21	Security mode complete.....	219
8.2.21.1	Message definition	219
8.2.21.2	IMEISV	220
8.2.22	Security mode reject	220
8.2.23	Security protected NAS message.....	220
8.2.24	Service reject	220
8.2.24.1	Message definition	220
8.2.24.2	T3442 value.....	221

8.2.24.3	T3346 value.....	221
8.2.25	Service request.....	221
8.2.26	Tracking area update accept.....	221
8.2.26.1	Message definition	221
8.2.26.2	T3412 value.....	222
8.2.26.3	GUTI.....	222
8.2.26.4	TAI list	222
8.2.26.5	EPS bearer context status	223
8.2.26.6	Location area identification.....	223
8.2.26.7	MS identity.....	223
8.2.26.8	EMM cause	223
8.2.26.9	T3402 value.....	223
8.2.26.10	T3423 value.....	223
8.2.26.11	Equivalent PLMNs.....	223
8.2.26.12	Emergency number list	223
8.2.26.13	EPS network feature support.....	223
8.2.26.14	Additional update result	223
8.2.26.15	T3412 extended value	223
8.2.27	Tracking area update complete.....	223
8.2.28	Tracking area update reject.....	224
8.2.28.1	Message definition	224
8.2.28.2	T3346 value.....	224
8.2.29	Tracking area update request	224
8.2.29.1	Message definition	224
8.2.29.2	Non-current native NAS key set identifier.....	226
8.2.29.3	GPRS ciphering key sequence number	226
8.2.29.4	Old P-TMSI signature	226
8.2.29.5	Additional GUTI	226
8.2.29.6	Nonce _{UE}	226
8.2.29.7	UE network capability.....	226
8.2.29.8	Last visited registered TAI.....	226
8.2.29.9	DRX parameter	226
8.2.29.10	UE radio capability information update needed.....	226
8.2.29.11	EPS bearer context status	226
8.2.29.12	MS network capability	226
8.2.29.13	Old location area identification	226
8.2.29.14	TMSI status	226
8.2.29.15	Mobile station classmark 2.....	227
8.2.29.16	Mobile station classmark 3.....	227
8.2.29.17	Supported Codecs	227
8.2.29.18	Additional update type	227
8.2.29.19	Voice domain preference and UE's usage setting.....	227
8.2.29.20	Old GUTI type	227
8.2.29.21	Device properties	227
8.2.29.22	MS network feature support.....	227
8.2.29.23	TMSI based NRI container	227
8.2.30	Uplink NAS Transport.....	227
8.2.31	Downlink generic NAS transport.....	228
8.2.31.1	Message definition	228
8.2.31.2	Additional information.....	228
8.2.32	Uplink generic NAS transport	228
8.2.32.1	Message definition	228
8.2.32.2	Additional information.....	229
8.3	EPS session management messages	229
8.3.1	Activate dedicated EPS bearer context accept.....	229
8.3.1.1	Message definition	229
8.3.1.2	Protocol configuration options	229
8.3.2	Activate dedicated EPS bearer context reject	230
8.3.2.1	Message definition	230
8.3.2.2	Protocol configuration options	230
8.3.3	Activate dedicated EPS bearer context request.....	230
8.3.3.1	Message definition	230

8.3.3.2	Transaction identifier	231
8.3.3.3	Negotiated QoS	231
8.3.3.4	Negotiated LLC SAPI	231
8.3.3.5	Radio priority	231
8.3.3.6	Packet flow identifier	231
8.3.3.7	Protocol configuration options	231
8.3.4	Activate default EPS bearer context accept	232
8.3.4.1	Message definition	232
8.3.4.2	Protocol configuration options	232
8.3.5	Activate default EPS bearer context reject	232
8.3.5.1	Message definition	232
8.3.5.2	Protocol configuration options	233
8.3.6	Activate default EPS bearer context request	233
8.3.6.1	Message definition	233
8.3.6.2	Transaction identifier	233
8.3.6.3	Negotiated QoS	233
8.3.6.4	Negotiated LLC SAPI	234
8.3.6.5	Radio priority	234
8.3.6.6	Packet flow identifier	234
8.3.6.7	APN-AMBR	234
8.3.6.8	ESM cause	234
8.3.6.9	Protocol configuration options	234
8.3.6.10	Connectivity type	234
8.3.7	Bearer resource allocation reject	234
8.3.7.1	Message definition	234
8.3.7.2	Protocol configuration options	235
8.3.7.3	T3396 value	235
8.3.8	Bearer resource allocation request	235
8.3.8.1	Message definition	235
8.3.8.2	Protocol configuration options	236
8.3.8.3	Device properties	236
8.3.9	Bearer resource modification reject	236
8.3.9.1	Message definition	236
8.3.9.2	Protocol configuration options	237
8.3.9.3	T3396 value	237
8.3.10	Bearer resource modification request	237
8.3.10.1	Message definition	237
8.3.10.2	Required traffic flow QoS	238
8.3.10.3	ESM cause	238
8.3.10.4	Protocol configuration options	238
8.3.10.5	Device properties	238
8.3.11	Deactivate EPS bearer context accept	238
8.3.11.1	Message definition	238
8.3.11.2	Protocol configuration options	239
8.3.12	Deactivate EPS bearer context request	239
8.3.12.1	Message definition	239
8.3.12.2	Protocol configuration options	239
8.3.12.3	T3396 value	239
8.3.13	ESM information request	240
8.3.14	ESM information response	240
8.3.14.1	Message definition	240
8.3.14.2	Access point name	240
8.3.14.3	Protocol configuration options	240
8.3.15	ESM status	241
8.3.16	Modify EPS bearer context accept	241
8.3.16.1	Message definition	241
8.3.16.2	Protocol configuration options	241
8.3.17	Modify EPS bearer context reject	242
8.3.17.1	Message definition	242
8.3.17.2	Protocol configuration options	242
8.3.18	Modify EPS bearer context request	242
8.3.18.1	Message definition	242