



SLOVENSKI STANDARD SIST ETS 300 557 E7:2003

01-december-2003

8 [[]HJb]`WV] b]`hY`_ca i b]_UW`g_]`g]ghYa `fZuU&L`E`GdYWZ]_UW]U`fYhY`d`Ugh]`nU
j a Ygb]_`a cV]`bY] UfUX]U`f] GA `\$('\$, Ł

Digital cellular telecommunications system (Phase 2) (GSM); Mobile radio interface;
Layer 3 specification (GSM 04.08)

iTeh STANDARD PREVIEW
(standards.iteh.ai)

Ta slovenski standard je istoveten z: **ETS 300 557 Edition 7**
<https://standards.iteh.ai/catalog/standards/sist/0477e3e5-639e-47e3-af3f-3cc6330f0560/sist-ets-300-557-e7-2003>

ICS:

33.070.50	Globalni sistem za mobilno telekomunikacijo (GSM)	Global System for Mobile Communication (GSM)
-----------	---	--


SIST ETS 300 557 E7:2003

en

iTeh STANDARD PREVIEW
(standards.iteh.ai)

[SIST ETS 300 557 E7:2003](#)

<https://standards.iteh.ai/catalog/standards/sist/0477e3e5-639e-47e3-af3f-3cc6330f0560/sist-ets-300-557-e7-2003>

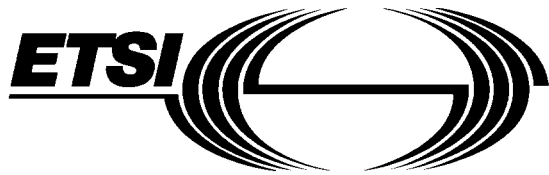

EUROPEAN
TELECOMMUNICATION
STANDARD

ETS 300 557

January 1997

Seventh Edition

Source: ETSI TC-SMG

Reference: RE/SMG-030408PR6

ICS: 33.020

Key words: Digital cellular telecommunications system, Global System for Mobile communications (GSM)



[SIST ETS 300 557 E7:2003](https://standards.iteh.ai/catalog/standards/sist/0477e3e5-639e-47e3-af3f-11d1-400000000000/sist-ets-300-557-e7-2003)

[https://standards.iteh.ai/catalog/standards/sist/0477e3e5-639e-47e3-af3f-](https://standards.iteh.ai/catalog/standards/sist/0477e3e5-639e-47e3-af3f-11d1-400000000000/sist-ets-300-557-e7-2003)

**Digital cellular telecommunications system (Phase 2);
Mobile radio interface layer 3 specification
(GSM 04.08)**

ETSI

European Telecommunications Standards Institute

ETSI Secretariat

Postal address: F-06921 Sophia Antipolis CEDEX - FRANCE

Office address: 650 Route des Lucioles - Sophia Antipolis - Valbonne - FRANCE

X.400: c=fr, a=atlas, p=etsi, s=secretariat - **Internet:** secretariat@etsi.fr

Tel.: +33 4 92 94 42 00 - Fax: +33 4 93 65 47 16

Copyright Notification: No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 1997. All rights reserved.

iTeh STANDARD PREVIEW (standards.iteh.ai)

[SIST ETS 300 557 E7:2003](https://standards.iteh.ai/catalog/standards/sist/0477e3e5-639e-47e3-af3f-3cc6330f0560/sist-ets-300-557-e7-2003)

<https://standards.iteh.ai/catalog/standards/sist/0477e3e5-639e-47e3-af3f-3cc6330f0560/sist-ets-300-557-e7-2003>

	3.4.1.1	General	38
	3.4.1.2	Measurement report.....	38
3.4.2		Transfer of messages and link layer service provision.....	38
3.4.3		Channel assignment procedure.....	38
	3.4.3.1	Channel assignment initiation	39
	3.4.3.2	Assignment completion.....	41
	3.4.3.3	Abnormal cases	41
3.4.4		Handover procedure	42
	3.4.4.1	Handover initiation	42
	3.4.4.2	Physical channel establishment.....	43
		3.4.4.2.1 Finely synchronized cell case.....	43
		3.4.4.2.2 Non synchronized cell case.....	44
		3.4.4.2.3 Pseudo-synchronized cell case.....	44
		3.4.4.2.4 Pre-synchronized cell case	44
	3.4.4.3	Handover completion	45
	3.4.4.4	Abnormal cases	45
3.4.5		Frequency redefinition procedure	46
	3.4.5.1	Abnormal cases	46
3.4.6		Channel mode modify procedure.....	47
	3.4.6.1	Initiation of the channel mode modify procedure	47
	3.4.6.2	Completion of channel mode modify procedure	47
	3.4.6.3	Abnormal cases	47
3.4.7		Ciphering mode setting procedure.....	47
	3.4.7.1	Ciphering mode setting initiation	47
	3.4.7.2	Ciphering mode setting completion.....	48
3.4.8		Additional channel assignment procedure.....	48
	3.4.8.1	Additional assignment procedure initiation.....	49
	3.4.8.2	Additional assignment procedure completion	49
	3.4.8.3	Abnormal cases	49
3.4.9		Partial channel release procedure	49
	3.4.9.1	Partial release procedure initiation.....	49
	3.4.9.2	Abnormal cases	49
3.4.10		Classmark change procedure.....	50
3.4.11		Classmark interrogation procedure.....	50
	3.4.11.1	Classmark interrogation initiation.....	50
	3.4.11.2	Classmark interrogation completion	50
3.5		RR connection release procedure.....	51
3.5.1		Normal release procedure	51
	3.5.1.1	Channel release procedure initiation.....	51
	3.5.1.2	Abnormal cases	51
3.5.2		Radio link failure	51
	3.5.2.1	Mobile side	52
	3.5.2.2	Network side	52
3.5.3		RR connection abortion	52
3.6		Receiving a RR STATUS message by a RR entity.....	52
4		Elementary procedures for Mobility Management	53
4.1		General.....	53
	4.1.1	Type of MM procedures.....	53
	4.1.2	MM sublayer states.....	54
		4.1.2.1 MM sublayer states in the Mobile Station	54
		4.1.2.1.1 Main states	54
		4.1.2.1.2 Substates of the MM IDLE state	57
	4.1.2.2	The update Status.....	58
	4.1.2.3	MM sublayer states on the network side.....	59
4.2		Behaviour in MM IDLE State	59
4.2.1		Primary Service State selection.....	60
	4.2.1.1	Selection of the Service State after Power On.....	60
	4.2.1.2	Other Cases.....	60
4.2.2		Detailed Description of the MS behaviour in MM IDLE State.	60
	4.2.2.1	Service State, NORMAL SERVICE.....	60
	4.2.2.2	Service State, ATTEMPTING TO UPDATE.....	61
	4.2.2.3	Service State, LIMITED SERVICE.....	61

	4.2.2.4	Service State, NO IMSI.....	61
	4.2.2.5	Service State, SEARCH FOR PLMN, NORMAL SERVICE.....	61
	4.2.2.6	Service State, SEARCH FOR PLMN.....	62
4.3	4.2.3	Service state when back to state MM IDLE from another state	62
	4.3	MM common procedures.....	63
	4.3.1	TMSI reallocation procedure	63
	4.3.1.1	TMSI reallocation initiation by the network	63
	4.3.1.2	TMSI reallocation completion by the Mobile Station.....	63
	4.3.1.3	TMSI reallocation completion in the network.....	63
	4.3.1.4	Abnormal cases.....	64
	4.3.2	Authentication procedure	64
	4.3.2.1	Authentication request by the network.....	65
	4.3.2.2	Authentication response by the Mobile Station.....	65
	4.3.2.3	Authentication processing in the network	65
	4.3.2.4	Ciphering key sequence number	65
	4.3.2.5	Unsuccessful authentication.....	65
	4.3.2.6	Abnormal cases.....	66
	4.3.3	Identification procedure	67
	4.3.3.1	Identity request by the network.....	67
	4.3.3.2	Identification response by the Mobile Station	67
	4.3.3.3	Abnormal cases.....	67
	4.3.4	IMSI detach procedure	68
	4.3.4.1	IMSI detach initiation by the Mobile Station	68
	4.3.4.2	IMSI detach procedure in the network.....	68
	4.3.4.3	IMSI detach completion by the Mobile Station.....	68
	4.3.4.4	Abnormal cases.....	68
	4.3.5	Abort procedure.....	68
	4.3.5.1	Abort procedure initiation by the network	69
	4.3.5.2	Abort procedure in the Mobile Station	69
4.4	4.4	MM specific procedures.....	69
	4.4.1	Location updating procedure.....	69
	4.4.2	Periodic updating.....	70
	4.4.3	IMSI attach procedure.....	71
	4.4.4	Generic Location Updating procedure.....	71
	4.4.4.1	Location updating initiation by the Mobile Station.....	71
	4.4.4.1a	Network Request for Additional MS Capability Information	71
	4.4.4.2	Identification request from the network.....	71
	4.4.4.3	Authentication by the network.....	71
	4.4.4.4	Ciphering mode setting by the network	72
	4.4.4.5	Attempt Counter	72
	4.4.4.6	Location updating accepted by the network	72
	4.4.4.7	Location updating not accepted by the network	73
	4.4.4.8	Release of RR connection after location updating	73
	4.4.4.9	Abnormal cases on the Mobile Station side	73
	4.4.4.10	Abnormal cases on the network side.....	75
4.5	4.5	Connection management sublayer service provision	76
	4.5.1	MM connection establishment.....	76
	4.5.1.1	MM connection establishment initiated by the mobile station	76
	4.5.1.2	Abnormal cases.....	78
	4.5.1.3	MM connection establishment initiated by the network	79
	4.5.1.4	Abnormal cases.....	79
	4.5.1.5	MM connection establishment for emergency calls.....	79
	4.5.1.6	Call re-establishment.....	80
	4.5.1.6.1	Call re-establishment, initiation by the mobile station.....	80
	4.5.1.6.2	Abnormal cases	81
	4.5.1.7	Forced release during MO MM connection establishment	82
4.5.2	4.5.2	MM connection information transfer phase	83
	4.5.2.1	Sending CM messages	83
	4.5.2.2	Receiving CM messages.....	83
	4.5.2.3	Abnormal cases.....	83
4.5.3	4.5.3	MM connection release	84

	4.5.3.1	Release of associated RR connection	84
4.6		Receiving a MM STATUS message by a MM entity.	84
5		Elementary procedures for circuit-switched Call Control	85
5.1		Overview	85
	5.1.1	General	85
	5.1.2	Call Control States	88
	5.1.2.1	Call states at the Mobile Station side of the interface	88
	5.1.2.1.1	Null (State U0)	88
	5.1.2.1.2	MM Connection pending (U0.1)	88
	5.1.2.1.3	Call initiated (U1)	88
	5.1.2.1.4	Mobile originating call proceeding (U3)	88
	5.1.2.1.5	Call delivered (U4)	88
	5.1.2.1.6	Call present (U6)	88
	5.1.2.1.7	Call received (U7)	88
	5.1.2.1.8	Connect Request (U8)	88
	5.1.2.1.9	Mobile terminating call confirmed (U9)	88
	5.1.2.1.10	Active (U10)	88
	5.1.2.1.11	Disconnect request (U11)	89
	5.1.2.1.12	Disconnect indication (U12)	89
	5.1.2.1.13	Release request (U19)	89
	5.1.2.1.14	Mobile originating modify (U26)	89
	5.1.2.1.15	Mobile terminating modify (U27)	89
	5.1.2.2	Network call states	89
	5.1.2.2.1	Null (State N0)	89
	5.1.2.2.2	MM connection pending (N0.1)	89
	5.1.2.2.3	Call initiated (N1)	89
	5.1.2.2.4	Mobile originating call proceeding (N3)	89
	5.1.2.2.5	Call delivered (N4)	89
	5.1.2.2.6	Call present (N6)	89
	5.1.2.2.7	Call received (N7)	90
	5.1.2.2.8	Connect request (N8)	90
	5.1.2.2.9	Mobile terminating call confirmed (N9)	90
	5.1.2.2.10	Active (N10)	90
	5.1.2.2.11	{Not used}	90
	5.1.2.2.12	Disconnect indication (N12)	90
	5.1.2.2.13	Release request (N19)	90
	5.1.2.2.14	Mobile originating modify (N26)	90
	5.1.2.2.15	Mobile terminating modify (N27)	90
	5.1.2.2.16	Connect Indication (N28)	90
5.2		Call establishment procedures	91
	5.2.1	Mobile originating call establishment	91
	5.2.1.1	Call initiation	91
	5.2.1.2	Receipt of a setup message	92
	5.2.1.3	Receipt of a CALL PROCEEDING message	93
	5.2.1.4	Notification of progressing mobile originated call	94
	5.2.1.4.1	Notification of interworking in connection with mobile originated call establishment	94
	5.2.1.4.2	Call progress in the PLMN/ISDN environment	94
	5.2.1.5	Alerting	94
	5.2.1.6	Call connected	95
	5.2.1.7	Call rejection	96
	5.2.1.8	Transit network selection	96
	5.2.1.9	Traffic channel assignment at mobile originating call establishment	96
	5.2.1.10	Call queuing at mobile originating call establishment	96
	5.2.2	Mobile terminating call establishment	96
	5.2.2.1	Call indication	96
	5.2.2.2	Compatibility checking	97
	5.2.2.3	Call confirmation	97
	5.2.2.3.1	Response to SETUP	97

iTeh STANDARD (standards.itteh.ai)

3cc6301f74/sist-ets-300-557-e7-2003
<https://standards.itteh.ai/catalog/standards/sist-300-557-e7-2003>

ETS 300 557 (GSM 04.08 version 4.16.1): January 1997

	5.2.2.3.2	Receipt of CALL CONFIRMED and ALERTING by the network.....	98
	5.2.2.3.3	Call failure procedures.....	98
	5.2.2.3.4	Called Mobile Station clearing during mobile terminating call establishment...	98
	5.2.2.4	Notification of interworking in connection with mobile terminating call establishment	99
	5.2.2.5	Call accept.....	100
	5.2.2.6	Active indication.....	100
	5.2.2.7	Traffic channel assignment at mobile terminating call establishment	100
	5.2.2.8	Call queuing at mobile terminating call establishment.....	101
	5.2.2.9	User connection attachment during a mobile terminating call	101
5.3		Signalling procedures during the "active" state.....	102
	5.3.1	User notification procedure	102
	5.3.2	Call rearrangements.....	102
	5.3.3	Not used.....	102
	5.3.4	Support of Dual Services.....	102
	5.3.4.1	Service Description.....	102
	5.3.4.2	Call establishment	103
	5.3.4.2.1	Mobile Originating Establishment	103
	5.3.4.2.2	Mobile Terminating Establishment.....	104
	5.3.4.3	Changing the Call Mode	104
	5.3.4.3.1	Initiation of in-call modification.....	104
	5.3.4.3.2	Successful completion of in-call modification.....	104
	5.3.4.3.3	Change of the channel configuration ..	105
	5.3.4.3.4	Failure of in-call modification	105
	5.3.4.4	Abnormal procedures	105
5.4		Call clearing	107
	5.4.1	Terminology.....	107
	5.4.2	Exception conditions.....	107
	5.4.3	Clearing initiated by the Mobile Station	107
	5.4.3.1	Initiation of call clearing	107
	5.4.3.2	Receipt of a DISCONNECT message from the Mobile Station.....	108
	5.4.3.3	Receipt of a RELEASE message from the network	108
	5.4.3.4	Receipt of a RELEASE COMPLETE message from the Mobile Station	108
	5.4.3.5	Abnormal cases.....	108
	5.4.4	Clearing initiated by the network	109
	5.4.4.1	Clearing when tones/announcements provided	109
	5.4.4.1.1	Receipt of a DISCONNECT message with progress indicator #8 from the network	109
	5.4.4.1.2	Expiry of timer T306.....	109
	5.4.4.2	Clearing when tones/announcements not provided	109
	5.4.4.2.1	Receipt of a DISCONNECT message without progress indicator or with progress indicator different from #8 from the network.....	109
	5.4.4.2.2	Receipt of a RELEASE message from the Mobile Station	110
	5.4.4.2.3	Abnormal cases	110
	5.4.4.3	Completion of clearing.....	110
	5.4.4.3.1	Abnormal cases	110
	5.4.5	Clear collision	110
5.5		Miscellaneous procedures	111
	5.5.1	In-band tones and announcements.....	111
	5.5.2	Call collisions.....	111
	5.5.3	Status procedures	111
	5.5.3.1	Status enquiry procedure.....	111

	5.5.3.2	Reception of a STATUS message by a CC entity	112
	5.5.3.2.1	STATUS message with incompatible state.....	112
	5.5.3.2.2	STATUS message with compatible state.....	112
5.5.4		Call re-establishment, mobile station side	112
	5.5.4.1	Indication from the mobility management sublayer.....	112
	5.5.4.2	Reaction of call control.....	112
	5.5.4.3	Completion of re-establishment	112
	5.5.4.4	Unsuccessful outcome.....	113
5.5.5		Call re-establishment, network side.....	113
	5.5.5.1	State alignment	113
5.5.6		Progress	113
5.5.7		DTMF protocol control procedure	113
	5.5.7.1	Start DTMF request by the Mobile Station	114
	5.5.7.2	Start DTMF response by the network	114
	5.5.7.3	Stop DTMF request by the Mobile Station	114
	5.5.7.4	Stop DTMF response by the network	114
	5.5.7.5	Sequencing of subsequent start DTMF requests by the Mobile Station	114
6		Support of packet services	116
7		Examples of structured procedures.....	117
7.1		General.....	117
	7.1.1	Paging request.....	117
	7.1.2	Immediate assignment	118
	7.1.3	Service request and contention resolution.....	118
	7.1.4	Authentication	119
	7.1.5	Ciphering mode setting.....	119
	7.1.6	Transaction phase	120
	7.1.6.1	Transmission mode change.....	120
	7.1.7	Channel release.....	120
7.2		Abnormal cases.....	120
7.3		Selected examples	121
	7.3.1	Location updating	121
	7.3.2	Mobile originating call establishment	122
	7.3.3	Mobile terminating call establishment.....	127
	7.3.4	Call clearing	130
	7.3.5	DTMF protocol control	132
	7.3.6	Handover	133
	7.3.7	In-call modification	136
	7.3.8	Call re-establishment.....	137
8		Handling of unknown, unforeseen, and erroneous protocol data	138
8.1		General.....	138
8.2		Message too short.....	138
8.3		Unknown or unforeseen transaction identifier	138
8.4		Unknown or unforeseen message type.....	139
8.5		Non-semantical mandatory information element errors	139
	8.5.1	Radio resource management	140
	8.5.2	Mobility management.....	140
	8.5.3	Call control.....	140
8.6		Unknown and unforeseen IEs in the non-imperative message part	140
	8.6.1	IEs unknown in the message.....	140
	8.6.2	Out of sequence IEs	140
	8.6.3	Repeated IEs	141
8.7		Non-imperative message part errors	141
	8.7.1	Syntactically incorrect optional IEs	141
	8.7.2	Conditional IE errors.....	141
8.8		Messages with semantically incorrect contents	141
9		MESSAGE FUNCTIONAL DEFINITIONS AND CONTENTS	142

9.1	Messages for Radio Resources management	143
9.1.1	Additional assignment	145
9.1.1.1	Mobile Allocation.....	145
9.1.1.2	Starting Time	145
9.1.2	Assignment command.....	146
9.1.2.1	Mode of the First Channel	147
9.1.2.2	Description of the Second Channel	147
9.1.2.3	Mode of the Second Channel	147
9.1.2.4	Mobile Allocation and Frequency List, after the starting time	147
9.1.2.5	Starting Time	147
9.1.2.6	Reference cell frequency list.....	149
9.1.2.7	Cell Channel Description	149
9.1.2.8	Cipher Mode Setting	149
9.1.3	Assignment complete	150
9.1.4	Assignment failure.....	151
9.1.5	Channel mode modify	152
9.1.5.1	Channel Description	152
9.1.6	Channel mode modify acknowledge	153
9.1.7	Channel release	154
9.1.8	Channel request	155
9.1.9	Ciphering mode command.....	157
9.1.10	Ciphering mode complete	157
9.1.10.1	Mobile Equipment Identity	157
9.1.11	Classmark change	158
9.1.11.1	Additional Mobile Station Classmark Information	158
9.1.11.2	Mobile Station Classmark.....	158
9.1.12	Classmark enquiry.....	158
9.1.13	Frequency redefinition	159
9.1.13.1	Cell Channel Description	159
9.1.14	Handover access.....	159
9.1.15	Handover command.....	160
9.1.15.1	Synchronization Indication	161
9.1.15.2	Mode of the First Channel	161
9.1.15.3	Description of the Second Channel	162
9.1.15.4	Mode of the Second Channel	162
9.1.15.5	Frequency Channel Sequence, Frequency List, Frequency short list and Mobile Allocation, after time.	162
9.1.15.6	Starting Time	163
9.1.15.7	Reference cell frequency list.....	163
9.1.15.8	Real Time Difference.....	163
9.1.15.9	Timing Advance	164
9.1.15.10	Cipher Mode Setting	164
9.1.16	Handover complete	164
9.1.16.1	Mobile Observed Time Difference	164
9.1.17	Handover failure	165
9.1.18	Immediate assignment.....	166
9.1.18.1	Mobile Allocation.....	167
9.1.18.2	Starting Time	167
9.1.18.3	IA Rest Octets (Frequency parameters, before time).....	167
9.1.19	Immediate assignment extended	168
9.1.19.1	Unnecessary IEs.....	169
9.1.19.2	Mobile Allocation.....	169
9.1.19.3	Starting Time	169
9.1.19.4	Maximum message length	169
9.1.19.5	IAX Rest Octets	169
9.1.20	Immediate assignment reject	170
9.1.20.1	Use of the indexes.....	171
9.1.20.2	Filling of the message.....	171
9.1.21	Measurement report	172
9.1.22	Paging request type 1.....	173
9.1.22.1	Unnecessary IE	174
9.1.22.2	Channels needed for Mobiles 1 and 2.....	174

	9.1.22.3	Mobile Identities	174
	9.1.22.4	P1 Rest Octets	174
9.1.23		Paging request type 2	175
	9.1.23.1	Channels needed for Mobiles 1 and 2	176
	9.1.23.2	Mobile Identity 3	176
	9.1.23.3	P2 Rest Octets	176
9.1.24		Paging request type 3	177
	9.1.24.1	Channels needed for Mobiles 1 and 2	178
	9.1.24.2	P3 Rest Octets	178
9.1.25		Paging response	178
	9.1.25.1	Mobile Station Classmark	179
9.1.26		Partial release	179
	9.1.26.1	Channel Description	179
9.1.27		Partial release complete	179
9.1.28		Physical information	180
9.1.29		RR Status	180
9.1.30		Synchronization channel information	181
9.1.31		System information Type 1	182
9.1.32		System information type 2	182
9.1.33		System information type 2bis	183
9.1.34		System information type 2ter	184
9.1.35		System information type 3	185
9.1.36		System information type 4	186
	9.1.36.1	CBCH Channel description	187
	9.1.36.2	CBCH Mobile Allocation	187
	9.1.36.3	SI 4 Rest Octets	187
9.1.37		System information type 5	187
9.1.38		System information type 5bis	188
9.1.39		System information type 5ter	189
9.1.40		System information type 6	189
	9.1.40.1	Cell Identity	190
	9.1.40.2	Location Area Identification	190
	9.1.40.3	Cell Options	190
	9.1.40.4	NCC permitted	190
9.1.41		System information type 7	190
9.1.42		System information type 8	191
9.2		Messages for mobility management	192
	9.2.1	Authentication reject	193
	9.2.2	Authentication request	193
	9.2.3	Authentication response	194
	9.2.4	CM Re-establishment request	194
	9.2.4.1	Location area identification	194
	9.2.4.2	Mobile Station Classmark	195
	9.2.5	CM service accept	195
	9.2.6	CM service reject	195
	9.2.7	CM service abort	196
	9.2.8	Abort	196
	9.2.9	CM service request	197
	9.2.9.1	Mobile Station Classmark	197
	9.2.10	Identity request	197
	9.2.11	Identity response	198
	9.2.12	IMSI detach indication	198
	9.2.12.1	Mobile Station Classmark	198
	9.2.13	Location updating accept	199
	9.2.13.1	Follow on proceed	199
	9.2.14	Location updating reject	199
	9.2.15	Location updating request	200
	9.2.15.1	Location area identification	200
	9.2.15.2	Mobile Station Classmark	200
	9.2.16	MM Status	201
	9.2.17	TMSI reallocation command	201
	9.2.18	TMSI reallocation complete	202
9.3		Messages for circuit-switched call control	203

9.3.1	Alerting	204
9.3.1.1	Alerting (network to mobile station direction).....	204
	9.3.1.1.1 Facility	204
	9.3.1.1.2 Progress indicator	204
	9.3.1.1.3 User-user	204
9.3.1.2	Alerting (mobile station to network direction).....	205
	9.3.1.2.1 Facility	205
	9.3.1.2.2 User-user	205
	9.3.1.2.3 SS version.....	205
9.3.2	Call confirmed	206
9.3.2.1	Repeat indicator.....	207
9.3.2.2	Bearer capability 1 and bearer capability 2	207
9.3.2.3	Cause	207
9.3.2.4	CC Capabilities	207
9.3.3	Call proceeding	208
9.3.3.1	Repeat indicator.....	209
9.3.3.2	Bearer capability 1 and bearer capability 2	209
9.3.3.3	Facility	209
9.3.3.4	Progress Indicator	209
9.3.4	Congestion control	209
9.3.4.1	Cause	210
9.3.5	Connect	210
9.3.5.1	Connect (network to mobile station direction)	210
	9.3.5.1.1 Facility	210
	9.3.5.1.2 Progress indicator.....	210
	9.3.5.1.3 User-user	210
9.3.5.2	Connect (mobile station to network direction)	211
	9.3.5.2.1 Facility	211
	9.3.5.2.2 User-user	211
	9.3.5.2.3 SS version.....	211
9.3.6	Connect acknowledge	212
9.3.7	Disconnect.....	212
9.3.7.1	Disconnect (network to mobile station direction)	212
	9.3.7.1.1 Facility	213
	9.3.7.1.2 Progress indicator.....	213
	9.3.7.1.3 User-user	213
9.3.7.2	Disconnect (mobile station to network direction)	213
	9.3.7.2.1 Facility	214
	9.3.7.2.2 User-user	214
	9.3.7.2.3 SS version.....	214
9.3.8	Emergency setup	214
9.3.8.1	Bearer capability	214
9.3.9	Facility	215
9.3.9.1	Facility (network to mobile station direction).....	215
9.3.9.2	Facility (mobile station to network direction).....	216
	9.3.9.2.1 SS version.....	216
9.3.10	Hold	217
9.3.11	Hold Acknowledge.....	217
9.3.12	Hold Reject.....	218
9.3.13	Modify	219
9.3.13.1	Low layer compatibility	219
9.3.13.2	High layer compatibility	219
9.3.13.3	Reverse call setup direction.....	219
9.3.14	Modify complete	220
9.3.14.1	Low layer compatibility	220
9.3.14.2	High layer compatibility	220
9.3.14.3	Reverse call setup direction.....	220
9.3.15	Modify reject	221
9.3.15.1	Low layer compatibility	221
9.3.15.2	High layer compatibility	221
9.3.16	Notify	222
9.3.17	Progress	222
9.3.17.1	User-user	222

iTeh STANDARDS PREVIEW
(standards.itteh.ai)

<https://standards.itteh.ai/catalog/standards/sist/0477e3e5-137c-4e3-a13f-3cc6330f0560/sist-ets-300-557-e7-2003>

9.3.18	Release.....	223
9.3.18.1	Release (network to mobile station direction)	223
9.3.18.1.1	Cause	224
9.3.18.1.2	Second cause	224
9.3.18.1.3	Facility	224
9.3.18.1.4	User-user	224
9.3.18.2	Release (mobile station to network direction)	224
9.3.18.2.1	Cause	225
9.3.18.2.2	Second cause	225
9.3.18.2.3	Facility	225
9.3.18.2.4	User-user	225
9.3.18.2.5	SS version	225
9.3.19	Release complete	225
9.3.19.1	Release complete (network to mobile station direction) ...	225
9.3.19.1.1	Cause	226
9.3.19.1.2	Facility	226
9.3.19.1.3	User-user	226
9.3.19.2	Release complete (mobile station to network direction) ...	226
9.3.19.2.1	Cause	227
9.3.19.2.2	Facility	227
9.3.19.2.3	User-user	227
9.3.19.2.4	SS version	227
9.3.20	Retrieve	227
9.3.21	Retrieve Acknowledge	228
9.3.22	Retrieve Reject	228
9.3.23	Setup	229
9.3.23.1	Setup (mobile terminated call establishment)	229
9.3.23.1.1	BC repeat indicator	230
9.3.23.1.2	Bearer capability 1 and bearer capability 2	230
9.3.23.1.3	Facility	230
9.3.23.1.4	Progress indicator	231
9.3.23.1.5	Called party subaddress	231
9.3.23.1.6	LLC repeat indicator	231
9.3.23.1.7	Low layer compatibility I	231
9.3.23.1.8	Low layer compatibility II	231
9.3.23.1.9	HLC repeat indicator	231
9.3.23.1.10	High layer compatibility i	231
9.3.23.1.11	High layer compatibility ii	231
9.3.23.1.12	User-user	231
9.3.23.2	Setup (mobile originating call establishment)	232
9.3.23.2.1	BC repeat indicator	233
9.3.23.2.2	Facility	233
9.3.23.2.3	LLC repeat indicator	233
9.3.23.2.4	Low layer compatibility I	234
9.3.23.2.5	Low layer compatibility II	234
9.3.23.2.6	HLC repeat indicator	234
9.3.23.2.7	High layer compatibility i	234
9.3.23.2.8	High layer compatibility ii	234
9.3.23.2.9	User-user	234
9.3.23.2.10	SS version	234
9.3.23.2.11	CLIR suppression	234
9.3.23.2.12	CLIR invocation	234
9.3.23.2.13	CC Capabilities	234
9.3.24	Start DTMF	235
9.3.25	Start DTMF Acknowledge	235
9.3.25.1	Keypad facility	235
9.3.26	Start DTMF reject	236
9.3.27	Status	236
9.3.27.1	Auxiliary states	236
9.3.28	Status enquiry	237
9.3.29	Stop DTMF	237
9.3.30	Stop DTMF acknowledge	238

9.3.31	User information	238
9.3.31.1	User-user	238
9.3.31.2	More data	239
10	General message format and information elements coding	239
10.1	Overview	239
10.2	Protocol Discriminator	240
10.3	Skip indicator and transaction identifier	240
10.3.1	Skip indicator	240
10.3.2	Transaction identifier	240
10.4	Message Type	241
10.5	Other information elements	245
10.5.1	Common information elements	247
10.5.1.1	Cell identity	247
10.5.1.2	Ciphering Key Sequence Number	248
10.5.1.3	Location Area Identification	249
10.5.1.4	Mobile Identity	251
10.5.1.5	Mobile Station Classmark 1	253
10.5.1.6	Mobile Station Classmark 2	255
10.5.1.7	Mobile Station Classmark 3	258
10.5.1.8	Spare Half Octet	259
10.5.2	Radio Resource management information elements	260
10.5.2.1a	BA Range	260
10.5.2.1b	Cell Channel Description	262
10.5.2.1b.1	General description	262
10.5.2.1b.2	Bit map 0 format	264
10.5.2.1b.3	Range 1 024 format	265
10.5.2.1b.4	Range 512 format	267
10.5.2.1b.5	Range 256 format	269
10.5.2.1b.6	Range 128 format	271
10.5.2.1b.7	Variable bit map format	272
10.5.2.2	Cell Description	274
10.5.2.3	Cell Options (BCCH)	275
10.5.2.3a	Cell Options (SACCH)	275
10.5.2.4	Cell Selection Parameters	278
10.5.2.5	Channel Description	280
10.5.2.6	Channel Mode	283
10.5.2.7	Channel Mode 2	284
10.5.2.8	Channel Needed	285
10.5.2.9	Cipher Mode Setting	286
10.5.2.10	Cipher Response	287
10.5.2.11	Control Channel Description	288
10.5.2.12	Frequency Channel Sequence	291
10.5.2.13	Frequency List	293
10.5.2.13.1	General description	293
10.5.2.13.2	Bit map 0 format	294
10.5.2.13.3	Range 1 024 format	295
10.5.2.13.4	Range 512 format	298
10.5.2.13.5	Range 256 format	301
10.5.2.13.6	Range 128 format	304
10.5.2.13.7	Variable bit map format	308
10.5.2.14	Frequency Short List	308
10.5.2.15	Handover Reference	309
10.5.2.16	IA Rest Octets	310
10.5.2.17	IAR Rest Octets	313
10.5.2.18	IAX Rest Octets	314
10.5.2.19	L2 Pseudo Length	315
10.5.2.20	Measurement Results	316
10.5.2.21	Mobile Allocation	321
10.5.2.21a	Mobile Time Difference	323
10.5.2.22	Neighbour Cells Description	324
10.5.2.23	P1 Rest Octets	326
10.5.2.24	P2 Rest Octets	327

iTeh STANDARDS PREMIUM
(standards.itteh.ai)

312560/sist-ets-300-557-e7-2003
https://standards.itcatalog/standards/sist-300-557-e7-2003-47e3-af3f