



SLOVENSKI STANDARD SIST ETS 300 557 E8:2003

01-december-2003

8 [[]HJb]`WV] b]`hY`_ca i b]_UW`g_]`g]ghYa `fZuU&L`E`GdYWZ]_UW`U`fYhY`d`Ugh]`nU
j a Ygb]_`a cV]`bY] UfUX]U`f] GA `\$('\$, Ł

Digital cellular telecommunications system (Phase 2) (GSM); Mobile radio interface;
Layer 3 specification (GSM 04.08)

iTeh STANDARD PREVIEW
(standards.iteh.ai)

Ta slovenski standard je istoveten z: **ETS 300 557 Edition 8**
<https://standards.iteh.ai/catalog/standards/sist/517d8040-171a-42af-9129-ecce7ec2d4193/sist-ets-300-557-e8-2003>

ICS:

33.070.50	Globalni sistem za mobilno telekomunikacijo (GSM)	Global System for Mobile Communication (GSM)
-----------	---	--


SIST ETS 300 557 E8:2003

en

iTeh STANDARD PREVIEW
(standards.iteh.ai)

SIST ETS 300 557 E8:2003

<https://standards.iteh.ai/catalog/standards/sist/5f7d8040-17fa-42af-9129-ece7ec2d4193/sist-ets-300-557-e8-2003>

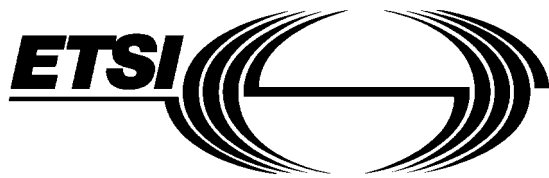

EUROPEAN
TELECOMMUNICATION
STANDARD

ETS 300 557

April 1997

Eighth Edition

Source: ETSI TC-SMG

Reference: RE/SMG-030408PR7

ICS: 33.020

Key words: Digital cellular telecommunications system, Global System for Mobile communications (GSM)



**Digital cellular telecommunications system (Phase2);
Mobile radio interface layer 3 specification
(GSM 04.08)**

ETSI

European Telecommunications Standards Institute

ETSI Secretariat

Postal address: F-06921 Sophia Antipolis CEDEX - FRANCE

Office address: 650 Route des Lucioles - Sophia Antipolis - Valbonne - FRANCE

X.400: c=fr, a=atlas, p=etsi, s=secretariat - **Internet:** secretariat@etsi.fr

Tel.: +33 4 92 94 42 00 - Fax: +33 4 93 65 47 16

Copyright Notification: No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 1997. All rights reserved.

iTeh STANDARD PREVIEW (standards.iteh.ai)

[SIST ETS 300 557 E8:2003](https://standards.iteh.ai/catalog/standards/sist/5f7d8040-17fa-42af-9129-ece7ec2d4193/sist-ets-300-557-e8-2003)

<https://standards.iteh.ai/catalog/standards/sist/5f7d8040-17fa-42af-9129-ece7ec2d4193/sist-ets-300-557-e8-2003>

	3.3.2.3	Abnormal cases	39			
3.4	RR connection transfer phase.....		40			
	3.4.1	SACCH procedures.....	40			
		3.4.1.1	General.....	40		
		3.4.1.2	Measurement report.....	40		
	3.4.2	Transfer of messages and link layer service provision.....	40			
	3.4.3	Channel assignment procedure	40			
		3.4.3.1	Channel assignment initiation.....	41		
		3.4.3.2	Assignment completion	42		
		3.4.3.3	Abnormal cases	42		
	3.4.4	Handover procedure.....	43			
		3.4.4.1	Handover initiation	44		
		3.4.4.2	Physical channel establishment.....	45		
			3.4.4.2.1	Finely synchronized cell case	45	
			3.4.4.2.2	Non synchronized cell case	45	
			3.4.4.2.3	Pseudo-synchronized cell case	46	
			3.4.4.2.4	Pre-synchronized cell case	47	
		3.4.4.3	Handover completion	47		
		3.4.4.4	Abnormal cases	47		
	3.4.5	Frequency redefinition procedure	48			
		3.4.5.1	Abnormal cases	49		
	3.4.6	Channel mode modify procedure.....	49			
		3.4.6.1	Initiation of the channel mode modify procedure.....	49		
		3.4.6.2	Completion of channel mode modify procedure.....	49		
		3.4.6.3	Abnormal cases	49		
	3.4.7	Ciphering mode setting procedure.....	49			
		3.4.7.1	Ciphering mode setting initiation	50		
		3.4.7.2	Ciphering mode setting completion	50		
	3.4.8	Additional channel assignment procedure.....	50			
		3.4.8.1	Additional assignment procedure initiation	51		
		3.4.8.2	Additional assignment procedure completion	51		
		3.4.8.3	Abnormal cases	51		
	3.4.9	Partial channel release procedure.....	51			
		3.4.9.1	Partial release procedure initiation.....	51		
		3.4.9.2	Abnormal cases	52		
	3.4.10	Classmark change procedure	52			
	3.4.11	Classmark interrogation procedure.....	52			
		3.4.11.1	Classmark interrogation initiation	52		
		3.4.11.2	Classmark interrogation completion	52		
3.5	RR connection release procedure		53			
	3.5.1	Normal release procedure	53			
		3.5.1.1	Channel release procedure initiation.....	53		
		3.5.1.2	Abnormal cases	53		
	3.5.2	Radio link failure	53			
		3.5.2.1	Mobile side.....	54		
		3.5.2.2	Network side	54		
	3.5.3	RR connection abortion	54			
3.6	Receiving a RR STATUS message by a RR entity.....		54			
4	Elementary procedures for Mobility Management.....		55			
	4.1	General	55			
		4.1.1	Type of MM procedures.....	55		
		4.1.2	MM sublayer states	56		
			4.1.2.1	MM sublayer states in the Mobile Station	56	
				4.1.2.1.1	Main states	56
				4.1.2.1.2	Substates of the MM IDLE state	59
			4.1.2.2	The update Status.....	60	
			4.1.2.3	MM sublayer states on the network side.....	61	
	4.2	Behaviour in MM IDLE State.....	61			
		4.2.1	Primary Service State selection	62		

	4.2.1.1	Selection of the Service State after Power On	62
	4.2.1.2	Other Cases.....	62
4.2.2		Detailed Description of the MS behaviour in MM IDLE State.	62
	4.2.2.1	Service State, NORMAL SERVICE	63
	4.2.2.2	Service State, ATTEMPTING TO UPDATE	63
	4.2.2.3	Service State, LIMITED SERVICE	63
	4.2.2.4	Service State, NO IMSI	64
	4.2.2.5	Service State, SEARCH FOR PLMN, NORMAL SERVICE ..	64
	4.2.2.6	Service State, SEARCH FOR PLMN	64
4.2.3		Service state when back to state MM IDLE from another state	64
4.3		MM common procedures	65
	4.3.1	TMSI reallocation procedure.....	65
	4.3.1.1	TMSI reallocation initiation by the network	66
	4.3.1.2	TMSI reallocation completion by the Mobile Station	66
	4.3.1.3	TMSI reallocation completion in the network.....	66
	4.3.1.4	Abnormal cases.....	66
4.3.2		Authentication procedure.....	67
	4.3.2.1	Authentication request by the network	67
	4.3.2.2	Authentication response by the Mobile Station.....	67
	4.3.2.3	Authentication processing in the network.....	67
	4.3.2.4	Ciphering key sequence number.....	68
	4.3.2.5	Unsuccessful authentication	68
	4.3.2.6	Abnormal cases.....	69
4.3.3		Identification procedure.....	70
	4.3.3.1	Identity request by the network	70
	4.3.3.2	Identification response by the Mobile Station.....	70
	4.3.3.3	Abnormal cases	70
4.3.4		IMSI detach procedure	71
	4.3.4.1	IMSI detach initiation by the Mobile Station	71
	4.3.4.2	IMSI detach procedure in the network	71
	4.3.4.3	IMSI detach completion by the Mobile Station	71
	4.3.4.4	Abnormal cases	71
4.3.5		Abort procedure	71
	4.3.5.1	Abort procedure initiation by the network	72
	4.3.5.2	Abort procedure in the Mobile Station.....	72
4.4		MM specific procedures.....	72
	4.4.1	Location updating procedure.....	72
	4.4.2	Periodic updating.....	73
	4.4.3	IMSI attach procedure	74
	4.4.4	Generic Location Updating procedure.....	74
	4.4.4.1	Location updating initiation by the Mobile Station	74
	4.4.4.1a	Network Request for Additional MS Capability Information ..	74
	4.4.4.2	Identification request from the network	74
	4.4.4.3	Authentication by the network	75
	4.4.4.4	Ciphering mode setting by the network	75
	4.4.4.5	Attempt Counter	75
	4.4.4.6	Location updating accepted by the network.....	75
	4.4.4.7	Location updating not accepted by the network	76
	4.4.4.8	Release of RR connection after location updating	76
	4.4.4.9	Abnormal cases on the Mobile Station side	77
	4.4.4.10	Abnormal cases on the network side	78
4.5		Connection management sublayer service provision	79
	4.5.1	MM connection establishment.....	79
	4.5.1.1	MM connection establishment initiated by the mobile station.....	79
	4.5.1.2	Abnormal cases.....	81
	4.5.1.3	MM connection establishment initiated by the network	82
	4.5.1.4	Abnormal cases.....	82
	4.5.1.5	MM connection establishment for emergency calls.....	83
	4.5.1.6	Call re-establishment.....	83

	4.5.1.6.1	Call re-establishment, initiation by the mobile station	84
	4.5.1.6.2	Abnormal cases.....	85
	4.5.1.7	Forced release during MO MM connection establishment...	86
4.5.2		MM connection information transfer phase.....	86
	4.5.2.1	Sending CM messages.....	87
	4.5.2.2	Receiving CM messages	87
	4.5.2.3	Abnormal cases	87
4.5.3		MM connection release	87
	4.5.3.1	Release of associated RR connection.....	87
4.6		Receiving a MM STATUS message by a MM entity.....	87
5		Elementary procedures for circuit-switched Call Control.....	88
5.1		Overview	88
	5.1.1	General.....	88
	5.1.2	Call Control States.....	91
	5.1.2.1	Call states at the Mobile Station side of the interface.....	91
	5.1.2.1.1	Null (State U0).....	91
	5.1.2.1.2	MM Connection pending (U0.1).....	91
	5.1.2.1.3	Call initiated (U1)	91
	5.1.2.1.4	Mobile originating call proceeding (U3) .	91
	5.1.2.1.5	Call delivered (U4)	91
	5.1.2.1.6	Call present (U6)	91
	5.1.2.1.7	Call received (U7)	91
	5.1.2.1.8	Connect Request (U8).....	91
	5.1.2.1.9	Mobile terminating call confirmed (U9) ..	91
	5.1.2.1.10	Active (U10)	91
	5.1.2.1.11	Disconnect request (U11)	92
	5.1.2.1.12	Disconnect indication (U12).....	92
	5.1.2.1.13	Release request (U19)	92
	5.1.2.1.14	Mobile originating modify (U26).....	92
	5.1.2.1.15	Mobile terminating modify (U27).....	92
	5.1.2.2	Network call states.....	92
	5.1.2.2.1	Null (State N0).....	92
	5.1.2.2.2	MM connection pending (N0.1).....	92
	5.1.2.2.3	Call initiated (N1)	92
	5.1.2.2.4	Mobile originating call proceeding (N3) .	92
	5.1.2.2.5	Call delivered (N4)	92
	5.1.2.2.6	Call present (N6)	92
	5.1.2.2.7	Call received (N7)	93
	5.1.2.2.8	Connect request (N8).....	93
	5.1.2.2.9	Mobile terminating call confirmed (N9) ..	93
	5.1.2.2.10	Active (N10)	93
	5.1.2.2.11	{Not used}.....	93
	5.1.2.2.12	Disconnect indication (N12).....	93
	5.1.2.2.13	Release request (N19)	93
	5.1.2.2.14	Mobile originating modify (N26).....	93
	5.1.2.2.15	Mobile terminating modify (N27).....	93
	5.1.2.2.16	Connect Indication (N28)	93
5.2		Call establishment procedures	94
	5.2.1	Mobile originating call establishment.....	94
	5.2.1.1	Call initiation	94
	5.2.1.2	Receipt of a setup message	95
	5.2.1.3	Receipt of a CALL PROCEEDING message	96
	5.2.1.4	Notification of progressing mobile originated call.....	97
	5.2.1.4.1	Notification of interworking in connection with mobile originated call establishment	97
	5.2.1.4.2	Call progress in the PLMN/ISDN environment.....	97

	5.2.1.5	Alerting	97
	5.2.1.6	Call connected	98
	5.2.1.7	Call rejection.....	99
	5.2.1.8	Transit network selection.....	99
	5.2.1.9	Traffic channel assignment at mobile originating call establishment	99
	5.2.1.10	Call queuing at mobile originating call establishment.....	99
5.2.2		Mobile terminating call establishment.....	99
	5.2.2.1	Call indication	99
	5.2.2.2	Compatibility checking	100
	5.2.2.3	Call confirmation	100
	5.2.2.3.1	Response to SETUP	100
	5.2.2.3.2	Receipt of CALL CONFIRMED and ALERTING by the network	100
	5.2.2.3.3	Call failure procedures	101
	5.2.2.3.4	Called Mobile Station clearing during mobile terminating call establishment..	101
	5.2.2.4	Notification of interworking in connection with mobile terminating call establishment.....	101
	5.2.2.5	Call accept	102
	5.2.2.6	Active indication	102
	5.2.2.7	Traffic channel assignment at mobile terminating call establishment	102
	5.2.2.8	Call queuing at mobile terminating call establishment.....	102
	5.2.2.9	User connection attachment during a mobile terminating call.....	102
5.3		Signalling procedures during the "active" state	103
	5.3.1	User notification procedure.....	103
	5.3.2	Call rearrangements	103
	5.3.3	Not used	103
	5.3.4	Support of Dual Services.....	103
	5.3.4.1	Service Description	103
	5.3.4.2	Call establishment.....	104
	5.3.4.2.1	Mobile Originating Establishment	104
	5.3.4.2.2	Mobile Terminating Establishment	105
	5.3.4.3	Changing the Call Mode.....	105
	5.3.4.3.1	Initiation of in-call modification.....	105
	5.3.4.3.2	Successful completion of in-call modification.....	105
	5.3.4.3.3	Change of the channel configuration ...	106
	5.3.4.3.4	Failure of in-call modification.....	106
	5.3.4.4	Abnormal procedures	106
5.4		Call clearing	108
	5.4.1	Terminology	108
	5.4.2	Exception conditions	108
	5.4.3	Clearing initiated by the Mobile Station	108
	5.4.3.1	Initiation of call clearing	108
	5.4.3.2	Receipt of a DISCONNECT message from the Mobile Station.	109
	5.4.3.3	Receipt of a RELEASE message from the network	109
	5.4.3.4	Receipt of a RELEASE COMPLETE message from the Mobile Station.....	109
	5.4.3.5	Abnormal cases.....	109
	5.4.4	Clearing initiated by the network	110
	5.4.4.1	Clearing when tones/announcements provided.....	110
	5.4.4.1.1	Receipt of a DISCONNECT message with progress indicator #8 from the network	110
	5.4.4.1.2	Expiry of timer T306	110
	5.4.4.2	Clearing when tones/announcements not provided	110

	5.4.4.2.1	Receipt of a DISCONNECT message without progress indicator or with progress indicator different from #8 from the network	110
	5.4.4.2.2	Receipt of a RELEASE message from the Mobile Station	111
	5.4.4.2.3	Abnormal cases	111
	5.4.4.3	Completion of clearing	111
	5.4.4.3.1	Abnormal cases	111
	5.4.5	Clear collision	111
5.5		Miscellaneous procedures	112
	5.5.1	In-band tones and announcements	112
	5.5.2	Call collisions	112
	5.5.3	Status procedures	112
	5.5.3.1	Status enquiry procedure	112
	5.5.3.2	Reception of a STATUS message by a CC entity	113
	5.5.3.2.1	STATUS message with incompatible state	113
	5.5.3.2.2	STATUS message with compatible state	113
	5.5.4	Call re-establishment, mobile station side	113
	5.5.4.1	Indication from the mobility management sublayer	113
	5.5.4.2	Reaction of call control	113
	5.5.4.3	Completion of re-establishment	113
	5.5.4.4	Unsuccessful outcome	114
	5.5.5	Call re-establishment, network side	114
	5.5.5.1	State alignment	114
	5.5.6	Progress	114
	5.5.7	DTMF protocol control procedure	114
	5.5.7.1	Start DTMF request by the Mobile Station	115
	5.5.7.2	Start DTMF response by the network	115
	5.5.7.3	Stop DTMF request by the Mobile Station	115
	5.5.7.4	Stop DTMF response by the network	115
	5.5.7.5	Sequencing of subsequent start DTMF requests by the Mobile Station	115
6		Support of packet services	116
7		Examples of structured procedures	117
	7.1	General	117
	7.1.1	Paging request	117
	7.1.2	Immediate assignment	118
	7.1.3	Service request and contention resolution	118
	7.1.4	Authentication	119
	7.1.5	Ciphering mode setting	119
	7.1.6	Transaction phase	120
	7.1.6.1	Transmission mode change	120
	7.1.7	Channel release	120
	7.2	Abnormal cases	120
	7.3	Selected examples	121
	7.3.1	Location updating	121
	7.3.2	Mobile originating call establishment	122
	7.3.3	Mobile terminating call establishment	127
	7.3.4	Call clearing	130
	7.3.5	DTMF protocol control	132
	7.3.6	Handover	133
	7.3.7	In-call modification	136
	7.3.8	Call re-establishment	137
8		Handling of unknown, unforeseen, and erroneous protocol data	138

8.1	General	138
8.2	Message too short	138
8.3	Unknown or unforeseen transaction identifier	138
8.4	Unknown or unforeseen message type	139
8.5	Non-semantic mandatory information element errors	139
8.5.1	Radio resource management	140
8.5.2	Mobility management	140
8.5.3	Call control	140
8.6	Unknown and unforeseen IEs in the non-imperative message part	140
8.6.1	IEs unknown in the message	140
8.6.2	Out of sequence IEs	140
8.6.3	Repeated IEs	141
8.7	Non-imperative message part errors	141
8.7.1	Syntactically incorrect optional IEs	141
8.7.2	Conditional IE errors	141
8.8	Messages with semantically incorrect contents	141
9	MESSAGE FUNCTIONAL DEFINITIONS AND CONTENTS	142
9.1	Messages for Radio Resources management	143
9.1.1	Additional assignment	145
9.1.1.1	Mobile Allocation	145
9.1.1.2	Starting Time	145
9.1.2	Assignment command	146
9.1.2.1	Mode of the First Channel	147
9.1.2.2	Description of the Second Channel	147
9.1.2.3	Mode of the Second Channel	147
9.1.2.4	Mobile Allocation and Frequency List, after the starting time	147
9.1.2.5	Starting Time	147
9.1.2.6	Reference cell frequency list	149
9.1.2.7	Cell Channel Description	149
9.1.2.8	Cipher Mode Setting	149
9.1.3	Assignment complete	150
9.1.4	Assignment failure	151
9.1.5	Channel mode modify	152
9.1.5.1	Channel Description	152
9.1.6	Channel mode modify acknowledge	153
9.1.7	Channel release	154
9.1.8	Channel request	155
9.1.9	Ciphering mode command	157
9.1.10	Ciphering mode complete	157
9.1.10.1	Mobile Equipment Identity	157
9.1.11	Classmark change	158
9.1.11.1	Additional Mobile Station Classmark Information	158
9.1.11.2	Mobile Station Classmark	158
9.1.12	Classmark enquiry	158
9.1.13	Frequency redefinition	159
9.1.13.1	Cell Channel Description	159
9.1.14	Handover access	159
9.1.15	Handover command	160
9.1.15.1	Synchronization Indication	161
9.1.15.2	Mode of the First Channel	161
9.1.15.3	Description of the Second Channel	162
9.1.15.4	Mode of the Second Channel	162
9.1.15.5	Frequency Channel Sequence, Frequency List, Frequency short list and Mobile Allocation, after time	162
9.1.15.6	Starting Time	163
9.1.15.7	Reference cell frequency list	163
9.1.15.8	Real Time Difference	163
9.1.15.9	Timing Advance	164

	9.1.15.10	Cipher Mode Setting.....	164
9.1.16		Handover complete	164
	9.1.16.1	Mobile Observed Time Difference	164
9.1.17		Handover failure.....	165
9.1.18		Immediate assignment	166
	9.1.18.1	Mobile Allocation.....	167
	9.1.18.2	Starting Time	167
	9.1.18.3	IA Rest Octets (Frequency parameters, before time).....	167
9.1.19		Immediate assignment extended	168
	9.1.19.1	Unnecessary IEs	169
	9.1.19.2	Mobile Allocation.....	169
	9.1.19.3	Starting Time	169
	9.1.19.4	Maximum message length.....	169
	9.1.19.5	IAX Rest Octets.....	169
9.1.20		Immediate assignment reject	170
	9.1.20.1	Use of the indexes.....	171
	9.1.20.2	Filling of the message.....	171
9.1.21		Measurement report	172
9.1.22		Paging request type 1	173
	9.1.22.1	Unnecessary IE.....	174
	9.1.22.2	Channels needed for Mobiles 1 and 2	174
	9.1.22.3	Mobile Identities.....	174
	9.1.22.4	P1 Rest Octets.....	174
9.1.23		Paging request type 2.....	175
	9.1.23.1	Channels needed for Mobiles 1 and 2	176
	9.1.23.2	Mobile Identity 3	176
	9.1.23.3	P2 Rest Octets	176
9.1.24		Paging request type 3.....	177
	9.1.24.1	Channels needed for Mobiles 1 and 2	178
	9.1.24.2	P3 Rest Octets.....	178
9.1.25		Paging response.....	178
	9.1.25.1	Mobile Station Classmark	179
9.1.26		Partial release.....	179
	9.1.26.1	Channel Description.....	179
9.1.27		Partial release complete.....	179
9.1.28		Physical information	180
9.1.29		RR Status	180
9.1.30		Synchronization channel information.....	181
9.1.31		System information Type 1	182
9.1.32		System information type 2.....	182
9.1.33		System information type 2bis.....	183
9.1.34		System information type 2ter	184
9.1.35		System information type 3.....	185
9.1.36		System information type 4.....	186
	9.1.36.1	CBCH Channel description.....	187
	9.1.36.2	CBCH Mobile Allocation.....	187
	9.1.36.3	SI 4 Rest Octets.....	187
9.1.37		System information type 5.....	187
9.1.38		System information type 5bis.....	188
9.1.39		System information type 5ter	189
9.1.40		System information type 6.....	190
	9.1.40.1	Cell Identity	190
	9.1.40.2	Location Area Identification.....	190
	9.1.40.3	Cell Options.....	190
	9.1.40.4	NCC permitted.....	190
9.1.41		System information type 7.....	191
9.1.42		System information type 8.....	192
9.2		Messages for mobility management	193
	9.2.1	Authentication reject.....	194
	9.2.2	Authentication request.....	194

9.2.3	Authentication response	195
9.2.4	CM Re-establishment request.....	195
9.2.4.1	Location area identification	196
9.2.4.2	Mobile Station Classmark	196
9.2.5	CM service accept.....	196
9.2.6	CM service reject	196
9.2.7	CM service abort.....	197
9.2.8	Abort	197
9.2.9	CM service request.....	198
9.2.9.1	Mobile Station Classmark	198
9.2.10	Identity request	198
9.2.11	Identity response.....	199
9.2.12	IMSI detach indication.....	199
9.2.12.1	Mobile Station Classmark	199
9.2.13	Location updating accept.....	200
9.2.13.1	Follow on proceed	200
9.2.14	Location updating reject	200
9.2.15	Location updating request	201
9.2.15.1	Location area identification	201
9.2.15.2	Mobile Station Classmark	201
9.2.16	MM Status	202
9.2.17	TMSI reallocation command	202
9.2.18	TMSI reallocation complete	203
9.3	Messages for circuit-switched call control.....	204
9.3.1	Alerting	205
9.3.1.1	Alerting (network to mobile station direction)	205
9.3.1.1.1	Facility	205
9.3.1.1.2	Progress indicator	205
9.3.1.1.3	User-user.....	205
9.3.1.2	Alerting (mobile station to network direction)	206
9.3.1.2.1	Facility.....	206
9.3.1.2.2	User-user.....	206
9.3.1.2.3	SS version	206
9.3.2	Call confirmed	207
9.3.2.1	Repeat indicator	208
9.3.2.2	Bearer capability 1 and bearer capability 2	208
9.3.2.3	Cause	208
9.3.2.4	CC Capabilities.....	208
9.3.3	Call proceeding	209
9.3.3.1	Repeat indicator	210
9.3.3.2	Bearer capability 1 and bearer capability 2	210
9.3.3.3	Facility	210
9.3.3.4	Progress Indicator	210
9.3.4	Congestion control.....	210
9.3.4.1	Cause	211
9.3.5	Connect.....	211
9.3.5.1	Connect (network to mobile station direction)	211
9.3.5.1.1	Facility.....	211
9.3.5.1.2	Progress indicator	211
9.3.5.1.3	User-user.....	211
9.3.5.2	Connect (mobile station to network direction)	212
9.3.5.2.1	Facility.....	212
9.3.5.2.2	User-user.....	212
9.3.5.2.3	SS version	212
9.3.6	Connect acknowledge.....	213
9.3.7	Disconnect.....	213
9.3.7.1	Disconnect (network to mobile station direction)	213
9.3.7.1.1	Facility.....	214
9.3.7.1.2	Progress indicator	214
9.3.7.1.3	User-user.....	214

iTeh STANDARD PREVIEW
(standards.iteh.ai)

SIST ETS 300 557 E8:2003

<https://standards.iteh.ai/catalog/standards/sist/517d8040-1761-42af-9129-e7ec2d4193/sist-ets-300-557-e8-2003>

9.3.7.2	Disconnect (mobile station to network direction)	214
9.3.7.2.1	Facility	215
9.3.7.2.2	User-user	215
9.3.7.2.3	SS version.....	215
9.3.8	Emergency setup.....	215
9.3.8.1	Bearer capability	215
9.3.9	Facility	216
9.3.9.1	Facility (network to mobile station direction)	216
9.3.9.2	Facility (mobile station to network direction)	217
9.3.9.2.1	SS version.....	217
9.3.10	Hold.....	218
9.3.11	Hold Acknowledge	218
9.3.12	Hold Reject	219
9.3.13	Modify	220
9.3.13.1	Low layer compatibility	220
9.3.13.2	High layer compatibility	220
9.3.13.3	Reverse call setup direction	220
9.3.14	Modify complete	221
9.3.14.1	Low layer compatibility	221
9.3.14.2	High layer compatibility	221
9.3.14.3	Reverse call setup direction	221
9.3.15	Modify reject	222
9.3.15.1	Low layer compatibility	222
9.3.15.2	High layer compatibility	222
9.3.16	Notify	223
9.3.17	Progress	223
9.3.17.1	User-user	223
9.3.18	Release	224
9.3.18.1	Release (network to mobile station direction)	224
9.3.18.1.1	Cause.....	225
9.3.18.1.2	Second cause.....	225
9.3.18.1.3	Facility	225
9.3.18.1.4	User-user	225
9.3.18.2	Release (mobile station to network direction)	225
9.3.18.2.1	Cause.....	226
9.3.18.2.2	Second cause.....	226
9.3.18.2.3	Facility	226
9.3.18.2.4	User-user	226
9.3.18.2.5	SS version.....	226
9.3.19	Release complete.....	226
9.3.19.1	Release complete (network to mobile station direction)	226
9.3.19.1.1	Cause.....	227
9.3.19.1.2	Facility	227
9.3.19.1.3	User-user	227
9.3.19.2	Release complete (mobile station to network direction)	227
9.3.19.2.1	Cause.....	228
9.3.19.2.2	Facility	228
9.3.19.2.3	User-user	228
9.3.19.2.4	SS version.....	228
9.3.20	Retrieve	228
9.3.21	Retrieve Acknowledge.....	229
9.3.22	Retrieve Reject.....	229
9.3.23	Setup.....	230
9.3.23.1	Setup (mobile terminated call establishment).....	230
9.3.23.1.1	BC repeat indicator.....	231
9.3.23.1.2	Bearer capability 1 and bearer capability 2.....	231
9.3.23.1.3	Facility	231
9.3.23.1.4	Progress indicator.....	232
9.3.23.1.5	Called party subaddress.....	232

	9.3.23.1.6	LLC repeat indicator	232		
	9.3.23.1.7	Low layer compatibility I	232		
	9.3.23.1.8	Low layer compatibility II	232		
	9.3.23.1.9	HLC repeat indicator	232		
	9.3.23.1.10	High layer compatibility i	232		
	9.3.23.1.11	High layer compatibility ii	232		
	9.3.23.1.12	User-user	232		
9.3.23.2	Setup (mobile originating call establishment)		233		
	9.3.23.2.1	BC repeat indicator	234		
	9.3.23.2.2	Facility	234		
	9.3.23.2.3	LLC repeat indicator	234		
	9.3.23.2.4	Low layer compatibility I	235		
	9.3.23.2.5	Low layer compatibility II	235		
	9.3.23.2.6	HLC repeat indicator	235		
	9.3.23.2.7	High layer compatibility i	235		
	9.3.23.2.8	High layer compatibility ii	235		
	9.3.23.2.9	User-user	235		
	9.3.23.2.10	SS version	235		
	9.3.23.2.11	CLIR suppression	235		
	9.3.23.2.12	CLIR invocation	235		
	9.3.23.2.13	CC Capabilities	235		
9.3.24	Start DTMF		236		
9.3.25	Start DTMF Acknowledge		236		
	9.3.25.1	Keypad facility	236		
9.3.26	Start DTMF reject		237		
9.3.27	Status		237		
	9.3.27.1	Auxiliary states	237		
9.3.28	Status enquiry		238		
9.3.29	Stop DTMF		238		
9.3.30	Stop DTMF acknowledge		239		
9.3.31	User information		239		
	9.3.31.1	User-user	239		
	9.3.31.2	More data	240		
10	General message format and information elements coding		240		
10.1	Overview		240		
10.2	Protocol Discriminator		241		
10.3	Skip indicator and transaction identifier		241		
	10.3.1	Skip indicator	241		
	10.3.2	Transaction identifier	241		
10.4	Message Type		242		
10.5	Other information elements		246		
	10.5.1	Common information elements	248		
		10.5.1.1	Cell identity	248	
		10.5.1.2	Ciphering Key Sequence Number	249	
		10.5.1.3	Location Area Identification	250	
		10.5.1.4	Mobile Identity	252	
		10.5.1.5	Mobile Station Classmark 1	254	
		10.5.1.6	Mobile Station Classmark 2	256	
		10.5.1.7	Mobile Station Classmark 3	259	
		10.5.1.8	Spare Half Octet	260	
	10.5.2	Radio Resource management information elements	261		
		10.5.2.1a	BA Range	261	
		10.5.2.1b	Cell Channel Description	263	
			10.5.2.1b.1	General description	263
			10.5.2.1b.2	Bit map 0 format	265
			10.5.2.1b.3	Range 1 024 format	266
			10.5.2.1b.4	Range 512 format	268
			10.5.2.1b.5	Range 256 format	270
			10.5.2.1b.6	Range 128 format	272