INTERNATIONAL STANDARD

16353

First edition 2011-10-01

Information technology —
Telecommunications and information exchange between systems —
Front-end configuration command for NFC-WI (NFC-FEC)

Technologies de l'information — Télécommunications et échange d'informations entre systèmes — Commande à configuration frontale pour NFC-WI (NFC-FEC) (Standards.iteh.ai)

ISO/IEC 16353:2011 https://standards.iteh.ai/catalog/standards/sist/8664a274-5c7c-48e2-b38e-9f3b52eadec0/iso-iec-16353-2011



iTeh STANDARD PREVIEW (standards.iteh.ai)

ISO/IEC 16353:2011 https://standards.iteh.ai/catalog/standards/sist/8664a274-5c7c-48e2-b38e-9f3b52eadec0/iso-iec-16353-2011



COPYRIGHT PROTECTED DOCUMENT

© ISO/IEC 2011

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
Case postale 56 • CH-1211 Geneva 20
Tel. + 41 22 749 01 11
Fax + 41 22 749 09 47
E-mail copyright@iso.org
Web www.iso.org

Published in Switzerland

Contents Page

Forew	vord	iv
Introd	ductionduction	v
1	Scope	1
2	Conformance	1
3	Normative references	1
4	Terms and definitions	1
5	Conventions and notations	1
6	Acronyms	1
7	States	1
7.1	Escape state	2
7.2	Command Ready state	2
7.3	Command Busy state	2
7.4	Quit state	2
8	Commands and Responses .A	3
8.1	Command and response Format	3
8.2	Checksum (standards.itch.ai) Commands Responses	3
8.3	Commands	3
8.4	Responses	4
9	ISO/IEC 16353:2011 Information Transfer ards: itch ai/catalog/standards/sist/8664a274-5c7c-48c2-b38c	
9 9.1	Transcoiver Frames	4 1
9.1	Transceiver Frames98\62eadec0/iso-icc-\6353-201\	4

Foreword

ISO (the International Organization for Standardization) and IEC (the International Electrotechnical Commission) form the specialized system for worldwide standardization. National bodies that are members of ISO or IEC participate in the development of International Standards through technical committees established by the respective organization to deal with particular fields of technical activity. ISO and IEC technical committees collaborate in fields of mutual interest. Other international organizations, governmental and non-governmental, in liaison with ISO and IEC, also take part in the work. In the field of information technology, ISO and IEC have established a joint technical committee, ISO/IEC JTC 1.

International Standards are drafted in accordance with the rules given in the ISO/IEC Directives, Part 2.

The main task of the joint technical committee is to prepare International Standards. Draft International Standards adopted by the joint technical committee are circulated to national bodies for voting. Publication as an International Standard requires approval by at least 75 % of the national bodies casting a vote.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO and IEC shall not be held responsible for identifying any or all such patent rights.

ISO/IEC 16353 was prepared by Ecma International (as ECMA-390) and was adopted, under a special "fast-track procedure", by Joint Technical Committee ISO/IEC JTC 1, *Information technology*, in parallel with its approval by national bodies of ISO and IEC.

(standards.iteh.ai)

ISO/IEC 16353:2011 https://standards.iteh.ai/catalog/standards/sist/8664a274-5c7c-48e2-b38e-9f3b52eadec0/iso-iec-16353-2011

Introduction

ISO/IEC 28361 specifies a two-wire interface for which this International Standard defines commands, responses and their transmission, allowing the exchange of control and state information between the transceiver and the front-end as specified in ISO/IEC 28361. Such exchange may include indication of the presence of the RF field and control information to change data rates and communication modes of the front-end.

iTeh STANDARD PREVIEW (standards.iteh.ai)

ISO/IEC 16353:2011 https://standards.iteh.ai/catalog/standards/sist/8664a274-5c7c-48e2-b38e-9f3b52eadec0/iso-iec-16353-2011

iTeh STANDARD PREVIEW (standards.iteh.ai)

<u>ISO/IEC 16353:2011</u>

https://standards.iteh.ai/catalog/standards/sist/8664a274-5c7c-48e2-b38e-9f3b52eadec0/iso-iec-16353-2011

Information technology — Telecommunications and information exchange between systems — Front-end configuration command for NFC-WI (NFC-FEC)

1 Scope

This International Standard specifies commands for the Near Field Communication Wired Interface (NFC-WI) specified in ISO/IEC 28361. The commands allow exchange of control and state information between the transceiver and the front-end.

2 Conformance

To conform to this International Standard, an NFC-FEC device shall conform to all mandatory parts specified herein and all mandatory parts of ISO/IEC 28361 (NFC-WI).

iTeh STANDARD PREVIEW

3 Normative references (standards.iteh.ai)

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies tandards/sist/8664a274-5c7c-48e2-b38e-913b32eadec0/iso-icc-16353-2011

ISO/IEC 28361:2007, Information technology — Telecommunications and information exchange between systems — Near Field Communication Wired Interface (NFC-WI)

4 Terms and definitions

For the purposes of this document, the terms and definitions given in ISO/IEC 28361 apply.

5 Conventions and notations

For the purposes of this document the conventions and notations given in ISO/IEC 28361 apply.

6 Acronyms

For the purposes of this document the acronyms given in ISO/IEC 28361 apply.

7 States

NFC-FEC extends the compound NFC-WI Command state with the Escape, Quite, "Command Ready" and "Command Busy" sub-states as specified in Figure 1.

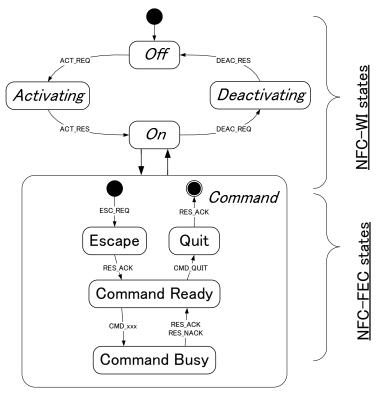


Figure 1 NFC-WI states and NFC-FEC sub-states (standards.iteh.ai)

7.1 Escape state

ISO/IEC 16353:2011

NFC-FEC shall move from the NFC-WI ON state to Escape by the Escape sequence (ESC_REQ) as defined in ISO/IEC 28361:2007, 7.5.1. NFC-FEC shall move from Escape to Command Ready after receiving RES ACK or after expiry of the timeout specified in 8.4.

7.2 Command Ready state

NFC-FEC allows transmission of commands in the Command Ready state. After submission of a command, NFC-FEC shall move to Command Busy state.

CMD QUIT or expiry of the timeout specified in 8.4 shall move NFC-FEC to the Quit state.

7.3 Command Busy state

When a response is transmitted, or after expiry of the timeout specified in 8.4, NFC-FEC shall move back to Command Ready state.

7.4 Quit state

Reception of RES ACK or after expiry of the timeout specified in 8.4, NFC-FEC shall move to ON.

8 Commands and Responses

8.1 Command and response Format

The command and response format is specified in Figure 2, the data field is optional and of arbitrary length.

8 bit header	Data	8 bit checksum

Figure 2 — Command and Response format

8.2 Checksum

The checksum shall be the bytewise exclusive OR of the Initialization Vector (11111111) and the Header and the Data.

The receiver shall respond with RES_NACK if it receives a wrong checksum.

8.3 Commands

Table 1 specifies the coding of commands.

Undefined commands are RFU and their use is prohibited.

Command Header	Name	(standards.iten.ai)	Expected Response
0001 1111	CMD QUIT	Quit	ACK or NACK
0000 0000	CMD NOP	No operation 16353-2011	ACK or NACK
0000 0001	CMD_IMP_106 littps://standard	Set Initiator passive communication mode 106kbps standards/sist/8664a2/4-5c/c-48e2-b	ACK or NACK
0000 0010	CMD_IMP_212	Set Initiator passive communication mode 212kbps	ACK or NACK
0000 0011	CMD_IMP_424	Set Initiator passive communication mode 424kbps	ACK or NACK
0000 1001	CMD_IMA_106	Set Initiator active communication mode 106kbps	ACK or NACK
0000 1010	CMD_IMA_212	Set Initiator active communication mode 212kbps	ACK or NACK
0000 1011	CMD_IMA_424	Set Initiator active communication mode 424kbps	ACK or NACK
0000 1100	CMD_IMA_847	Set Initiator active communication mode 847kbps	ACK or NACK
0000 1101	CMD_IMA_1695	Set Initiator active communication mode 1695kbps	ACK or NACK
0000 1110	CMD_IMA_3390	Set Initiator active communication mode 3390kbps	ACK or NACK
0000 1111	CMD_IMA_6780	Set Initiator active communication mode 6780kbps	ACK or NACK
0000 0100	CMD_TM	Set Target communication mode	ACK or NACK
0000 0101	CMD_RF_OFF	Switch RF field OFF	ACK or NACK
0000 0110	CMD_RF_ON	Switch RF field on	ACK or NACK
0001 0000	CMD_WR	Write register, followed by two data bytes (register address, value)	ACK or NACK
0001 0010	CMD_RR	Read register, followed by one data byte (address);	1 byte
0001 0001	CMD_WB	Write block, followed by six data bytes (2 bytes address, 4 bytes value)	ACK or NACK
0001 0011	CMD_RB	Read block, followed by two data byte (address);	4 bytes
0001 0100	CMD GS	Get status; reply shall be four data bytes	4 bytes