

# ETSI TS 124 581 V15.4.0 (2019-07)



**LTE;**  
**Mission Critical Video (MCVideo) media plane control;**  
**Protocol specification**  
**(3GPP TS 24.581 version 15.4.0 Release 15)**

*Standard PREVIEW*  
*(Standard ID: 11bd8adb-7f9b-472-8006-182b4ca704c5/etsi-ts-124-581-v15-4-0-2019-07)*  
*Full standard details: <https://standards.iteh.ai/catalog/standards/sist/11bd8adb-7f9b-472-8006-182b4ca704c5/etsi-ts-124-581-v15-4-0-2019-07>*



---

**Reference**RTS/TSGC-0124581vf40

---

---

**Keywords**LTE

---

**ETSI**

650 Route des Lucioles  
F-06921 Sophia Antipolis Cedex - FRANCE

---

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C  
Association à but non lucratif enregistrée à la  
Sous-Préfecture de Grasse (06) N° 7803/88

---

**Important notice**

---

The present document can be downloaded from:

<http://www.etsi.org/standards-search>

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the prevailing version of an ETSI deliverable is the one made publicly available in PDF format at [www.etsi.org/deliver](http://www.etsi.org/deliver).

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

<https://portal.etsi.org/TB/ETSIDeliverableStatus.aspx>

If you find errors in the present document, please send your comment to one of the following services:

<https://portal.etsi.org/People/CommiteeSupportStaff.aspx>

---

**Copyright Notification**

---

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© ETSI 2019.

All rights reserved.

**DECT™**, **PLUGTESTS™**, **UMTS™** and the ETSI logo are trademarks of ETSI registered for the benefit of its Members.

**3GPP™** and **LTE™** are trademarks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

**oneM2M™** logo is a trademark of ETSI registered for the benefit of its Members and of the oneM2M Partners.

**GSM®** and the GSM logo are trademarks registered and owned by the GSM Association.

---

# Intellectual Property Rights

## Essential patents

IPRs essential or potentially essential to normative deliverables may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "*Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards*", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<https://ipr.etsi.org/>).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

## Trademarks

The present document may include trademarks and/or tradenames which are asserted and/or registered by their owners. ETSI claims no ownership of these except for any which are indicated as being the property of ETSI, and conveys no right to use or reproduce any trademark and/or tradename. Mention of those trademarks in the present document does not constitute an endorsement by ETSI of products, services or organizations associated with those trademarks.

---

# Legal Notice

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities. These shall be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between 3GPP and ETSI identities can be found under <http://webapp.etsi.org/key/queryform.asp>.

---

# Modal verbs terminology

In the present document "**shall**", "**shall not**", "**should**", "**should not**", "**may**", "**need not**", "**will**", "**will not**", "**can**" and "**cannot**" are to be interpreted as described in clause 3.2 of the [ETSI Drafting Rules](#) (Verbal forms for the expression of provisions).

"**must**" and "**must not**" are **NOT** allowed in ETSI deliverables except when used in direct citation.

# Contents

Intellectual Property Rights .....	2
Legal Notice .....	2
Modal verbs terminology.....	2
Foreword.....	13
1 Scope .....	14
2 References .....	14
3 Definitions, symbols and abbreviations .....	15
3.1 Definitions .....	15
3.2 Symbols.....	16
3.3 Abbreviations .....	16
4 General .....	16
4.1 MCVideo media plane overview.....	16
4.1.1 Transmission Control.....	16
4.1.1.1 General .....	16
4.1.1.2 On-network transmission and reception control.....	17
4.1.1.3 Off-network transmission control .....	18
4.1.1.4 Determine on-network effective priority.....	19
4.1.1.5 Determine off-network effective priority .....	19
4.1.2 MBMS subchannel control .....	20
4.1.2.1 General .....	20
4.1.2.2 Start of a MCVideo transmission.....	20
4.1.2.3 During a media transmission.....	20
4.1.2.4 Ending the transmission .....	21
4.1.2.5 MBMS bearer announcement over an MBMS bearer.....	21
4.2 Internal structure of media plane control entities.....	21
4.2.1 Controlling MCVideo function.....	21
4.2.2 MCVideo client .....	23
4.2.3 Participating MCVideo function.....	25
4.2.3.1 General .....	25
4.2.3.2 Internal structure of the participating MCVideo function.....	25
4.2.3.3 The roles of the participating MCVideo function .....	26
4.2.3.3.1 For the transmission control procedures.....	26
4.2.3.3.2 For the use of MBMS bearer procedures.....	26
4.3 The media plane control channel.....	26
4.3.1 General.....	26
4.3.2 Control channel realization .....	26
4.3.3 Establishing a media plane control channel.....	27
4.3.3.1 General .....	27
5 Functional entities .....	27
5.1 General .....	27
5.2 MCVideo client .....	27
5.2.1 Introduction.....	27
5.2.2 Transmission participant in on-network mode.....	28
5.2.3 Transmission participant in off-network mode .....	28
5.3 Controlling MCVideo function .....	29
5.4 Participating MCVideo function .....	29
6 On-network transmission control .....	29
6.1 General .....	29
6.2 Transmission participant procedures .....	30
6.2.1 Transmission participant procedures at MCVideo session initialization .....	30
6.2.2 Transmission participant procedures at MCVideo call release .....	30
6.2.3 Transmission participant procedures at MCVideo call modification.....	30

6.2.4	Transmission participant state transition diagram for basic transmission control operation .....	30
6.2.4.1	General .....	30
6.2.4.2	State: 'Start-stop' .....	32
6.2.4.2.1	General .....	32
6.2.4.2.2	MCVideo call initiated, originating MCVideo user .....	32
6.2.4.2.3	MCVideo call established, terminating MCVideo user .....	32
6.2.4.3	State: 'U: has no permission to transmit' .....	32
6.2.4.3.1	General .....	32
6.2.4.3.2	Send Transmission Request message (Click Transmission send button) .....	33
6.2.4.3.3	Receive Transmission Granted message (R: Transmission Granted) .....	33
6.2.4.3.4	Void .....	33
6.2.4.4	State: 'U: pending request to transmit' .....	33
6.2.4.4.1	General .....	33
6.2.4.4.2	Receive Transmission rejected message (R: Transmission rejected) .....	33
6.2.4.4.3	Timer T100 (Transmission request) expired .....	34
6.2.4.4.4	Timer T100 (Transmission Request) expired N times .....	34
6.2.4.4.5	Receive Queue Position Info message (R: Queue Position Info) .....	34
6.2.4.4.6	Receive Transmission Granted message (R: Transmission Granted) .....	34
6.2.4.4.7	Send Transmission end request message (Click Transmission end button) .....	35
6.2.4.5	State: 'U: has permission to transmit' .....	35
6.2.4.5.1	General .....	35
6.2.4.5.2	Send RTP media packets (S: RTP media) .....	35
6.2.4.5.3	Send Transmission end request message (Click Transmission end button) .....	35
6.2.4.5.4	Void .....	36
6.2.4.5.5	Receive Transmission Revoked message (R: Transmission Revoked) .....	36
6.2.4.5.6	Receive Media reception notification message (R: Media Reception notification) .....	36
6.2.4.6	State: 'U: pending end of transmission' .....	36
6.2.4.6.1	General .....	36
6.2.4.6.2	Timer T101 (Transmission End Request) expired .....	36
6.2.4.6.3	Timer T101 (Transmission End Request) expired N times .....	36
6.2.4.6.4	Receive Transmission End Response message (R: Transmission end response) .....	37
6.2.4.6.5	Void .....	37
6.2.4.7	In any state .....	37
6.2.4.7.1	General .....	37
6.2.4.7.2	Receive MCVideo call release – step 1 (R: MCVideo call release - 1) .....	37
6.2.4.8	State: 'Call releasing' .....	37
6.2.4.8.1	General .....	37
6.2.4.8.2	Receive MCVideo call release – step 2 (R: MCVideo call release - 2) .....	38
6.2.4.9	State: 'U: queued transmission' .....	38
6.2.4.9.1	General .....	38
6.2.4.9.2	Receive Queue Position Info message (R: Queue Position Info) .....	38
6.2.4.9.3	Send Queue Position Request message (S: Queue Position Request) .....	38
6.2.4.9.4	Send Transmission end request message (Click Transmission end button) .....	38
6.2.4.9.5	void .....	39
6.2.4.9.6	Receive Transmission cancel request notify message (R: Transmission Cancel Request Notify) .....	39
6.2.4.9.7	Timer T102 (Transmission Queue Position Request) expired .....	39
6.2.4.9.8	Timer T102 (Transmission Queue Position Request) expired N times .....	39
6.2.4.9.9	Receive Transmission Granted message (R: Transmission Granted) .....	39
6.2.5	Transmission participant state transition diagram for reception control operation .....	40
6.2.5.1	General .....	40
6.2.5.2	State: 'Start-stop' .....	41
6.2.5.2.1	General .....	41
6.2.5.2.2	MCVideo call established, terminating MCVideo user .....	41
6.2.5.2.3	MCVideo call initiated, originating MCVideo user .....	42
6.2.5.3	State: 'U: reception controller' .....	42
6.2.5.3.1	General .....	42
6.2.5.3.2	Receive Media transmission notification message (R: Media Transmission Notification) .....	42
6.2.5.3.3	Send Receive Media Request message (Click video receive button) .....	42
6.2.5.3.4	Receive Transmission end notify message (R: Transmission end notify) .....	43
6.2.5.3.5	Receive MCVideo call release – step 1 (R: MCVideo call release - 1) .....	43
6.2.5.4	State: 'U: pending request to receive' .....	43

6.2.5.4.1	General .....	43
6.2.5.4.2	Reception of Receive media response (rejected) message (R: RM response (rejected)) .....	43
6.2.5.4.3	Timer T103 (Receive media request) expired .....	44
6.2.5.4.4	Timer T103 (Receive Media Request) expired N times .....	44
6.2.5.4.5	Reception of Receive media response (granted) message (R: RM response (granted)) .....	44
6.2.5.4.6	Media reception request cancel (Click video reception end button) .....	44
6.2.5.5	State: 'U: has permission to receive' .....	45
6.2.5.5.1	General .....	45
6.2.5.5.2	Receive RTP media packets (R: RTP media) .....	45
6.2.5.5.3	Media reception end request message (Click video reception end button) .....	45
6.2.5.5.4	Receive Media reception override notify message (R: Media Rx override notify) .....	45
6.2.5.5.5	Receive Media reception end request message (R: MRE request) .....	46
6.2.5.5.6	Void .....	46
6.2.5.6	State: 'U: pending reception release' .....	46
6.2.5.6.1	General .....	46
6.2.5.6.2	Timer T104 (Receive Media Release) expired .....	46
6.2.5.6.3	Timer T104 (Receive media release) expired N times .....	46
6.2.5.6.4	Receive Media Reception End Response message (R: MRE response) .....	46
6.2.5.6.5	Void .....	47
6.2.5.7	Void .....	47
6.2.5.7.1	Void .....	47
6.2.5.7.2	Void .....	47
6.2.5.7.3	Void .....	47
6.2.5.7.4	Void .....	47
6.2.5.8	State: 'U: terminated' .....	47
6.2.5.8.1	General .....	47
6.2.5.9	State: 'Call releasing' .....	47
6.2.5.9.1	General .....	47
6.2.5.9.2	Receive MCVideo call release – step 2 (R: MCVideo call release - 2) .....	47
6.3	Transmission control server procedures .....	48
6.3.1	General .....	48
6.3.2	Controlling MCVideo function procedures at MCVideo call initialization .....	48
6.3.2.1	General .....	48
6.3.2.2	Initial procedures .....	48
6.3.3	MCVideo transmission control procedures at MCVideo call release .....	49
6.3.4	Transmission control server state transition diagram for general transmission control operation .....	49
6.3.4.1	General .....	49
6.3.4.2	State: 'Start-stop' .....	51
6.3.4.2.1	General .....	51
6.3.4.2.2	MCVideo call initialization .....	51
6.3.4.3	State: 'G: Transmit Idle' .....	51
6.3.4.3.1	General .....	51
6.3.4.3.2	Enter the 'G: Transmit Idle' state .....	51
6.3.4.3.3	Receive Transmission Media Request message (R: Transmission Media Request) .....	52
6.3.4.3.4	Timer T2 (Transmit Idle) expired .....	52
6.3.4.3.5	Timer T1 (Inactivity) expired .....	53
6.3.4.3.6	Receive an implicit Transmission request (R: Implicit Transmission request) .....	53
6.3.4.4	State: 'G: Transmit Taken' .....	53
6.3.4.4.1	General .....	53
6.3.4.4.2	Enter the 'G: Transmit Taken' state .....	53
6.3.4.4.5	Receive RTP media packets (R: RTP media) .....	54
6.3.4.4.6	Receive Transmission End Request message (R: Transmission End Request) .....	54
6.3.4.4.7A	Receive Transmission Media Request message without pre-emptive priority (R: Transmission Media Request) .....	55
6.3.4.4.7	Receive Transmission Media Request message with pre-emptive priority (R: pre-emptive Transmission Media Request) .....	55
6.3.4.4.8	Receive Transmission request message from permitted transmission participant (R: Transmission Media Request) .....	56
6.3.4.4.9	Timer T4 (Transmission Grant) expired .....	56
6.3.4.4.10	Timer T4 (Transmission Grant) expired N times .....	56
6.3.4.4.11	Permitted MCVideo client release (R: client release) .....	56
6.3.4.4.12	Receive an implicit Transmission request (R: Implicit Transmission request) .....	56

6.3.4.5	State: 'G: pending Transmission Revoke' .....	57
6.3.4.5.1	General .....	57
6.3.4.5.2	Enter the 'G: pending Transmission Revoke' state .....	57
6.3.4.5.3	Receive RTP media packets (R: RTP media) .....	57
6.3.4.5.4	Receive Transmission End Request message (R: Transmission End Request) .....	57
6.3.4.5.5	Void .....	58
6.3.4.5.6	Void .....	58
6.3.4.6	In any state .....	58
6.3.4.6.1	General .....	58
6.3.4.6.2	Receive MCVideo call release - 1 .....	58
6.3.4.7	State: 'Releasing' .....	58
6.3.4.7.1	General .....	58
6.3.4.7.2	Receive MCVideo call release - 2 .....	58
6.3.5	Transmission control server state transition diagram for basic transmission control operation towards the transmission participant .....	59
6.3.5.1	General .....	59
6.3.5.2	State: 'Start-stop' .....	61
6.3.5.2.1	General .....	61
6.3.5.2.2	SIP Session initiated .....	61
6.3.5.3	State: 'U: not permitted and Transmit Idle' .....	65
6.3.5.3.1	General .....	65
6.3.5.3.2	Enter state 'U: not permitted and Transmit Idle' .....	65
6.3.5.3.3	Send Media Transmission Notify message (S: Media Transmission Notify) .....	65
6.3.5.3.4	Receive Transmission Media Request message (R: Transmission Media Request) .....	65
6.3.5.3.5	Send Transmission Grant message (S: Transmission Grant) .....	66
6.3.5.3.6	Send Transmission Reject message (S: Transmission Reject) .....	66
6.3.5.3.7	Receive Transmission End Request message (R: Transmission End Request) .....	66
6.3.5.3.8	Receive RTP media packets (R: media) .....	67
6.3.5.3.9	Receive an implicit Transmission request (R: Implicit Transmission request) .....	67
6.3.5.3.10	Send Transmission Idle message (S: Transmit Idle) .....	67
6.3.5.4	State 'U: not permitted and transmit taken' .....	68
6.3.5.4.1	General .....	68
6.3.5.4.2	Enter state 'U: not permitted and Transmit Taken' .....	68
6.3.5.4.3	Send Transmission Idle message (S: Transmit Idle) .....	68
6.3.5.4.4	Receive Transmission Media Request message (R: Transmission Media Request) .....	68
6.3.5.4.5	Receive Transmission End Request message (R: Transmission End Request) .....	71
6.3.5.4.6	Receive RTP media packets (R: media) .....	73
6.3.5.4.7	Send Transmission Queue Position Info message (R: Transmission Queue Position Request) .....	73
6.3.5.4.8	Receive an implicit Transmission request (R: Implicit Transmission request) .....	74
6.3.5.4.9	Send Transmission Grant message (S: Transmission Grant) .....	74
6.3.5.4.10	Send Media Transmission Notify message (S: Media Transmission Notify) .....	74
6.3.5.5	State: 'U: permitted' .....	74
6.3.5.5.1	General .....	74
6.3.5.5.2	Enter state 'U: permitted' .....	74
6.3.5.5.3	Receive Transmission End Request message (R: Transmission End Request) .....	75
6.3.5.5.3a	Receive Transmission End Response message (R: Transmission End Response) .....	75
6.3.5.5.4	Send Transmission Idle message (S: Transmit Idle) .....	75
6.3.5.5.5	Send Transmission Revoke message (S: Transmission Revoke) .....	75
6.3.5.5.6	Receive RTP media packets (R: media) .....	75
6.3.5.5.7	Receive Transmission Media Request message (R: Transmission Media Request) .....	75
6.3.5.5.8	Send RTP Media (S: media) .....	76
6.3.5.5.9	Send Media Transmission Notify message (S: Media Transmission Notify) .....	76
6.3.5.6	State: 'U: pending Transmit Revoke' .....	76
6.3.5.6.1	General .....	76
6.3.5.6.2	Enter state 'U pending Transmit Revoke' .....	76
6.3.5.6.3	Timer T3 (Transmission Revoke) expired .....	76
6.3.5.6.4	Receive RTP media packets (R: media) .....	77
6.3.5.6.5	Receive Transmission End Request message (R: Transmission End Request) .....	77
6.3.5.6.5a	Receive Transmission End Response message (R: Transmission End Response) .....	77
6.3.5.6.6	Send Transmission Idle message (S: Transmit Idle) .....	77
6.3.5.6.7	Send Media Transmission Notify message (S: Media Transmission Notify) .....	77
6.3.5.7	State 'U: not permitted but sends media' .....	78

6.3.5.7.1	General .....	78
6.3.5.7.2	Enter state 'U: not permitted but sends media' .....	78
6.3.5.7.3	Timer T3 (Transmission Revoke) expired .....	78
6.3.5.7.4	Receive Transmission End Request message (R: Transmission End Request) .....	78
6.3.5.8	In any state .....	79
6.3.5.8.1	General .....	79
6.3.5.8.2	Receive MCVideo call release – 1 .....	79
6.3.5.9	State: 'Releasing' .....	80
6.3.5.9.1	General .....	80
6.3.5.9.2	Receive MCVideo call release - 2 .....	80
6.3.6	Transmission control server state transition for general reception control .....	80
6.3.6.1	General .....	80
6.3.6.2	State: 'Start-stop' .....	81
6.3.6.2.1	General .....	81
6.3.6.2.2	MCVideo call initialization .....	81
6.3.6.3	State: 'Gr: Reception Idle' .....	82
6.3.6.3.1	General .....	82
6.3.6.3.2	Enter the 'Gr: Reception Idle' state .....	82
6.3.6.3.3	Receive Media Transmission Notify message (R: Media Transmission Notify) .....	82
6.3.6.3.4	Void .....	82
6.3.6.3.5	Timer T5 (Reception Inactivity) expired .....	82
6.3.6.3.6	Reception of Receive Media Request message (R: Receive Media Request) .....	83
6.3.6.3.7	Receive RTP media (R: RTP media) .....	83
6.3.6.4	State: 'Gr: Reception accepted' .....	83
6.3.6.4.1	General .....	83
6.3.6.4.2	Enter the 'Gr: Reception Accepted' state .....	83
6.3.6.4.3	Reception of Receive Media Request message (R: Receive Media Request) .....	84
6.3.6.4.4	Reception of Receive Media End Request message (R: Receive Media End Request) .....	84
6.3.6.4.5	Reception of Receive Media End Response (Granted) message (R: Receive Media End Response) .....	85
6.3.6.4.6	Reception of Receive Media End Response (Rejected) message (R: Receive Media End Response) .....	85
6.3.6.4.7	Receive RTP media (R: RTP media) .....	85
6.3.6.4.8	Timer T6 (Reception Granted) expires .....	85
6.3.6.4.9	Timer T6 (Reception Granted) expired N times .....	85
6.3.6.5	State: 'Gr: Any state' .....	86
6.3.6.5.1	General .....	86
6.3.6.5.2	Receive MCVideo call release - 1 .....	86
6.3.6.6	State: 'Gr: Releasing' .....	86
6.3.6.6.1	General .....	86
6.3.4.6.2	Receive MCVideo call release - 2 .....	86
6.3.7	Transmission control server state transition for basic reception control operations towards the transmission participant .....	86
6.3.7.1	General .....	86
6.3.7.2	State: 'Start-stop' .....	88
6.3.7.2.1	General .....	88
6.3.7.2.2	SIP Session initiated .....	88
6.3.7.3	State: 'U: not permitted to receive' .....	89
6.3.7.3.1	General .....	89
6.3.7.3.2	Enter state 'U: not permitted to receive' .....	89
6.3.7.3.3	Send Media Transmission Notification message (S: Media Transmission Notification) .....	89
6.3.7.3.4	Reception of Receive Media Request message (R: Receive Media Request) .....	89
6.3.7.3.5	Receive Media Reception End Response message (R: Media Reception End Resonse) .....	90
6.3.7.3.6	Send Receive Media Response (Granted) message (S: Receive Media Response (Granted)) .....	90
6.3.7.4	State: 'U: permitted to receive' .....	90
6.3.7.4.1	General .....	90
6.3.7.4.2	Enter state 'U: permitted to receive' .....	90
6.3.7.4.3	Send RTP media packets (S: RTP media) .....	90
6.3.7.4.4	Receive Media Reception End Request message (R: Media Reception End Request) .....	91
6.3.7.4.5	Send Media Transmission Notification message (S: Media Transmission Notification) .....	91
6.3.7.4.6	Send Media Reception Override Notify message (S: Media Reception Override Notify) .....	91
6.3.7.4.7	Send Transmission End Notify message (S: Transmission End Notify) .....	91



6.3.7.4.8	Send Media Reception End Request message (S: Media Reception End Request).....	91
6.3.7.4.9	Send Media Reception End Response message (S: Media Reception End Response).....	92
6.4	Participating MCVideo function transmission control procedures.....	92
6.4.1	General.....	92
6.4.2	Receive transmission control messages.....	92
6.4.3	Receive RTP media packets (R: RTP Media).....	93
6.4.4	Release of session.....	93
7	Off-network MCVideo service media plane procedures.....	94
7.1	General.....	94
7.2	Transmission participant procedures for single arbitrator approach.....	94
7.2.1	Transmission participant procedures at MCVideo session initialisation.....	94
7.2.1.2	Determine off-network transmission priority.....	95
7.2.2	Transmission participant procedures at MCVideo call release.....	96
7.2.3	Transmission participant state diagram – basic operation.....	96
7.2.3.1	General.....	96
7.2.3.2	State: 'Start-stop'.....	97
7.2.3.2.1	General.....	97
7.2.3.2.2	MCVideo call established – originating MCVideo user.....	98
7.2.3.2.3	MCVideo group call established – terminating MCVideo user.....	98
7.2.3.2.4	MCVideo private call established – terminating MCVideo user.....	98
7.2.3.2.5	Send Transmission Request message (click video transmission send button).....	98
7.2.3.2.6	Receive Transmission Arbitration Taken message (R: Transmission Arbitration Taken).....	99
7.2.3.2.7	Receive Transmission Granted message (R: Transmission Granted to other).....	99
7.2.3.2.8	Receive RTP media (R: RTP media).....	99
7.2.3.2.9	MCVideo broadcast call established – terminating MCVideo user.....	99
7.2.3.3	State: 'O: silence'.....	99
7.2.3.3.1	General.....	99
7.2.3.3.2	Send Transmission Request message (click video transmission send button).....	100
7.2.3.3.3	Receive RTP media (R: RTP media).....	100
7.2.3.3.4	Receive Transmission Granted message (R: Transmission Granted to other).....	100
7.2.3.3.5	Receive Transmission Request message (R: Transmission Request).....	100
7.2.3.3.6	Receive Transmission Arbitration Taken message (R: Transmission Arbitration Taken).....	101
7.2.3.3.7	Timer T230 (Inactivity) expired.....	101
7.2.3.4	State: 'O: has no permission'.....	101
7.2.3.4.1	General.....	101
7.2.3.4.2	Sending Transmission Request message (click video transmission send button).....	101
7.2.3.4.3	Receive Transmission Release message (R: Transmission Release).....	102
7.2.3.4.4	Receive Transmission Arbitration Release message (R: Transmission Arbitration Release).....	102
7.2.3.4.5	Timer T203 (End of RTP media) expired.....	102
7.2.3.4.6	Receive Transmission Granted message (R: Transmission Granted to other).....	102
7.2.3.4.7	Receive RTP media (R: RTP media).....	103
7.2.3.4.8	Receive Transmission Arbitration Taken message (R: Transmission Arbitration Taken).....	103
7.2.3.4.9	Receive Transmission Revoked message (R: Transmission Revoked).....	103
7.2.3.5	State: 'O: transmission arbitration'.....	104
7.2.3.5.1	General.....	104
7.2.3.5.2	Send RTP Media packets (S: RTP Media).....	104
7.2.3.5.3	Receive Transmission Release message (R: Transmission Release).....	104
7.2.3.5.4	Receive Transmission Request message (R: Transmission Request).....	104
7.2.3.5.5	Send Transmission Arbitration Release message (click video transmission end button with empty transmitter list).....	105
7.2.3.5.6	Send Transmission Arbitration Release message (click video transmission end button with non-empty transmitter list).....	105
7.2.3.5.7	Receive Transmission Request message with pre-emption indication and revoking self (R: Transmission Request with pre-emption).....	105
7.2.3.5.8	Receive Transmission Request message with pre-emption indication and revoking a transmitter (R: Transmission Request with pre-emption).....	106
7.2.3.5.9	Transmission time limit warning (Timer T206 expires).....	107
7.2.3.5.10	Transmission time limit reached with transmitter(s) in transmitter list (Timer T207 expires with transmitter(s)).....	107
7.2.3.5.11	Transmission time limit reached with no transmitter in transmitter list (Timer T207 expires with no transmitter).....	107

7.2.3.5.12	Receive RTP media (R: RTP media).....	107
7.2.3.5.13	Timer T205 (Transmission Granted) expired (timer T205 expired).....	108
7.2.3.5.14	Timer T205 (Transmission Granted) expired N times (Timer T205 expired N times).....	108
7.2.3.5.15	Timer T203 (End of RTP media) expired.....	108
7.2.3.6	State: 'O: has permission' .....	109
7.2.3.6.1	General .....	109
7.2.3.6.2	Send RTP Media packets (S: RTP Media) .....	109
7.2.3.6.3	Receive Transmission Release message (R: Transmission Release).....	109
7.2.3.6.4	Send Transmission Release message (click video transmission end button).....	109
7.2.3.6.5	Receive RTP media (R: RTP media).....	109
7.2.3.6.6	Transmission time limit warning (Timer T206 expires).....	110
7.2.3.6.7	Transmission time limit (Timer T207 expires).....	110
7.2.3.6.8	Timer T203 (End of RTP media) expired.....	110
7.2.3.6.9	Receive Transmission Granted message (R: Transmission Granted to other).....	110
7.2.3.6.10	Receive Transmission Arbitration Taken message (R: Transmission Arbitration Taken) .....	110
7.2.3.6.11	Receive Transmission Arbitration Release message with next arbitrator to me (R: Transmission Arbitration Release with next arbitrator to me).....	111
7.2.3.6.12	Receive Transmission Revoked message (R: Transmission Revoked) .....	111
7.2.3.6.13	Receive Transmission Arbitration Release message with next arbitrator to other (R: Transmission Arbitration Release with next arbitrator to other) .....	111
7.2.3.7	State: 'O: pending request' .....	111
7.2.3.7.1	General .....	111
7.2.3.7.2	Receive RTP media (R: RTP media).....	112
7.2.3.7.3	Receive Transmission Rejected message (R: Transmission Rejected).....	112
7.2.3.7.4	Send Transmission Release message (click video transmission end button with no transmitter) .....	112
7.2.3.7.5	Send Transmission Release message (click video transmission end button with transmitter) .....	113
7.2.3.7.6	Send Transmission Arbitration Taken message (Timer T201 expired N times).....	113
7.2.3.7.7	Receive Transmission Granted message (R: Transmission Granted to me) .....	113
7.2.3.7.8	Receive Transmission Granted message with next arbitrator (R: Transmission Granted with next arbitrator to me).....	114
7.2.3.7.9	Receive Transmission Granted message (R: Transmission Granted to other).....	114
7.2.3.7.10	Timer T201 (Transmission Request) expired (Timer T201 expired).....	114
7.2.3.7.11	Receive Transmission Request message (R: Transmission request) .....	114
7.2.3.7.12	Receive Transmission Arbitration Taken message (R: Transmission Arbitration Taken) .....	115
7.2.3.7.13	Receive Transmission Release message (R: Transmission Release).....	115
7.2.3.7.14	Receive Transmission Revoked message (R: Transmission Revoked) .....	115
7.2.3.8	State: 'O: pending delegated' .....	115
7.2.3.8.1	General .....	115
7.2.3.8.2	Receive RTP media (R: RTP Media) .....	115
7.2.3.8.3	Timer T205 (Transmission Granted) expired (timer T205 expired).....	116
7.2.3.8.4	Timer T205 (Transmission Granted) expired N times with transmitter(s) in the transmitter list (Timer T205 expired N times and transmitter in transmitter list).....	116
7.2.3.8.5	Timer T205 (Transmission Granted) expired N times with no transmitter in the transmitter list (Timer T205 expired N times and no transmitter in transmitter list) .....	117
7.2.3.8.6	Click Video transmission send button .....	117
7.2.3.8.7	Receive Transmission Release message (R: Transmission Release).....	117
7.2.3.8.8	Receive Transmission Request message (R: Transmission Request) .....	117
7.2.3.8.9	Receive Transmission Arbitration Taken message (R: Transmission Arbitration Taken) .....	117
7.2.3.8.10	Timer T208 (Transmission Arbitration Release) expired (timer T208 expired).....	118
7.2.3.8.11	Timer T208 (Transmission Arbitration Release) expired N times with transmitter(s) in the transmitter list (Timer T208 expired N times and transmitter in transmitter list).....	118
7.2.3.8.12	Timer T208 (Transmission Arbitration Release) expired N times with no transmitter in the transmitter list (Timer T208 expired N times and no transmitter in transmitter list).....	119
7.2.3.9	In any state .....	119
7.2.3.9.1	General .....	119
7.2.3.9.2	Receive MCVideo call release (R: MCVideo call release) .....	119
8	Communication release media plane procedures .....	119
9	Coding .....	119
9.1	Introduction .....	119

9.1.1	General.....	119
9.1.2	RTCP: APP message format.....	120
9.1.3	Application specific data field.....	121
9.1.4	Handling of unknown messages and fields.....	122
9.2	Transmission control.....	122
9.2.1	Introduction.....	122
9.2.2	Transmission control messages.....	122
9.2.2.1	General.....	122
9.2.3	Transmission control specific fields.....	123
9.2.3.1	Introduction.....	123
9.2.3.2	Transmission Priority field.....	124
9.2.3.3	Duration field.....	125
9.2.3.4	Reject Cause field.....	125
9.2.3.5	Queue Info field.....	126
9.2.3.6	Granted Party's Identity field.....	126
9.2.3.7	Permission to Request the Transmission field.....	126
9.2.3.8	User ID field.....	127
9.2.3.9	Message Sequence Number field.....	127
9.2.3.10	Message Type field.....	128
9.2.3.11	Transmission Indicator field.....	128
9.2.3.12	Source field.....	129
9.2.3.13	Track Info field.....	129
9.2.3.14	Queued User ID field.....	130
9.2.3.15	Queue Size field.....	131
9.2.3.16	SSRC field.....	131
9.2.3.17	Result.....	131
9.2.3.18	Message Name field.....	132
9.2.3.19	Reception Priority field.....	132
9.2.3.20	MCVideo Group Identity field.....	133
9.2.4	Transmission Request message.....	133
9.2.5	Transmission Granted message.....	134
9.2.6	Transmission Rejected message.....	136
9.2.6.1	General.....	136
9.2.6.2	Rejection cause codes and rejection cause phrase.....	137
9.2.7	Transmission Release message.....	137
9.2.8	Transmission Arbitration Taken message.....	138
9.2.9	Transmission Arbitration Released message.....	139
9.2.10	Transmission Revoked message.....	140
9.2.10.1	General.....	140
9.2.10.2	Transmission revoked cause codes and revoked cause phrases.....	141
9.2.12	Queue Position Info message.....	142
9.2.13	Media transmission notification.....	144
9.2.14	Receive media request.....	145
9.2.15	Receive media response.....	146
9.2.15.1	General.....	146
9.2.6.2	Rejection cause codes and rejection cause phrase.....	147
9.2.16	Media reception notification.....	148
9.2.17	Transmission cancel request.....	148
9.2.18	Transmission cancel response.....	149
9.2.19	Transmission cancel request notify.....	150
9.2.20	Transmission end request.....	151
9.2.21	Transmission end response.....	151
9.2.22	Remote Transmission request.....	152
9.2.23	Remote Transmission response.....	153
9.2.24	Remote Transmission cancel request.....	154
9.2.25	Remote Transmission cancel response.....	154
9.2.26	Media reception end request.....	155
9.2.27	Media reception end response.....	156
9.2.28	Media reception override notification.....	157
9.2.29	Transmission end notify.....	158
9.2.30	Transmission idle.....	159
9.2.31	Transmission control ack.....	159

9.3	MBMS subchannel control.....	160
9.3.1	Introduction.....	160
9.3.2	MBMS subchannel control messages .....	161
9.3.3	MBMS subchannel control specific fields .....	161
9.3.3.1	Introduction.....	161
9.3.3.2	MCVideo Group ID field .....	161
9.3.3.3	MBMS Subchannel field.....	161
9.3.3.4	TMGI field .....	163
9.3.3.5	Monitoring state .....	163
9.3.4	Map Group To Bearer message .....	163
9.3.5	Unmap Group To Bearer message.....	164
9.3.6	Application Paging message .....	165
9.3.7	Bearer Announcement message.....	165
9.4	MBMS notifications .....	166
9.4.1	Introduction.....	166
9.4.2	MBMS notifications control messages .....	166
9.4.3	MBMS notifications control specific fields .....	167
9.4.3.1	Introduction.....	167
9.4.3.2	Status field.....	167
9.4.3.3	Status changing MCVideo User Identity field .....	167
9.4.3.4	Group call ongoing field .....	168
9.4.3.5	Group broadcast alias field.....	168
9.4.3.6	Group regroup alias field .....	169
9.4.4	Group Dynamic Data Notify message .....	170
10	Media plane handling for MBMS .....	171
10.1	General .....	171
10.2	MBMS subchannel control procedure for the participating MCVideo function .....	171
10.2.1	General.....	171
10.2.2	State: 'Start-stop' .....	172
10.2.2.1	General .....	172
10.2.2.2	Send Map Group To Bearer message (R: Transmission Request, Media Transmission Notification) .....	172
10.2.3	State: 'M: A transmission is active' .....	173
10.2.3.1	General .....	173
10.2.3.2	Send Transmission Idle message (R: Transmission Idle).....	173
10.2.3.3	Send Media Transmission Notification message (R: Media Transmission Notification) .....	174
10.2.3.4	Send any other transmission control message (R: Any other message) .....	174
10.2.3.5	Send RTP media packet over the MBMS subchannel (R: RTP packet).....	174
10.2.3.7	Timer T300 (Transmission) expired .....	174
10.2.3.8	Timer T301 (Map Group To Bearer) expired .....	175
10.2.3.9	Timer T302 (Unmap Group To Bearer) expired.....	175
10.2.3.10	Timer T302 (Unmap Group To Bearer) expired Nth time .....	175
10.2.3.11	End transmission over the MBMS bearer (End transmission) .....	175
10.2.3.12	Group call released.....	176
10.2.3.13	Move conversation to unicast.....	176
10.3	MBMS subchannel control procedure for the MCVideo client.....	176
10.3.1	General.....	176
10.3.2	Transmission over a pre-activated MBMS bearer is started .....	176
10.3.3	Receive transmission control messages, RTP media packets and FEC repair packets over a MBMS subchannel .....	176
10.3.4	Transmission ended .....	177
10.3.5	Receive Application Paging message .....	177
10.3.6	Receive MBMS bearer announcement over MBMS bearer.....	177
10.4	Forward error correction .....	177
10.4.1	General.....	177
10.4.2	Participating MCVideo function procedure for FEC.....	177
10.4.3	MCVideo client procedure for FEC.....	178
10.5	Additional MBMS procedures .....	178
10.5.1	Group dynamic data notifications .....	178
11	Configurable parameters .....	178

11.1	Timers .....	178
11.1.1	Timers in the on-network transmission participant.....	178
11.1.2	Timers in the off-network transmission participant .....	181
11.1.3	Timers in the transmission control server .....	184
11.1.4	Timers in the participating MCVideo function.....	187
11.2	Counters .....	188
11.2.1	Counters in the on-network transmission participant.....	188
11.2.2	Counters in the off-network transmission participant.....	188
11.2.3	Counters in the controlling MCVideo function .....	189
11.2.4	Counters in the participating MCVideo function.....	189
12	Extensions within the present document.....	190
12.1	Session description types defined within the present document.....	190
12.1.1	General.....	190
12.1.2	SDP "fntp" attribute for MCVideo .....	190
12.1.2.1	General .....	190
12.1.2.2	Semantics .....	190
12.1.2.3	Syntax .....	191
13	Media plane security .....	191
13.1	General .....	191
13.2	Derivation of SRTP/SRTCP master keys.....	193
13.3	Media plane encryption and decryption .....	193
13.3.1	General.....	193
13.3.2	The participating MCVideo function.....	193
13.3.3	The MCVideo client .....	195
13.3.4	The controlling MCVideo function .....	199
14	SDP offer/ answer procedures.....	200
14.1	General .....	200
14.2	Generating an SDP offer .....	200
14.2.1	General.....	200
14.2.2	"mc_queueing" fntp attribute .....	201
14.2.3	"mc_priority" fntp attribute .....	201
14.2.4	"mc_granted" fntp attribute .....	201
14.2.5	"mc_implicit_request" fntp attribute.....	201
14.2.6	"mc_reception_priority" fntp attribute.....	201
14.3	Generating the SDP answer.....	201
14.3.1	General.....	201
14.3.2	"mc_queueing" fntp attribute .....	201
14.3.3	"mc_priority" fntp attribute .....	202
14.3.4	"mc_granted" fntp attribute .....	202
14.3.5	"mc_implicit_request" fntp attribute.....	202
14.3.6	"mc_reception_priority" fntp attribute.....	203
14.4	Offerer processing of the SDP answer .....	203
14.5	Modifying the media plane control channel .....	203
14.6	The use of SDP offer / answer procedures in off-network mode .....	203
14.6.1	General.....	203
14.6.2	fntp attribute "mc_queueing".....	203
<b>Annex A (informative):</b>	<b>Change history .....</b>	<b>204</b>
History .....		205