ETSI TS 138 470 V15.6.0 (2019-07)





Reference RTS/TSGR-0338470vf60 Keywords 5G

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

The present document can be downloaded from: http://www.etsl.org/standards-search

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the prevailing version of an ETSI deliverable is the one made publicly available in PDF format at www.etsi.org/deliver.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

https://portal.etsi.org/TB/ETSIDeliverableStatus.aspx

If you find errors in the present document, please send your comment to one of the following services: https://portal.etsi.org/People/CommitteeSupportStaff.aspx

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© ETSI 2019. All rights reserved.

DECT™, **PLUGTESTS™**, **UMTS™** and the ETSI logo are trademarks of ETSI registered for the benefit of its Members. **3GPP™** and **LTE™** are trademarks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

oneM2M[™] logo is a trademark of ETSI registered for the benefit of its Members and of the oneM2M Partners.

GSM® and the GSM logo are trademarks registered and owned by the GSM Association.

Intellectual Property Rights

Essential patents

IPRs essential or potentially essential to normative deliverables may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (https://ipr.etsi.org/).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Trademarks

The present document may include trademarks and/or tradenames which are asserted and/or registered by their owners. ETSI claims no ownership of these except for any which are indicated as being the property of ETSI, and conveys no right to use or reproduce any trademark and/or tradename. Mention of those trademarks in the present document does not constitute an endorsement by ETSI of products, services or organizations associated with those trademarks.

Legal Notice

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities. These shall be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between 3GPP and ETSI identities can be found under http://webapp.etsi.org/key/queryform.asp.

Modal verbs terminology

In the present document "shall", "shall not", "should", "should not", "may", "need not", "will", "will not", "can" and "cannot" are to be interpreted as described in clause 3.2 of the <u>ETSI Drafting Rules</u> (Verbal forms for the expression of provisions).

"must" and "must not" are NOT allowed in ETSI deliverables except when used in direct citation.

Contents

Intellectual Property Rights		
Legal	l Notice	2
Moda	al verbs terminology	2
	word	
	Scope	
1	•	
2	References	5
3	Definitions and abbreviations	
3.1	Definitions	
3.3	Abbreviations	
4	General aspects	
4.1	F1 interface general principles	
4.2	F1 interface specification objectives	
4.3	F1 interface capabilities	
4.4	Void	
5	Functions of the F1 interface	7
5.1	General	
5.2	F1-C functions	7
5.2.1	F1 interface management function	7
5.2.2	System Information management function	
5.2.3	F1 UE context management function.	8
5.2.4	Functions of the F1 interface General F1-C functions F1 interface management function System Information management function F1 UE context management function RRC message transfer function Paging function Warning messages information transfer functions	8
5.2.5	Paging function	88
5.2.6	Warning messages information transfer function	8
5.3	F1-U functions.	
5.3.1	Flam and for the	
5.3.2 5.4	TEIDs allocation	
3.4	F1-U functions Transfer of user data Flow control function. TEIDs allocation Procedures of the F1 interface Control plane procedures	
6	Procedures of the F1 interface	9
6.1	Control plane procedures.	9
6.1.1	Interface Management procedures	9
6.1.2	Context Management procedures	
6.1.3	RRC Message Transfer procedures	
6.1.3		
6.1.4	System Information procedures	
6.1.5 6.1.6	Paging procedures	
6.2	Void	
	• •	
7	F1 interface protocol structure	
7.1	F1 Control Plane Protocol (F1-C)	
7.2	F1 User Plane Protocol (F1-U)	11
8	Other F1 interface specifications	11
8.1	NG-RAN F1 interface: layer 1 (3GPP TS 38.471)	
8.2	NG-RAN F1 interface: signalling transport (3GPP TS 38.472)	
8.3	NG-RAN F1 interface: F1AP specification (3GPP TS 38.473)	
8.4	NG-RAN F1 interface: data transport and transport signalling (3GPP TS 38.474)	
8.5	NG-RAN F1 interface: user plane protocol (3GPP TS 38.425)	
A	ex A (informative): Change history	11
Anne	ex A (informative): Change history	13
Histo	DEV.	14

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

IT all St Adards the first state of the stat

1 Scope

The present document is an introduction to the 3GPP TS 38.47x series of technical specifications that define the F1 interface. The F1 interface provides means for interconnecting a gNB-CU and a gNB-DU of a gNB within an NG-RAN, or for interconnecting a gNB-CU and a gNB-DU of an en-gNB within an E-UTRAN.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

```
3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
[1]
                3GPP TS 38.401: "NG-RAN; Architecture Description"
[2]
                3GPP TS 38.471: "NG-RAN; F1 layer 1"
[3]
                3GPP TS 38.472: "NG-RAN; F1 signalling transport"
[4]
                3GPP TS 38.473: "NG-RAN, F1 Application Protocol (FnAP)".
[5]
                3GPP TS 38.474: "NG-RAN, F1 data transport".
[6]
                3GPP TS 38.425: "NG-RAN; Xn interface user plane protocol".
[7]
                3GPP TS 38.300: "NR; Overall description; Stage-2".
[8]
                3GPP TS 37.340: "NR; Multi-connectivity; Overall description; Stage-2".
[9]
                3GPP TS 38.321: "NR; Medium Access Control (MAC) protocol specification".
[10]
                3GPP TS 38.331: "NR; Radio Resource Control (RRC); Protocol specification".
[11]
```

3 Definitions and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in 3GPP TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in 3GPP TR 21.905 [1].

```
en-gNB: as defined in TS 37.340 [9]
gNB-CU: as defined in TS 38.401 [2]
gNB-DU: as defined in TS 38.401 [2]
gNB: as defined in TS 38.300 [8]
```

3.3 Abbreviations

For the purposes of the present document, the abbreviations given in 3GPP TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in 3GPP TR 21.905 [1].

DRB Data Radio Bearers
F1-U F1 User plane interface
F1-C F1 Control plane interface
F1AP F1 Application Protocol
GTP-U GPRS Tunnelling Protocol

IP Internet Protocol

NR-MIB NR-Master Information Block O&M Operation and Maintenance

PA Paging Area
PF Paging Frame
PO Paging Occasion
QoS Quality of Service
RRC Radio Resource Control

SCTP Stream Control Transmission Protocol

SRB Signalling Radio Bearers
SIB1 System Information Block 1
TNL Transport Network Layer

4 General aspects

This clause captures the F1 interface principles and characteristics

4.1 F1 interface general principles

The general principles for the specification of the F1 interface are as follows:

- the F1 interface is open;
- the F1 interface supports the exchange of signalling information between the endpoints, in addition the interface supports data transmission to the respective endpoints;
- from a logical standpoint, the F1 is a point-to-point interface between the endpoints.

NOTE: A point-to-point logical interface should be feasible even in the absence of a physical direct connection between the endpoints.

- the F1 interface supports control plane and user plane separation;
- the F1 interface separates Radio Network Layer and Transport Network Layer;
- the F1 interface enables exchange of UE associated information and non-UE associated information;
- the F1 interface is designed in a future proof way to fulfil different new requirements, support new services and new functions;
- one gNB-CU and a set of gNB-DUs are visible to other logical nodes as a gNB or an en-gNB where the gNB terminates the Xn and the NG interfaces, and the en-gNB terminates the X2 and the S1-U interfaces;
- the gNB-CU may be separated in control plane (CP) and user plane (UP).

4.2 F1 interface specification objectives

The F1 interface specifications facilitate the following:

- inter-connection of a gNB-CU and a gNB-DU supplied by different manufacturers.

4.3 F1 interface capabilities

The F1 interface supports:

- procedures to establish, maintain and release radio bearers for the NG-RAN part of PDU sessions and for E-UTRAN Radio Access Bearers;
- the separation of each UE on the protocol level for user specific signalling management; the transfer of RRC signalling messages between the UE and the gNB-CU.

4.4 Void

5 Functions of the F1 interface

5.1 General

The following clauses describe the functions supported over F1-C and F1-U.

5.2 F1-C functions

5.2.1 F1 interface management function

The error indication function is used by the gNB-DU or gNB-CU to indicate to the gNB-CU or gNB-DU that an error has occurred.

The reset function is used to initialize the peer entity after node setup and after a failure event occurred. This procedure can be used by both the gNB-DU and the gNB-CU.

The F1 setup function allows to exchange application level data needed for the gNB-DU and gNB-CU to interoperate correctly on the F1 interface. The F1 setup is initiated by the gNB-DU.

The gNB-CU Configuration Update and gNB-DU Configuration Update functions allow to update application level configuration data needed between gNB-CU and gNB-DU to interoperate correctly over the F1 interface, and may activate or deactivate cells. With the gNB-CU Configuration Update function, energy saving with cell activation/deactivation can be supported as defined in TS 38.300 [8].

The F1 setup and gNB-DU Configuration Update functions allow to inform the S-NSSAI(s) supported by the gNB-DU.

The F1 resource coordination function is used to transfer information about frequency resource sharing between gNB-CU and gNB-DU.

The gNB-DU status indication function allows the gNB-DU to indicate overload status to gNB-CU.

5.2.2 System Information management function

Scheduling of system broadcast information is carried out in the gNB-DU. The gNB-DU is responsible for transmitting the system information according to the scheduling parameters available.

The gNB-DU is responsible for the encoding of NR-MIB. In case broadcast of SIB1 and other SI messages is needed, the gNB-DU is responsible for the encoding of SIB1 and the gNB-CU is responsible for the encoding of other SI messages. The gNB-DU may re-encode SIB9.

To support Msg3 based on-demand SI as described in TS 38.331 [11], the gNB-CU can confirm the received SI request from the UE by including the UE identity, and command the gNB-DU to broadcast the requested other SIs.

5.2.3 F1 UE context management function

The F1 UE context management function supports the establishment and modification of the necessary overall UE context.

The establishment of the F1 UE context is initiated by the gNB-CU and accepted or rejected by the gNB-DU based on admission control criteria (e.g., resource not available).

The modification of the F1 UE context can be initiated by either gNB-CU or gNB-DU. The receiving node can accept or reject the modification. The F1 UE context management function also supports the release of the context previously established in the gNB-DU. The release of the context is triggered by the gNB-CU either directly or following a request received from the gNB-DU. The gNB-CU request the gNB-DU to release the UE Context when the UE enters RRC_IDLE or RRC_INACTIVE.

This function can be also used to manage DRBs and SRBs, i.e., establishing, modifying and releasing DRB and SRB resources. The establishment and modification of DRB resources are triggered by the gNB-CU and accepted/rejected by the gNB-DU based on resource reservation information and QoS information to be provided to the gNB-DU. For each DRB to be setup or modified, the S-NSSAI may be provided by gNB-CU to the gNB-DU in the UE Context Setup procedure and the UE Context Modification procedure.

The mapping between QoS flows and radio bearers is performed by gNB-CU and the granularity of bearer related management over F1 is radio bearer level. For NG-RAN, the gNB-CU decides an aggregated DRB QoS profile for each radio bearer based on received QoS flow profile, and provides both aggregated DRB QoS profile and QoS flow profile to the gNB-DU, and the gNB-DU either accepts the request or rejects it with appropriate cause value. With this function, gNB-DU could also notify gNB-CU whether the QoS for already established DRBs is not fulfilled any longer or it is fulfilled again. To support packet duplication for intra-gNB-DU CA as described in TS 38.300 [8], one data radio bearer should be configured with two GTP-U tunnels between gNB-CU and a gNB-DU.

With this function, gNB-CU requests the gNB-DU to setup or change of the SpCell (as defined in TS 38.321 [10]) for the UE, and the gNB-DU either accepts or rejects the request with appropriate cause value.

With this function, the gNB-CU requests the setup of the SCell(s) at the gNB-DU side, and the gNB-DU accepts all, some or none of the SCell(s) and replies to the gNB-CU. The gNB-CU requests the removal of the SCell(s) for the UE.

With this function, the gNB-CU indicates the UL UE AMBR limit to the gNB-DU, and the gNB-DU enforces the indicated limit.

With this function, the gNB-DU indicates that a bearer, or a UE is inactive or active. The gNB-CU consolidates all the serving gNB-DUs for the UE and takes further action.

5.2.4 RRC message transfer function

This function allows to transfer RRC messages between gNB-CU and gNB-DU. RRC messages are transferred over F1-C. The gNB-CU is responsible for the encoding of the dedicated RRC message with assistance information provided by gNB-DU. This function also allows gNB-DU to report to gNB-CU if the downlink RRC message has been successfully delivered to UE or not.

5.2.5 Paging function

The gNB-DU is responsible for transmitting the paging information according to the scheduling parameters provided.

The gNB-CU provides paging information to enable the gNB-DU to calculate the exact PO and PF. The gNB-CU determines the PA. The gNB-DU consolidates all the paging records for a particular PO, PF and PA, and encodes the final RRC message and broadcasts the paging message on the respective PO, PF in the PA.

5.2.6 Warning messages information transfer function

This function allows to cooperate with the warning message transmission procedures over NG interface. The gNB-CU is responsible for encoding the warning related SI message and sending it together with other warning related information for the gNB-DU to broadcast over the radio interface.