



**Digital cellular telecommunications system (Phase 2+) (GSM);
Universal Mobile Telecommunications System (UMTS);
LTE;
Mobile radio interface Layer 3 specification;
Core network protocols;
Stage 3
(3GPP TS 24.008 version 15.7.0 Release 15)**

406b-88e1-a200b4a1881etsi-124-008-v15.7.0-2019-10
https://standards.etsi.org/standards/3gpp/24/24-008/v15.7.0-2019-10



Reference

RTS/TSGC-0124008vf70

Keywords

GSM,LTE,UMTS

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

The present document can be downloaded from:
<http://www.etsi.org/standards-search>

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the prevailing version of an ETSI deliverable is the one made publicly available in PDF format at www.etsi.org/deliver.

Users of the present document should be aware that the document may be subject to revision or change of status.
Information on the current status of this and other ETSI documents is available at

<https://portal.etsi.org/TB/ETSIDeliverableStatus.aspx>

If you find errors in the present document, please send your comment to one of the following services:
<https://portal.etsi.org/People/CommitteeSupportStaff.aspx>

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© ETSI 2019.
All rights reserved.

DECT™, PLUGTESTS™, UMTS™ and the ETSI logo are trademarks of ETSI registered for the benefit of its Members.
3GPP™ and **LTE™** are trademarks of ETSI registered for the benefit of its Members and

of the 3GPP Organizational Partners.

oneM2M™ logo is a trademark of ETSI registered for the benefit of its Members and
of the oneM2M Partners.

GSM® and the GSM logo are trademarks registered and owned by the GSM Association.

Intellectual Property Rights

Essential patents

IPRs essential or potentially essential to normative deliverables may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "*Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards*", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<https://ipr.etsi.org/>).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Trademarks

The present document may include trademarks and/or tradenames which are asserted and/or registered by their owners. ETSI claims no ownership of these except for any which are indicated as being the property of ETSI, and conveys no right to use or reproduce any trademark and/or tradename. Mention of those trademarks in the present document does not constitute an endorsement by ETSI of products, services or organizations associated with those trademarks.

Legal Notice

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities. These shall be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between 3GPP and ETSI identities can be found under <http://webapp.etsi.org/key/queryform.asp>.

Modal verbs terminology

In the present document "shall", "shall not", "should", "should not", "may", "need not", "will", "will not", "can" and "cannot" are to be interpreted as described in clause 3.2 of the [ETSI Drafting Rules](#) (Verbal forms for the expression of provisions).

"must" and "must not" are NOT allowed in ETSI deliverables except when used in direct citation.

Contents

Intellectual Property Rights	2
Legal Notice	2
Modal verbs terminology.....	2
Foreword.....	28
Introduction	28
1 Scope	29
1.1 Scope of the Technical Specification	29
1.2 Application to the interface structures.....	29
1.3 Structure of layer 3 procedures.....	29
1.4 Test procedures	30
1.5 Use of logical channels in A/Gb mode.....	30
1.6 Overview of control procedures	30
1.6.1 List of procedures	30
1.7 Applicability of implementations	32
1.7.1 Voice Group Call Service (VGCS) and Voice Broadcast Service (VBS).....	32
1.7.2 General Packet Radio Service (GPRS).....	32
1.7.2.1 Packet services in GSM (A/Gb mode only)	32
1.7.2.2 Packet services in Iu mode (Iu mode only)	33
1.8 Handling of NAS signalling low priority indication.....	33
1.9 Restrictions.....	34
2 References	34
2.1 Definitions and abbreviations.....	41
2.1.1 Random values.....	41
2.1.2 Vocabulary.....	41
3 Radio Resource management procedures.....	47
4 Elementary procedures for Mobility Management.....	47
4.1 General	47
4.1.1 MM and GMM procedures	47
4.1.1.1 Types of MM and GMM procedures	47
4.1.1.1.1 Integrity Checking of Signalling Messages in the Mobile Station (Iu mode only).....	49
4.1.1.1.2 Integrity protection for emergency call (Iu mode only).....	51
4.1.1.2 MM-GMM co-ordination for GPRS MS's	51
4.1.1.2.1 GPRS MS operating in mode A or B in a network that operates in mode I	51
4.1.1.2.2 GPRS MS operating in mode A or B in a network that operates in mode II	52
4.1.1.2A Coordination between GMM and EMM	53
4.1.1.3 Core Network System Information for MM (Iu mode only)	53
4.1.1.4 Core Network System Information for GMM (Iu mode only)	53
4.1.1.4.1 General	53
4.1.1.4.2 Control of Network Mode of Operation I.....	53
4.1.1.5 Access class control	54
4.1.1.6 Specific requirements for MS configured to use timer T3245	54
4.1.1.6A Specific requirements for the MS when receiving non-integrity protected reject messages	55
4.1.1.7 Handling of NAS level mobility management congestion control.....	60
4.1.1.8 Handling of security related parameters at switch on and switch off	61
4.1.1.9 Equivalent PLMNs list	62
4.1.1.10 Dedicated core network.....	62
4.1.2 MM sublayer states	62
4.1.2.1 MM sublayer states in the mobile station	62
4.1.2.1.1 Main states.....	62
4.1.2.1.2 Substates of the MM IDLE state	66
4.1.2.2 The update Status	68
4.1.2.3 MM sublayer states on the network side	68
4.1.3 GPRS mobility management (GMM) sublayer states.....	70

4.1.3.1	GMM states in the MS	70
4.1.3.1.1	Main states.....	70
4.1.3.1.2	Substates of state GMM-DEREGISTERED.....	71
4.1.3.1.3	Substates of state GMM-REGISTERED.....	71
4.1.3.2	GPRS update status.....	74
4.1.3.3	GMM mobility management states on the network side	74
4.1.3.3.1	Main States	75
4.1.3.3.2	Substates of state GMM-REGISTERED	75
4.2	Behaviour of the MS in MM Idle state, GMM-DEREGISTERED state and GMM-REGISTERED state	76
4.2.1	Primary Service State selection	76
4.2.1.1	Selection of the Service State after Power On.....	76
4.2.1.2	Other Cases	77
4.2.2	Detailed Description of the MS behaviour in MM IDLE State.	77
4.2.2.1	Service State, NORMAL SERVICE.....	77
4.2.2.2	Service State, ATTEMPTING TO UPDATE	78
4.2.2.3	Service State, LIMITED SERVICE.....	78
4.2.2.4	Service State, NO IMSI.....	79
4.2.2.5	Service State, SEARCH FOR PLMN, NORMAL SERVICE.....	79
4.2.2.6	Service State, SEARCH FOR PLMN	80
4.2.2.7	Service State, RECEIVING GROUP CALL (NORMAL SERVICE)	80
4.2.2.8	Service State, RECEIVING GROUP CALL (LIMITED SERVICE)	80
4.2.2.9	Service State, eCALL INACTIVE.....	81
4.2.3	Service state when back to state MM IDLE from another state.....	81
4.2.4	Behaviour in state GMM-DEREGISTERED.....	82
4.2.4.1	Primary substate selection.....	82
4.2.4.1.1	Selection of the substate after power on or enabling the MS's GPRS capability.....	82
4.2.4.1.2	Other Cases.....	83
4.2.4.2	Detailed description of the MS behaviour in state GMM-DEREGISTERED.....	83
4.2.4.2.1	Substate, NORMAL-SERVICE	83
4.2.4.2.2	Substate, ATTEMPTING-TO-ATTACH.....	83
4.2.4.2.3	Substate, LIMITED-SERVICE.....	84
4.2.4.2.4	Substate, NO-IMSI	84
4.2.4.2.5	Substate, NO-CELL	84
4.2.4.2.6	Substate, PLMN-SEARCH	84
4.2.4.2.7	Substate, ATTACH-NEEDED	84
4.2.4.2.8	Substate, SUSPENDED (A/Gb mode only)	84
4.2.4.3	Substate when back to state GMM-DEREGISTERED from another GMM state	84
4.2.5	Behaviour in state GMM-REGISTERED	85
4.2.5.1	Detailed description of the MS behaviour in state GMM-REGISTERED.....	85
4.2.5.1.1	Substate, NORMAL-SERVICE	85
4.2.5.1.2	Substate, SUSPENDED (A/Gb mode only)	85
4.2.5.1.3	Substate, UPDATE-NEEDED.....	86
4.2.5.1.4	Substate, ATTEMPTING-TO-UPDATE	86
4.2.5.1.5	Substate, NO-CELL-AVAILABLE	86
4.2.5.1.6	Substate, LIMITED-SERVICE	87
4.2.5.1.7	Substate, ATTEMPTING-TO-UPDATE-MM	87
4.2.5.1.8	Substate, PLMN-SEARCH	87
4.3	MM common procedures	87
4.3.1	TMSI reallocation procedure	87
4.3.1.0	General.....	87
4.3.1.1	TMSI reallocation initiation by the network	88
4.3.1.2	TMSI reallocation completion by the mobile station	88
4.3.1.3	TMSI reallocation completion in the network.....	88
4.3.1.4	Abnormal cases in the mobile station.....	88
4.3.1.5	Abnormal cases on the network side.....	89
4.3.2	Authentication procedure.....	89
4.3.2a	Authentication procedure used for a UMTS authentication challenge.....	89
4.3.2b	Authentication Procedure used for a GSM authentication challenge	90
4.3.2.1	Authentication request by the network.....	90
4.3.2.2	Authentication response by the mobile station.....	90
4.3.2.3	Authentication processing in the network	91
4.3.2.3a	128-bit circuit-switched GSM ciphering key	91

4.3.2.4	Ciphering key sequence number	91
4.3.2.5	Authentication not accepted by the network	92
4.3.2.5.1	Authentication not accepted by the MS	93
4.3.2.6	Abnormal cases	93
4.3.2.6.1	MS behaviour towards a network that has failed the authentication procedure	96
4.3.2.7	Handling of keys at intersystem change from Iu mode to A/Gb mode	96
4.3.2.7a	Use of established security contexts	97
4.3.2.8	Handling of keys at intersystem change from A/Gb mode to Iu mode	98
4.3.2.9	Void	99
4.3.2.10	Derivation of keys at SRVCC or vSRVCC handover from S1 mode	99
4.3.2.10.0	General	99
4.3.2.10.1	PDN connection with integrity protection	99
4.3.2.10.2	PDN connection without integrity protection	99
4.3.2.11	Derivation of keys at SRVCC handover from Iu mode to Iu mode	99
4.3.2.11.1	PDN connection with integrity protection	99
4.3.2.11.2	PDN connection without integrity protection	100
4.3.2.12	Derivation of keys at SRVCC handover from Iu mode to A/Gb mode	101
4.3.2.12.1	PDN connection with integrity protection	101
4.3.2.12.2	PDN connection without integrity protection	102
4.3.2.13	Derivation of keys at CS to PS SRVCC handover from A/Gb mode to Iu mode	102
4.3.3	Identification procedure	104
4.3.3.0	General	104
4.3.3.1	Identity request by the network	104
4.3.3.2	Identification response by the mobile station	104
4.3.3.3	Abnormal cases in the mobile station	104
4.3.3.4	Abnormal cases on the network side	104
4.3.4	IMSI detach procedure	105
4.3.4.0	General	105
4.3.4.1	IMSI detach initiation by the mobile station	105
4.3.4.2	IMSI detach procedure in the network	106
4.3.4.3	IMSI detach completion by the mobile station	106
4.3.4.4	Abnormal cases	106
4.3.5	Abort procedure	106
4.3.5.1	Abort procedure initiation by the network	106
4.3.5.2	Abort procedure in the mobile station	107
4.3.6	MM information procedure	107
4.3.6.1	MM information procedure initiation by the network	107
4.3.6.2	MM information procedure in the mobile station	107
4.4	MM specific procedures	107
4.4.1	Location updating procedure	108
4.4.2	Periodic updating	109
4.4.3	IMSI attach procedure	110
4.4.4	Generic Location Updating procedure	111
4.4.4.1	Location updating initiation by the mobile station	111
4.4.4.1a	Network Request for Additional mobile station Capability Information	111
4.4.4.2	Identification request from the network	111
4.4.4.3	Authentication by the network	111
4.4.4.4	Security mode setting by the network	112
4.4.4.5	Location Update Attempt Counter	112
4.4.4.6	Location updating accepted by the network	112
4.4.4.7	Location updating not accepted by the network	114
4.4.4.8	Release of RR connection after location updating	116
4.4.4.9	Abnormal cases on the mobile station side	116
4.4.4.10	Abnormal cases on the network side	118
4.4.5	Void	119
4.4.6	Void	119
4.4.7	eCall inactivity procedure	119
4.5	Connection management sublayer service provision	120
4.5.1	MM connection establishment	120
4.5.1.1	MM connection establishment initiated by the mobile station	120
4.5.1.2	Abnormal cases	124
4.5.1.3	MM connection establishment initiated by the network	125

4.5.1.3.1	Mobile Terminating CM Activity.....	125
4.5.1.3.2	Mobile Originating CM Activity \$(CCBS)\$	126
4.5.1.3.3	Paging response in Iu mode (Iu mode only).....	127
4.5.1.3.4	Paging response for CS fallback.....	127
4.5.1.4	Abnormal cases	128
4.5.1.5	MM connection establishment for emergency calls.....	128
4.5.1.5a	MM connection establishment for emergency calls for CS fallback.....	129
4.5.1.6	Call re-establishment.....	129
4.5.1.6.1	Call re-establishment, initiation by the mobile station	129
4.5.1.6.2	Abnormal cases	131
4.5.1.7	Forced release during MO MM connection establishment	132
4.5.1.8	MM connection establishment due to SRVCC or vSRVCC handover	132
4.5.1.9	MM connection establishment due to Dual Radio Voice Call Continuity (DRVCC) access transfer	133
4.5.2	MM connection information transfer phase.....	133
4.5.2.1	Sending CM messages	133
4.5.2.2	Receiving CM messages	133
4.5.2.3	Abnormal cases	133
4.5.3	MM connection release.....	134
4.5.3.1	Release of associated RR connection	134
4.5.3.2	Uplink release in a voice group call	134
4.6	Receiving a MM STATUS message by a MM entity.....	134
4.7	Elementary mobility management procedures for GPRS services	134
4.7.1	General.....	134
4.7.1.1	Lower layer failure.....	135
4.7.1.2	Ciphering of messages (A/Gb mode only).....	135
4.7.1.2a	Integrity protection of layer 3 signalling messages (A/Gb mode only and when integrity protection is required)	135
4.7.1.2a.1	General	135
4.7.1.2a.2	Integrity checking of GMM signalling messages in the MS	135
4.7.1.2a.3	Integrity checking of layer 3 signalling messages in the network	136
4.7.1.2a.4	Establishment of integrity protection of layer 3 signalling messages.....	137
4.7.1.2a.5	Optional establishment of integrity protection in the user plane	137
4.7.1.2a.6	Change of security keys.....	137
4.7.1.3	P-TMSI signature	138
4.7.1.4	Radio resource sublayer address handling	138
4.7.1.4.1	Radio resource sublayer address handling (A/Gb mode only)	138
4.7.1.5	P-TMSI handling.....	140
4.7.1.5.1	P-TMSI handling in A/Gb mode	140
4.7.1.5.2	P-TMSI handling in Iu mode.....	140
4.7.1.5.3	Void.....	140
4.7.1.5.4	Void.....	140
4.7.1.6	Change of network mode of operation.....	140
4.7.1.6.1	Change of network mode of operation in A/Gb mode (A/Gb mode only)	140
4.7.1.6.2	Change of network mode of operation in Iu mode (Iu mode only)	141
4.7.1.6.3	Change of network mode of operation at Iu mode to A/Gb mode inter-system change	141
4.7.1.6.4	Change of network mode of operation at A/Gb mode to Iu mode inter-system change	142
4.7.1.7	Intersystem change between A/Gb mode and Iu mode	143
4.7.1.7a	Intersystem change from S1 mode to A/Gb mode or S1 mode to Iu mode with ISR activated	144
4.7.1.7b	Intersystem change from S1 mode to A/Gb mode or S1 mode to Iu mode for eCall only MS capable of eCall over IMS.....	144
4.7.1.7c	Return to packet idle mode for eCall only MS capable of eCall over IMS.....	145
4.7.1.8	List of forbidden PLMN for GPRS service	145
4.7.1.8a	Establishment of the PS signalling connection (Iu mode only).....	145
4.7.1.9	Release of the PS signalling connection (Iu mode only).....	146
4.7.1.10	Handling of 3GPP PS data off.....	147
4.7.2	GPRS Mobility management timers and UMTS PS signalling connection control.....	147
4.7.2.1	READY timer behaviour.....	147
4.7.2.1.1	READY timer behaviour (A/Gb mode only).....	147
4.7.2.1.2	Handling of READY timer in the MS in Iu mode and S1 mode	149
4.7.2.1.2a	Handling of READY timer in the network in Iu mode and S1 mode	149
4.7.2.2	Periodic routing area updating	149

4.7.2.3	PMM-IDLE mode and PMM-CONNECTED mode (Iu mode only)	151
4.7.2.4	Handling of <i>Force to standby</i> in Iu mode (Iu mode only).....	152
4.7.2.5	RA Update procedure for Signalling Connection Re-establishment (Iu mode only)	152
4.7.2.6	Cell Update triggered by low layers.....	152
4.7.2.7	Handling of timer T3302.....	152
4.7.2.8	Handling of timer T3324 (A/Gb mode, Iu mode and S1 mode).....	152
4.7.2.9	Power saving mode	153
4.7.2.10	Extended idle-mode DRX cycle.....	154
4.7.2.11	Interaction between power saving mode and extended idle mode DRX cycle	155
4.7.2.12	Extended coverage for GSM	155
4.7.3	GPRS attach procedure	155
4.7.3.1	GPRS attach procedure for GPRS services	157
4.7.3.1.1	GPRS attach procedure initiation	157
4.7.3.1.2	GMM common procedure initiation	159
4.7.3.1.3	GPRS attach accepted by the network	159
4.7.3.1.4	GPRS attach not accepted by the network	163
4.7.3.1.4a	GPRS attach for emergency bearer services not accepted by the network (UTRAN Iu mode only)	167
4.7.3.1.4b	Attach for initiating a PDN connection for emergency bearer services not accepted by the network (UTRAN Iu mode only)	168
4.7.3.1.5	Abnormal cases in the MS	169
4.7.3.1.6	Abnormal cases on the network side	171
4.7.3.2	Combined GPRS attach procedure for GPRS and non-GPRS services	173
4.7.3.2.1	Combined GPRS attach procedure initiation	173
4.7.3.2.2	GMM Common procedure initiation	174
4.7.3.2.3	Combined GPRS attach accepted by the network	174
4.7.3.2.4	Combined GPRS attach not accepted by the network	176
4.7.3.2.5	Abnormal cases in the MS	180
4.7.3.2.6	Abnormal cases on the network side	180
4.7.4	GPRS detach procedure	181
4.7.4.0	General	181
4.7.4.1	MS initiated GPRS detach procedure	181
4.7.4.1.1	MS initiated GPRS detach procedure initiation	181
4.7.4.1.2	MS initiated GPRS detach procedure completion for GPRS services only	182
4.7.4.1.3	MS initiated combined GPRS detach procedure completion	182
4.7.4.1.4	Abnormal cases in the MS	182
4.7.4.1.5	Abnormal cases on the network side	185
4.7.4.2	Network initiated GPRS detach procedure	185
4.7.4.2.1	Network initiated GPRS detach procedure initiation	185
4.7.4.2.2	Network initiated GPRS detach procedure completion by the MS	185
4.7.4.2.3	Network initiated GPRS detach procedure completion by the network	190
4.7.4.2.4	Abnormal cases on the network side	190
4.7.5	Routing area updating procedure	192
4.7.5.1	Normal and periodic routing area updating procedure	194
4.7.5.1.1	Normal and periodic routing area updating procedure initiation	196
4.7.5.1.2	GMM Common procedure initiation	197
4.7.5.1.3	Normal and periodic routing area updating procedure accepted by the network	197
4.7.5.1.4	Normal and periodic routing area updating procedure not accepted by the network	204
4.7.5.1.4a	Routing area updating procedure for initiating a PDN connection for emergency bearer services not accepted by the network (UTRAN Iu mode only)	210
4.7.5.1.5	Abnormal cases in the MS	210
4.7.5.1.6	Abnormal cases on the network side	214
4.7.5.2	Combined routing area updating procedure	216
4.7.5.2.0	General	216
4.7.5.2.1	Combined routing area updating procedure initiation	216
4.7.5.2.2	GMM Common procedure initiation	218
4.7.5.2.3	Combined routing area updating procedure accepted by the network	218
4.7.5.2.4	Combined routing area updating not accepted by the network	221
4.7.5.2.5	Abnormal cases in the MS	225
4.7.5.2.6	Abnormal cases on the network side	226
4.7.6	P-TMSI reallocation procedure	226
4.7.6.0	General	226

4.7.6.1	P-TMSI reallocation initiation by the network.....	227
4.7.6.2	P-TMSI reallocation completion by the MS	227
4.7.6.3	P-TMSI reallocation completion by the network	227
4.7.6.3A	Abnormal cases in the MS	227
4.7.6.4	Abnormal cases on the network side.....	227
4.7.7	Authentication and ciphering procedure	229
4.7.7a	Authentication and ciphering procedure used for UMTS authentication challenge.....	229
4.7.7b	Authentication and ciphering procedure used for GSM authentication challenge	229
4.7.7c	Change of the ciphering algorithm at PS Handover.....	230
4.7.7.1	Authentication and ciphering initiation by the network	230
4.7.7.2	Authentication and ciphering response by the MS.....	232
4.7.7.3	Authentication and ciphering completion by the network.....	234
4.7.7.3a	128-bit packet-switched GSM ciphering key	235
4.7.7.3b	128-bit packet-switched GSM integrity key (in A/Gb mode and only if MS supports integrity protection)	235
4.7.7.4	GPRS ciphering key sequence number	235
4.7.7.5	Authentication not accepted by the network	237
4.7.7.5.1	Authentication not accepted by the MS	238
4.7.7.6	Abnormal cases	238
4.7.7.6.1	MS behaviour towards a network that has failed the authentication procedure.....	242
4.7.7.7	Use of established security contexts.....	243
4.7.7.8	Handling of keys at intersystem change from Iu mode to A/Gb mode	244
4.7.7.9	Handling of keys at intersystem change from A/Gb mode to Iu mode	244
4.7.7.10	Handling of keys at intersystem change from S1 mode to Iu mode or A/Gb mode	245
4.7.8	Identification procedure	247
4.7.8.1	Identification initiation by the network	247
4.7.8.2	Identification response by the MS.....	247
4.7.8.3	Identification completion by the network	247
4.7.8.3a	Abnormal cases in the MS	247
4.7.8.4	Abnormal cases on the network side.....	248
4.7.9	Paging procedure	249
4.7.9.1	Paging for GPRS services	249
4.7.9.1.1	Paging for GPRS services using P-TMSI.....	249
4.7.9.1.2	Paging for GPRS services using IMSI.....	250
4.7.9.2	Paging for non-GPRS services	251
4.7.10	Receiving a GMM STATUS message by a GMM entity	251
4.7.11	Void	251
4.7.12	GMM Information procedure.....	251
4.7.12.1	GMM information procedure initiation by the network.....	251
4.7.12.2	GMM information procedure in the mobile station	251
4.7.13	Service Request procedure (Iu mode only).....	251
4.7.13.1	Service Request procedure initiation.....	253
4.7.13.2	GMM common procedure initiation	254
4.7.13.3	Service request procedure accepted by the network.....	254
4.7.13.4	Service request procedure not accepted by the network.....	255
4.7.13.4a	Service request procedure for initiating a PDN connection for emergency bearer services not accepted by the network (UTRAN Iu mode only)	259
4.7.13.5	Abnormal cases in the MS	260
4.7.13.6	Abnormal cases on the network side.....	262
4.7.14	Void	263
4.7.15	GMM eCall inactivity procedure	263
5	Elementary procedures for circuit-switched Call Control	264
5.1	Overview	264
5.1.1	General.....	264
5.1.2	Call Control States	272
5.1.2.1	Call states at the mobile station side of the interface	272
5.1.2.1.1	Null (State U0)	272
5.1.2.1.2	MM Connection pending (U0.1)	272
5.1.2.1.2a	CC prompt present (U0.2) \$(CCBS)\$	272
5.1.2.1.2b	Wait for network information (U0.3) \$(CCBS)\$.....	272
5.1.2.1.2c	CC-Establishment present (U0.4) \$(CCBS)\$	272

5.1.2.1.2d	CC-Establishment confirmed (U0.5) \$(CCBS)\$	272
5.1.2.1.2e	Recall present (U0.6) \$(CCBS)\$	272
5.1.2.1.3	Call initiated (U1).....	272
5.1.2.1.4	Mobile originating call proceeding (U3)	273
5.1.2.1.5	Call delivered (U4).....	273
5.1.2.1.6	Call present (U6)	273
5.1.2.1.7	Call received (U7)	273
5.1.2.1.8	Connect Request (U8)	273
5.1.2.1.9	Mobile terminating call confirmed (U9).....	273
5.1.2.1.10	Active (U10).....	273
5.1.2.1.11	Disconnect request (U11)	273
5.1.2.1.12	Disconnect indication (U12).....	273
5.1.2.1.13	Release request (U19).....	273
5.1.2.1.14	Mobile originating modify (U26)	273
5.1.2.1.15	Mobile terminating modify (U27)	273
5.1.2.2	Network call states	274
5.1.2.2.1	Null (State N0)	274
5.1.2.2.2	MM connection pending (N0.1)	274
5.1.2.2.2a	CC connection pending (N0.2) \$(CCBS)\$	274
5.1.2.2.2b	Network answer pending (N0.3) \$(CCBS)\$.....	274
5.1.2.2.2c	CC-Establishment present (N0.4) \$(CCBS)\$.....	274
5.1.2.2.2d	CC-Establishment confirmed (N0.5) \$(CCBS)\$.....	274
5.1.2.2.2e	Recall present (N0.6) \$(CCBS)\$	274
5.1.2.2.3	Call initiated (N1).....	274
5.1.2.2.4	Mobile originating call proceeding (N3).....	274
5.1.2.2.5	Call delivered (N4)	274
5.1.2.2.6	Call present (N6)	274
5.1.2.2.7	Call received (N7)	275
5.1.2.2.8	Connect request (N8).....	275
5.1.2.2.9	Mobile terminating call confirmed (N9).....	275
5.1.2.2.10	Active (N10).....	275
5.1.2.2.11	Not used.....	275
5.1.2.2.12	Disconnect indication (N12).....	275
5.1.2.2.13	Release request (N19).....	275
5.1.2.2.14	Mobile originating modify (N26)	275
5.1.2.2.15	Mobile terminating modify (N27)	275
5.1.2.2.16	Connect Indication (N28).....	275
5.2	Call establishment procedures	275
5.2.1	Mobile originating call establishment.....	276
5.2.1.1	Call initiation.....	277
5.2.1.2	Receipt of a setup message	277
5.2.1.3	Receipt of a CALL PROCEEDING message	279
5.2.1.4	Notification of progressing mobile originated call.....	279
5.2.1.4.1	Notification of interworking in connection with mobile originated call establishment.....	279
5.2.1.4.2	Call progress in the PLMN/ISDN environment	280
5.2.1.5	Alerting	280
5.2.1.6	Call connected	280
5.2.1.7	Call rejection	281
5.2.1.8	Transit network selection	281
5.2.1.9	Traffic channel assignment at mobile originating call establishment	281
5.2.1.10	Call queuing at mobile originating call establishment	282
5.2.1.11	Speech Codec Selection	282
5.2.1.12	Cellular Text telephone Modem (CTM) selection	283
5.2.2	Mobile terminating call establishment.....	283
5.2.2.1	Call indication	283
5.2.2.2	Compatibility checking	284
5.2.2.3	Call confirmation	284
5.2.2.3.1	Response to SETUP	284
5.2.2.3.2	Receipt of CALL CONFIRMED and ALERTING by the network	285
5.2.2.3.3	Call failure procedures	285
5.2.2.3.4	Called mobile station clearing during mobile terminating call establishment.....	286
5.2.2.4	Notification of interworking in connection with mobile terminating call establishment	286

5.2.2.5	Call accept.....	286
5.2.2.6	Active indication	286
5.2.2.7	Traffic channel assignment at mobile terminating call establishment.....	287
5.2.2.8	Call queuing at mobile terminating call establishment	287
5.2.2.9	User connection attachment during a mobile terminating call	287
5.2.2.10	Speech Codec Selection	288
5.2.2.11	Cellular Text telephone Modem (CTM) selection	288
5.2.3	Network initiated MO call \$(CCBS)\$	288
5.2.3.1	Initiation.....	288
5.2.3.2	CC-Establishment present	288
5.2.3.2.1	Recall Alignment Procedure.....	289
5.2.3.3	CC-Establishment confirmation.....	291
5.2.3.4	Recall present	291
5.2.3.5	Traffic channel assignment during network initiated mobile originating call establishment	292
5.2.4	Call establishment for SRVCC or vSRVCC.....	292
5.2.4.1	General.....	292
5.2.4.2	Call activation for SRVCC.....	292
5.2.4.2a	Call activation for vSRVCC.....	293
5.2.4.2b	Multimedia CAT and vSRVCC handover.....	294
5.2.4.3	Traffic channel assignment and user connection attachment	294
5.2.4.4	State verification	295
5.3	Signalling procedures during the "active" state.....	295
5.3.1	User notification procedure.....	295
5.3.2	Call rearrangements	295
5.3.3	Codec Change Procedure.....	295
5.3.4	Support of Dual Services	295
5.3.4.1	Service Description	296
5.3.4.2	Call establishment	296
5.3.4.2.1	Mobile Originating Establishment.....	296
5.3.4.2.2	Mobile Terminating Establishment	297
5.3.4.3	Changing the Call Mode	297
5.3.4.3.1	Initiation of in-call modification.....	297
5.3.4.3.2	Successful completion of in-call modification	298
5.3.4.3.3	Change of the channel configuration.....	299
5.3.4.3.4	Failure of in-call modification.....	299
5.3.4.4	Abnormal procedures	299
5.3.5	User initiated service level up- and downgrading (A/Gb mode and GERAN Iu mode only)	300
5.3.5.1	Initiation of service level up- and downgrading	300
5.3.5.2	Successful completion of service level up- and downgrading	301
5.3.5.3	Rejection of service level up- and downgrading	301
5.3.5.4	Time-out recovery	301
5.3.6	Support of multimedia calls	301
5.3.6.1	Service description	301
5.3.6.2	Call establishment	301
5.3.6.2.1	Mobile originated multimedia call establishment.....	301
5.3.6.2.2	Mobile terminating multimedia call	303
5.3.6.2.2.1	Fallback to speech.....	303
5.3.6.3	In-call modification in the "active" state	303
5.3.6.3.1	Void.....	304
5.3.6.3.2	Void.....	304
5.3.6.3.3	Void.....	304
5.3.6.4	Multimedia CAT during the alerting phase of a mobile originated call.....	304
5.3.6.5	DTMF transmission during a multimedia call	305
5.3.6.6	vSRVCC handover to a circuit-switched multimedia call.....	305
5.4	Call clearing	305
5.4.1	Terminology	305
5.4.2	Exception conditions.....	305
5.4.3	Clearing initiated by the mobile station	306
5.4.3.1	Initiation of call clearing	306
5.4.3.2	Receipt of a DISCONNECT message from the mobile station.....	306
5.4.3.3	Receipt of a RELEASE message from the network.....	306
5.4.3.4	Receipt of a RELEASE COMPLETE message from the mobile station	306

5.4.3.5	Abnormal cases	306
5.4.4	Clearing initiated by the network.....	307
5.4.4.1	Clearing initiated by the network: mobile does not support "Prolonged Clearing Procedure"	307
5.4.4.1.1	Clearing when tones/announcements provided	307
5.4.4.1.2	Clearing when tones/announcements not provided	307
5.4.4.1.3	Completion of clearing	308
5.4.4.2	Clearing initiated by the network: mobile supports "Prolonged Clearing Procedure"	308
5.4.4.2.1	Clearing when tones/announcements provided and the network does not indicate that "CCBS activation is possible"	308
5.4.4.2.2	Clearing when the network indicates that "CCBS activation is possible"	309
5.4.4.2.3	Clearing when tones/announcements are not provided and the network does not indicate that "CCBS activation is possible"	310
5.4.4.2.4	Receipt of a RELEASE message from the mobile station.....	311
5.4.4.2.5	Completion of clearing	311
5.4.5	Call clearing for SRVCC from CS to PS	312
5.5	Miscellaneous procedures	312
5.5.1	In-band tones and announcements	312
5.5.2	Call collisions	312
5.5.3	Status procedures	312
5.5.3.1	Status enquiry procedure	312
5.5.3.2	Reception of a STATUS message by a CC entity	313
5.5.3.2.1	STATUS message with incompatible state	313
5.5.3.2.2	STATUS message with compatible state	313
5.5.4	Call re-establishment, mobile station side	313
5.5.4.1	Indication from the mobility management sublayer.....	313
5.5.4.2	Reaction of call control	314
5.5.4.3	Completion of re-establishment	314
5.5.4.4	Unsuccessful outcome	314
5.5.5	Call re-establishment, network side	314
5.5.5.1	State alignment.....	314
5.5.6	Progress	314
5.5.7	DTMF protocol control procedure.....	314
5.5.7.1	Start DTMF request by the mobile station	315
5.5.7.2	Start DTMF response by the network	315
5.5.7.3	Stop DTMF request by the mobile station	315
5.5.7.4	Stop DTMF response by the network.....	316
5.5.7.5	Sequencing of subsequent start DTMF requests by the mobile station	316
6	Support for packet services	316
6.1	GPRS Session management	317
6.1.1	General.....	317
6.1.2	Session management states	317
6.1.2.1	Session management states in the MS.....	317
6.1.2.1.1	PDP-INACTIVE.....	317
6.1.2.1.2	PDP-ACTIVE-PENDING.....	317
6.1.2.1.3	PDP-INACTIVE-PENDING.....	317
6.1.2.1.4	PDP-ACTIVE.....	317
6.1.2.1.5	PDP-MODIFY_PENDING	317
6.1.2.1.6	MBMS-ACTIVE-PENDING	318
6.1.2.1.7	MBMS-ACTIVE	318
6.1.2.2	Session management states on the network side	319
6.1.2.2.1	PDP-INACTIVE.....	319
6.1.2.2.2	PDP-ACTIVE-PENDING.....	319
6.1.2.2.3	PDP-INACTIVE-PENDING.....	319
6.1.2.2.4	PDP-ACTIVE.....	319
6.1.2.2.5	PDP-MODIFY-PENDING	319
6.1.2.2.6	MBMS-ACTIVE-PENDING	320
6.1.2.2.7	MBMS-INACTIVE-PENDING	320
6.1.2.2.8	MBMS-ACTIVE	320
6.1.2A	PDP address allocation	321
6.1.2A.1	General	321
6.1.2A.1.1	Interworking with PDN based on IP.....	321

6.1.2A.1.2	Interworking with PDN based on PPP.....	321
6.1.2A.2	IP address allocation via NAS signalling	322
6.1.3	Session Management procedures	322
6.1.3.0	General	322
6.1.3.1	PDP context activation	322
6.1.3.1.1	Successful PDP context activation initiated by the mobile station	323
6.1.3.1.2	Successful PDP context activation requested by the network	326
6.1.3.1.3	Unsuccessful PDP context activation initiated by the MS.....	326
6.1.3.1.3.1	General	326
6.1.3.1.3.2	Handling of network rejection due to SM cause #26	327
6.1.3.1.3.3	Handling of network rejection due to SM cause other than SM cause #26	329
6.1.3.1.3A	Void.....	332
6.1.3.1.4	Unsuccessful PDP context activation requested by the network	332
6.1.3.1.5	Abnormal cases	332
6.1.3.1.6	Handling Activate PDP context request for MS configured for dual priority	334
6.1.3.2	Secondary PDP Context Activation Procedure	335
6.1.3.2.1	Successful Secondary PDP Context Activation Procedure Initiated by the MS.....	335
6.1.3.2.1a	Successful Secondary PDP Context Activation Procedure Requested by the network	336
6.1.3.2.2	Unsuccessful Secondary PDP Context Activation Procedure initiated by the MS	337
6.1.3.2.2.1	General	337
6.1.3.2.2.2	Handling of network rejection due to SM cause #26	337
6.1.3.2.2.3	Handling of network rejection due to SM cause other than SM cause #26	339
6.1.3.2.2a	Unsuccessful secondary PDP context activation requested by the network	340
6.1.3.2.2.3	Abnormal cases	341
6.1.3.3	PDP context modification procedure	344
6.1.3.3.1	Network initiated PDP Context Modification	345
6.1.3.3.2	MS initiated PDP Context Modification accepted by the network	346
6.1.3.3.3	MS initiated PDP Context Modification not accepted by the network	347
6.1.3.3.3.1	General	347
6.1.3.3.3.2	Handling of network rejection due to SM cause #26	348
6.1.3.3.3.3	Handling of network rejection due to SM cause other than SM cause #26	349
6.1.3.3.3a	Network initiated PDP Context Modification not accepted by the MS	351
6.1.3.3.4	Abnormal cases	351
6.1.3.4	PDP context deactivation procedure	356
6.1.3.4.1	PDP context deactivation initiated by the MS	356
6.1.3.4.2	PDP context deactivation initiated by the network	357
6.1.3.4.3	Abnormal cases	359
6.1.3.4a	Void.....	360
6.1.3.5	Void.....	360
6.1.3.5a	Notification procedure	360
6.1.3.5a.1	General	360
6.1.3.5a.2	Notification procedure initiation by the network	360
6.1.3.5a.3	Notification procedure in the MS	361
6.1.3.6	Receiving a SM STATUS message by a SM entity	361
6.1.3.7	Protocol configuration options	362
6.1.3.8	MBMS context activation	362
6.1.3.8.1	Successful MBMS context activation	363
6.1.3.8.2	Unsuccessful MBMS context activation requested by the MS	363
6.1.3.8.2.1	General	363
6.1.3.8.2.2	Handling of network rejection due to SM cause #26	363
6.1.3.8.2.3	Handling of network rejection due to SM cause other than SM cause #26	364
6.1.3.8.3	Unsuccessful MBMS context activation requested by the network	365
6.1.3.8.4	Abnormal cases	366
6.1.3.9	MBMS context deactivation	366
6.1.3.9.1	MBMS context deactivation initiated by the network	367
6.1.3.9.2	Abnormal cases	367
6.1.3.10	MBMS protocol configuration options	367
6.1.3.11	Handling of APN based congestion control	367
6.1.3.11A	Handling of group specific session management congestion control	368
6.1.3.12	Handling session management request for MS configured for dual priority	368
6.1.3.13	Handling of network rejection not due to APN based congestion control	369
6.1.3.14	Handling of WLAN offload control	369