

SLOVENSKI STANDARD

SIST ETS 300 940 E5:2005

01-februar-2005

8][JhUb]WW] b]hYY_ca i b]_UWg]g]ghYa fUhU&ž! Ja Ygb]_nUa cV]b]fUX)c!
GdYwZ_UWYUfYhY'd`Ugh]f GA \$('\$, žfUn]]WU) "%%%z]nXU% - * Ł

Digital cellular telecommunications system (Phase 2+) (GSM); Mobile radio interface;
Layer 3 specification (GSM 04.08 version 5.11.1 Release 1996)

iTeh STANDARD PREVIEW (standards.iteh.ai)

Ta slovenski standard je istoveten z: [SIST ETS 300 940 E5:2005](https://standards.iteh.ai/catalog/standards/sist/0ad2b66f-730c-4dib-b859-bd1c04cabd59/sist-ets-300-940-e5-2005)
[https://standards.iteh.ai/catalog/standards/sist/0ad2b66f-730c-4dib-b859-
bd1c04cabd59/sist-ets-300-940-e5-2005](https://standards.iteh.ai/catalog/standards/sist/0ad2b66f-730c-4dib-b859-bd1c04cabd59/sist-ets-300-940-e5-2005)

ICS:

33.070.01 Mobilni servisi na splošno Mobile services in general

SIST ETS 300 940 E5:2005 en

**iTeh STANDARD PREVIEW
(standards.iteh.ai)**

SIST ETS 300 940 E5:2005
<https://standards.iteh.ai/catalog/standards/sist/0ad2b66f-730c-4dfb-b859-bd1c04cabd59/sist-ets-300-940-e5-2005>



**EUROPEAN
TELECOMMUNICATION
STANDARD**

ETS 300 940

March 1999

Fifth Edition

Source: SMG

Reference: RE/SMG-020408QR7

ICS: 33.020

Key words: Digital cellular telecommunications system, Global System for Mobile communications (GSM)



**Digital cellular telecommunications system (Phase 2+);
Mobile radio interface;
Layer 3 specification
(GSM 04.08 version 5.11.1 Release 1996)**

ETSI

European Telecommunications Standards Institute

ETSI Secretariat

Postal address: F-06921 Sophia Antipolis CEDEX - FRANCE

Office address: 650 Route des Lucioles - Sophia Antipolis - Valbonne - FRANCE

Internet: secretariat@etsi.fr - <http://www.etsi.org>

Tel.: +33 4 92 94 42 00 - Fax: +33 4 93 65 47 16

Copyright Notification: No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 1999. All rights reserved.

Page 2

ETS 300 940 (GSM 04.08 version 5.11.1 Release 1996): March 1999

iTeh STANDARD PREVIEW (standards.iteh.ai)

SIST ETS 300 940 E5:2005

<https://standards.iteh.ai/catalog/standards/sist/0ad2b66f-730c-4dfb-b859-bd1c04cabd59/sist-ets-300-940-e5-2005>

Contents

Intellectual Property Rights	21
Foreword	21
Introduction.....	22
0 Scope	23
0.1 Scope of the Technical Specification	23
0.2 Application to the interface structures.....	23
0.3 Structure of layer 3 procedures.....	23
0.4 Test procedures	23
0.5 Use of logical channels	23
0.6 Overview of control procedures	24
0.6.1 List of procedures	24
0.7 Applicability of implementations.....	25
1 Normative references.....	26
2 Definitions and abbreviations	30
2.1 Random values	30
2.2 Vocabulary	30
3 Radio Resource management procedures	32
3.1 Overview/General	32
3.1.1 General.....	32
3.1.2 Services provided to upper layers	32
3.1.2.1 Idle mode	32
3.1.2.2 Dedicated mode	32
3.1.2.3 Group receive mode	33
3.1.2.4 Group transmit mode	33
3.1.3 Services required from data link and physical layers	33
3.1.4 Change of dedicated channels	33
3.1.4.1 Change of dedicated channels using SAPI = 0	33
3.1.4.2 Change of dedicated channels using other SAPIs than 0	34
3.1.4.3 Sequenced message transfer operation.....	34
3.1.4.3.1 Variables and sequence numbers	34
3.1.4.3.2 Procedures for the initiation, transfer execution and termination of the sequenced message transfer operation	35
3.1.5 Procedure for Service Request and Contention Resolution	35
3.2 Idle mode procedures	36
3.2.1 Mobile Station side	36
3.2.2 Network side.....	36
3.2.2.1 System information broadcasting	36
3.2.2.2 Paging.....	37
3.3 RR connection establishment	37
3.3.1 RR connection establishment initiated by the mobile station	37
3.3.1.1 Entering the dedicated mode : immediate assignment procedure.....	37
3.3.1.1.1 Permission to access the network	37
3.3.1.1.2 Initiation of the immediate assignment procedure.....	38
3.3.1.1.3 Answer from the network	39
3.3.1.1.4 Assignment completion.....	40
3.3.1.1.5 Abnormal cases	41

3.3.1.2	Entering the group transmit mode: uplink access procedure	41
3.3.1.2.1	Mobile station side.....	41
3.3.1.2.2	Network side	42
3.3.1.2.3	Abnormal cases	43
3.3.2	Paging procedure	43
3.3.2.1	Paging initiation by the network.....	43
3.3.2.2	Paging response	44
3.3.2.3	Abnormal cases	44
3.3.3	Notification procedure.....	45
3.3.3.1	Notification of a call.....	45
3.3.3.2	Joining a VGCS or VBS call.....	45
3.3.3.3	Reduced NCH monitoring mechanism	46
3.4	Procedures in dedicated mode and in group transmit mode	47
3.4.1	SACCH procedures	47
3.4.1.1	General	47
3.4.1.2	Measurement report.....	48
3.4.1.3	Extended measurement report \$(MAFA)\$.....	48
3.4.2	Transfer of messages and link layer service provision.....	48
3.4.3	Channel assignment procedure.....	49
3.4.3.1	Channel assignment initiation	49
3.4.3.2	Assignment completion.....	51
3.4.3.3	Abnormal cases	51
3.4.4	Handover procedure	52
3.4.4.1	Handover initiation	52
3.4.4.2	Physical channel establishment.....	54
	3.4.4.2.1 Finely synchronized cell case.....	54
	3.4.4.2.2 Non synchronized cell case.....	54
	3.4.4.2.3 Pseudo-synchronized cell case	55
	3.4.4.2.4 Pre-synchronized cell case	55
	3.4.4.3 Handover completion.....	55
	3.4.4.4 Abnormal cases	56
3.4.5	Frequency redefinition procedure	57
3.4.5.1	Abnormal cases	57
3.4.6	Channel mode modify procedure.....	57
	3.4.6.1 Normal channel mode modify procedure	58
	3.4.6.1.1 Initiation of the channel mode modify procedure	58
	3.4.6.1.2 Completion of channel mode modify procedure	58
	3.4.6.1.3 Abnormal cases	58
	3.4.6.2 Channel mode modify procedure for a voice group call talker	58
	3.4.6.2.1 Initiation of the channel mode modify procedure	58
	3.4.6.2.2 Completion of mode change procedure	58
	3.4.6.2.3 Abnormal cases	59
3.4.7	Ciphering mode setting procedure.....	59
3.4.7.1	Ciphering mode setting initiation	59
3.4.7.2	Ciphering mode setting completion.....	59
3.4.8	Additional channel assignment procedure.....	60
3.4.8.1	Additional assignment procedure initiation.....	60
3.4.8.2	Additional assignment procedure completion	60
3.4.8.3	Abnormal cases	60
3.4.9	Partial channel release procedure	61
3.4.9.1	Partial release procedure initiation	61
3.4.9.2	Abnormal cases	61
3.4.10	Classmark change procedure.....	61
3.4.11	Classmark interrogation procedure	61
	3.4.11.1 Classmark interrogation initiation	61
	3.4.11.2 Classmark interrogation completion	62
3.4.12	Indication of notifications and paging informations.....	62

3.4.13	RR connection release procedure.....	63
3.4.13.1	Normal release procedure	63
3.4.13.1.1	Channel release procedure initiation in dedicated mode and in group transmit mode.....	63
3.4.13.1.2	Abnormal cases	64
3.4.13.2	Radio link failure in dedicated mode.....	64
3.4.13.2.1	Mobile side.....	64
3.4.13.2.2	Network side	64
3.4.13.3	RR connection abortion in dedicated mode.....	64
3.4.13.4	Uplink release procedure in group transmit mode.....	65
3.4.13.5	Radio link failure in group transmit mode	65
3.4.13.5.1	Mobile side.....	65
3.4.13.5.2	Network side	65
3.4.14	Receiving a RR STATUS message by a RR entity.....	65
3.4.15	Group receive mode procedures.....	66
3.4.15.1	Mobile station side	66
3.4.15.1.1	Reception of the VGCS or VBS channel	66
3.4.15.1.2	Monitoring of downlink messages and related procedures.....	66
3.4.15.1.3	Uplink reply procedure	67
3.4.15.1.4	Leaving the group receive mode	68
3.4.15.2	Network side.....	68
3.4.15.2.1	Provision of messages on the VGCS or VBS channel downlink	68
3.4.15.2.2	Release of the VGCS or VBS Channels.....	69
3.4.15.3	Failure cases	69
3.4.16	Configuration change procedure	69
3.4.16.1	Configuration change initiation	70
3.4.16.2	Configuration change completion	70
3.4.16.3	Abnormal cases	70
3.4.17	SIST ETS 300 940 E5:2005 https://standards.ieelnan.catelog/standards/sist/vad2b661-730c-4d1b-b859-0bd1344cabd59/sist-ets-300-940-e5-2005	70
3.4.18	Handling of classmark information at band change	71
4	Elementary procedures for Mobility Management.....	72
4.1	General	72
4.1.1	Type of MM procedures	72
4.1.2	MM sublayer states	73
4.1.2.1	MM sublayer states in the mobile station.....	73
4.1.2.1.1	Main states.....	73
4.1.2.1.2	Substates of the MM IDLE state	76
4.1.2.2	The update Status	77
4.1.2.3	MM sublayer states on the network side	78
4.2	Behaviour in MM IDLE State.....	79
4.2.1	Primary Service State selection	79
4.2.1.1	Selection of the Service State after Power On.	79
4.2.1.2	Other Cases	80
4.2.2	Detailed Description of the MS behaviour in MM IDLE State.....	80
4.2.2.1	Service State, NORMAL SERVICE	80
4.2.2.2	Service State, ATTEMPTING TO UPDATE	81
4.2.2.3	Service State, LIMITED SERVICE	81
4.2.2.4	Service State, NO IMSI.....	82
4.2.2.5	Service State, SEARCH FOR PLMN, NORMAL SERVICE.	82
4.2.2.6	Service State, SEARCH FOR PLMN.....	82
4.2.2.7	Service State, RECEIVING GROUP CALL (NORMAL SERVICE).....	83
4.2.2.8	Service State, RECEIVING GROUP CALL (LIMITED SERVICE).....	83
4.2.3	Service state when back to state MM IDLE from another state	83
4.3	MM common procedures	84

iTeh STANDARD REVIEW**(Standard Review)**

4.3.1	TMSI reallocation procedure.....	84
4.3.1.1	TMSI reallocation initiation by the network.....	85
4.3.1.2	TMSI reallocation completion by the mobile station.....	85
4.3.1.3	TMSI reallocation completion in the network.	85
4.3.1.4	Abnormal cases	85
4.3.2	Authentication procedure.....	87
4.3.2.1	Authentication request by the network	87
4.3.2.2	Authentication response by the mobile station.....	87
4.3.2.3	Authentication processing in the network	87
4.3.2.4	Ciphering key sequence number	87
4.3.2.5	Unsuccessful authentication	88
4.3.2.6	Abnormal cases	88
4.3.3	Identification procedure	89
4.3.3.1	Identity request by the network	89
4.3.3.2	Identification response by the mobile station	89
4.3.3.3	Abnormal cases	89
4.3.4	IMSI detach procedure	89
4.3.4.1	IMSI detach initiation by the mobile station	89
4.3.4.2	IMSI detach procedure in the network	90
4.3.4.3	IMSI detach completion by the mobile station.....	90
4.3.4.4	Abnormal cases	90
4.3.5	Abort procedure	90
4.3.5.1	Abort procedure initiation by the network.....	90
4.3.5.2	Abort procedure in the mobile station	91
4.3.6	MM information procedure.....	91
4.3.6.1	MM information procedure initiation by the network.....	91
4.3.6.2	MM information procedure in the mobile station	91
4.4	MM specific procedures.....	92
4.4.1	Location updating procedure	92
4.4.2	Periodic updating	93
4.4.3	IMSI attach procedure.....	93
4.4.4	Generic Location Updating procedure.....	94
4.4.4.1	Location updating initiation by the mobile station.....	94
4.4.4.1a	https://standards.iteh.eu/catalog/standards/sist/vad2b661-730c-4d1b-b839-bd1c74cahd29/sist-ets-300-940-e5-2005	
4.4.4.1a	Network Request for Additional mobile station Capability Information	94
4.4.4.2	Identification request from the network	94
4.4.4.3	Authentication by the network	94
4.4.4.4	Ciphering mode setting by the network.....	94
4.4.4.5	Attempt Counter.....	94
4.4.4.6	Location updating accepted by the network.....	95
4.4.4.7	Location updating not accepted by the network.....	95
4.4.4.8	Release of RR connection after location updating.....	96
4.4.4.9	Abnormal cases on the mobile station side	96
4.4.4.10	Abnormal cases on the network side	97
4.5	Connection management sublayer service provision.....	98
4.5.1	MM connection establishment	98
4.5.1.1	MM connection establishment initiated by the mobile station.....	98
4.5.1.2	Abnormal cases	101
4.5.1.3	MM connection establishment initiated by the network....	102
4.5.1.3.1	Mobile Terminating CM Activity	102
4.5.1.3.2	Mobile Originating CM Activity \$(CCBS)\$.....	103
4.5.1.4	Abnormal cases	103
4.5.1.5	MM connection establishment for emergency calls	103
4.5.1.6	Call re-establishment	104
4.5.1.6.1	Call re-establishment, initiation by the mobile station	105
4.5.1.6.2	Abnormal cases	106
4.5.1.7	Forced release during MO MM connection establishment	107
4.5.2	MM connection information transfer phase	107
4.5.2.1	Sending CM messages.....	107
4.5.2.2	Receiving CM messages	108

4.5.3	4.5.2.3	Abnormal cases.....	108
		MM connection release	108
	4.5.3.1	Release of associated RR connection.....	108
	4.5.3.2	Uplink release in a voice group call	109
4.6		Receiving a MM STATUS message by a MM entity.....	109
5		Elementary procedures for circuit-switched Call Control	110
5.1		Overview	110
	5.1.1	General.....	110
	5.1.2	Call Control States	115
	5.1.2.1	Call states at the mobile station side of the interface	115
	5.1.2.1.1	Null (State U0)	115
	5.1.2.1.2	MM Connection pending (U0.1).....	115
	5.1.2.1.2a	CC prompt present (U0.2) \$(CCBS)\$.....	115
	5.1.2.1.2b	Wait for network information (U0.3) \$(CCBS)\$.....	115
	5.1.2.1.2c	CC-Establishmentpresent (U0.4) \$(CCBS)\$.....	115
	5.1.2.1.2d	CC-Establishment confirmed (U0.5) \$(CCBS)\$.....	115
	5.1.2.1.2e	Recall present (U0.6) \$(CCBS)\$.....	115
	5.1.2.1.3	Call initiated (U1)	115
	5.1.2.1.4	Mobile originating call proceeding (U3).....	115
	5.1.2.1.5	Call delivered (U4)	116
	5.1.2.1.6	Call present (U6).....	116
	5.1.2.1.7	Call received (U7)	116
	5.1.2.1.8	Connect Request (U8)	116
	5.1.2.1.9	Mobile terminating call confirmed (U9).....	116
	5.1.2.1.10	Active (U10)	116
	5.1.2.1.11	Disconnect request (U11)	116
	5.1.2.1.12	Disconnect indication (U12)	116
	5.1.2.1.13	Release request (U19).....	116
	5.1.2.1.14	Mobile originating modify (U26)	116
	5.1.2.1.15	Mobile terminating modify (U27)	116
	5.1.2.2	Network call states	116
	5.1.2.2.1	Null (State N0)	117
	5.1.2.2.2	MM connection pending (N0.1)	117
	5.1.2.2.2a	CC connection pending (N0.2) \$(CCBS)\$.....	117
	5.1.2.2.2b	Network answer pending (N0.3) \$(CCBS)\$.....	117
	5.1.2.2.2c	CC-Establishment present (N0.4) \$(CCBS)\$.....	117
	5.1.2.2.2d	CC-Establishment confirmed (N0.5) \$(CCBS)\$.....	117
	5.1.2.2.2e	Recall present (N0.6) \$(CCBS)\$	117
	5.1.2.2.2f	Call initiated (N1)	117
	5.1.2.2.4	Mobile originating call proceeding (N3).....	117
	5.1.2.2.5	Call delivered (N4)	117
	5.1.2.2.6	Call present (N6).....	117
	5.1.2.2.7	Call received (N7)	117
	5.1.2.2.8	Connect request (N8)	118
	5.1.2.2.9	Mobile terminating call confirmed (N9).....	118
	5.1.2.2.10	Active (N10)	118
	5.1.2.2.11	{Not used}	118
	5.1.2.2.12	Disconnect indication (N12)	118
	5.1.2.2.13	Release request (N19)	118
	5.1.2.2.14	Mobile originating modify (N26)	118
	5.1.2.2.15	Mobile terminating modify (N27)	118
	5.1.2.2.16	Connect Indication (N28)	118
5.2		Call establishment procedures	118
	5.2.1	Mobile originating call establishment.....	119
	5.2.1.1	Call initiation	119

iTeh STANDARD PREVIEW

(standards.iteh.ai)

<https://standards.iteh.ai/catalog/standards/sist0ad2b66f730c4db-b839-bd1c04cabd59/sist-ets-300-940-c3-2005>

5.2.1.2	Receipt of a setup message	120
5.2.1.3	Receipt of a CALL PROCEEDING message.....	121
5.2.1.4	Notification of progressing mobile originated call.....	121
5.2.1.4.1	Notification of interworking in connection with mobile originated call establishment	121
5.2.1.4.2	Call progress in the PLMN/ISDN environment	122
5.2.1.5	Alerting	122
5.2.1.6	Call connected	123
5.2.1.7	Call rejection	123
5.2.1.8	Transit network selection	123
5.2.1.9	Traffic channel assignment at mobile originating call establishment.....	123
5.2.1.10	Call queuing at mobile originating call establishment	124
5.2.2	Mobile terminating call establishment.....	124
5.2.2.1	Call indication.....	124
5.2.2.2	Compatibility checking	125
5.2.2.3	Call confirmation	125
5.2.2.3.1	Response to SETUP	125
5.2.2.3.2	Receipt of CALL CONFIRMED and ALERTING by the network.....	125
5.2.2.3.3	Call failure procedures	126
5.2.2.3.4	Called mobile station clearing during mobile terminating call establishment	126
5.2.2.4	Notification of interworking in connection with mobile terminating call establishment.....	126
5.2.2.5	Call accept	126
5.2.2.6	Active indication	126
5.2.2.7	Traffic channel assignment at mobile terminating call establishment.....	127
5.2.2.8	Call queuing at mobile terminating call establishment	127
5.2.2.9	User connection attachment during a mobile terminating call.....	127
5.2.3	https://standards.iteh.ai/canalog/standards/sis/ets300-940-e5-2005-bd1c04cabd59/sist-ets-300-940-e5-2005	
5.2.3.1	Network initiated MO call \$(CCBS)\$.....	127
5.2.3.2	Initiation.....	127
5.2.3.3	CC-Establishment present	128
5.2.3.4	5.2.3.2.1 Recall Alignment Procedure.....	129
5.2.3.5	CC-Establishment confirmation	130
5.2.3.5	Recall present	130
5.2.3.5	Traffic channel assignment during network initiated mobile originating call establishment	131
5.3	Signalling procedures during the "active" state	131
5.3.1	User notification procedure.....	131
5.3.2	Call rearrangements	131
5.3.3	Not used	131
5.3.4	Support of Dual Services	131
5.3.4.1	5.3.4.1 Service Description	132
5.3.4.2	5.3.4.2 Call establishment.....	132
5.3.4.2.1	5.3.4.2.1 Mobile Originating Establishment.....	132
5.3.4.2.2	5.3.4.2.2 Mobile Terminating Establishment.....	133
5.3.4.3	5.3.4.3 Changing the Call Mode.....	133
5.3.4.3.1	5.3.4.3.1 Initiation of in-call modification	133
5.3.4.3.2	5.3.4.3.2 Successful completion of in-call modification	134
5.3.4.3.3	5.3.4.3.3 Change of the channel configuration	134
5.3.4.3.4	5.3.4.3.4 Failure of in-call modification.....	134
5.3.4.4	5.3.4.4 Abnormal procedures.....	135
5.3.5	User initiated service level up- and downgrading	136
5.3.5.1	5.3.5.1 Initiation of service level up- and downgrading	136
5.3.5.2	5.3.5.2 Successful completion of service level up- and downgrading.....	136
5.3.5.3	5.3.5.3 Rejection of service level up- and downgrading.....	136

5.4	Call clearing	136
5.4.1	Terminology.....	137
5.4.2	Exception conditions	137
5.4.3	Clearing initiated by the mobile station.....	138
5.4.3.1	Initiation of call clearing	138
5.4.3.2	Receipt of a DISCONNECT message from the mobile station.....	138
5.4.3.3	Receipt of a RELEASE message from the network	138
5.4.3.4	Receipt of a RELEASE COMPLETE message from the mobile station.....	138
5.4.3.5	Abnormal cases.....	138
5.4.4	Clearing initiated by the network	138
5.4.4.1	Clearing when tones/announcements provided	138
5.4.4.1.1	Receipt of a DISCONNECT message with progress indicator #8 from the network	139
5.4.4.1.2	Expiry of timer T306.....	139
5.4.4.2	Clearing when tones/announcements not provided	139
5.4.4.2.1	Receipt of a DISCONNECT message without progress indicator or with progress indicator different from #8 from the network.....	139
5.4.4.2.2	Receipt of a RELEASE message from the mobile station.....	139
5.4.4.2.3	Abnormal cases	139
5.4.4.3	Completion of clearing	140
5.4.4.3.1	Abnormal cases	140
5.4.5	iTeh STANDARD PREVIEW Clear collision	140
5.5	Miscellaneous procedures	140
5.5.1	In-band tones and announcements.....	140
5.5.2	Call collisions.....	140
5.5.3	Status procedures.....	141
5.5.3.1	SIST ETS 300 940 E5:2005 Status enquiry procedure.....	141
5.5.3.2	https://standards.ieee.org/catalog/standards/sist/940/brief/30c4dib-b859-bd1c04cabd59/sist-ets-300-940-c5-2005 Reception of a STATUS message by a CC entity	141
5.5.3.2.1	STATUS message with incompatible state	141
5.5.3.2.2	STATUS message with compatible state	141
5.5.4	Call re-establishment, mobile station side.....	142
5.5.4.1	Indication from the mobility management sublayer	142
5.5.4.2	Reaction of call control	142
5.5.4.3	Completion of re-establishment.....	142
5.5.4.4	Unsuccessful outcome	142
5.5.5	Call re-establishment, network side	142
5.5.5.1	State alignment.....	142
5.5.6	Progress	142
5.5.7	DTMF protocol control procedure	143
5.5.7.1	Start DTMF request by the mobile station	143
5.5.7.2	Start DTMF response by the network	143
5.5.7.3	Stop DTMF request by the mobile station	143
5.5.7.4	Stop DTMF response by the network	143
5.5.7.5	Sequencing of subsequent start DTMF requests by the mobile station.....	144
6	Support of packet services.....	144
7	Examples of structured procedures	145
7.1	General	145
7.1.1	Paging request	146
7.1.2	Immediate assignment	146
7.1.3	Service request and contention resolution	147
7.1.4	Authentication.....	147

7.1.5	Ciphering mode setting.....	148
7.1.6	Transaction phase	148
7.1.6.1	Channel mode modify	148
7.1.7	Channel release.....	149
7.2	Abnormal cases	149
7.3	Selected examples.....	149
7.3.1	Location updating	150
7.3.2	Mobile originating call establishment.....	152
7.3.3	Mobile terminating call establishment.....	156
7.3.4	Call clearing	159
7.3.5	DTMF protocol control	160
7.3.6	Handover	161
7.3.7	In-call modification.....	163
7.3.8	Call re-establishment.....	164
7.3.9	Network initiated mobile originating call \$(CCBS)\$	165
8	Handling of unknown, unforeseen, and erroneous protocol data	170
8.1	General.....	170
8.2	Message too short.....	170
8.3	Unknown or unforeseen transaction identifier.....	170
8.4	Unknown or unforeseen message type.....	171
8.5	Non-semantical mandatory information element errors	172
8.5.1	Radio resource management	172
8.5.2	Mobility management.....	172
8.5.3	Call control.....	172
8.6	Unknown and unforeseen IEs in the non-imperative message part	173
8.6.1	IEIs unknown in the message.....	173
8.6.2	Out of sequence IEs.....	173
8.6.3	Repeated IEIs	173
8.7	Non-imperative message part errors	173
8.7.1	Syntactically incorrect optional IEs.....	173
8.7.2	Conditional IE errors	173
8.8	Messages with semantically incorrect contents.....	174
9	Message functional definitions and contents..... https://standards.iteh.ai/catalog/standards/sist/0ad2b66f-730c-4dfb-b859-bd1e04eabd19/sist-ets-300-940-e5-2005	174
9.1	Messages for Radio Resources management.....	175
9.1.1	Additional assignment.....	177
9.1.1.1	Mobile Allocation	177
9.1.1.2	Starting Time.....	177
9.1.2	Assignment command.....	178
9.1.2.1	Mode of the First Channel (Channel Set 1) and Mode of Channel Set "X" (2=<X=<8)	179
9.1.2.2	Description of the Second Channel	179
9.1.2.3	Mode of the Second Channel.....	179
9.1.2.4	Mobile Allocation and Frequency List, after the starting time	179
9.1.2.5	Starting Time.....	180
9.1.2.6	Reference cell frequency list.....	180
9.1.2.7	Cell Channel Description.....	180
9.1.2.8	Cipher Mode Setting	180
9.1.2.9	VGCS target mode Indication	181
9.1.2.10	Description of the multislot allocation.....	181
9.1.3	Assignment complete	181
9.1.4	Assignment failure	182
9.1.5	Channel mode modify.....	182
9.1.5.1	Channel Description.....	182
9.1.5.2	VGCS target mode Indication	182
9.1.6	Channel mode modify acknowledge.....	183
9.1.7	Channel release.....	184
9.1.7.1	Channel description and mobile allocation.....	184
9.1.7.2	Group Cipher Key Number.....	184
9.1.8	Channel request	185
9.1.9	Ciphering mode command	187

9.1.10	Ciphering mode complete	188
9.1.10.1	Mobile Equipment Identity	188
9.1.11	Classmark change	188
9.1.11.1	Additional Mobile Station Classmark Information	188
9.1.11.2	Mobile Station Classmark.....	188
9.1.12	Classmark enquiry.....	189
9.1.12a	[Spare].....	189
9.1.12b	Configuration change command	189
9.1.12b.1	Description of the multislot allocation	190
9.1.12b.2	Mode of Channel Set "X" (1=<X<=8).....	190
9.1.12c	Configuration change acknowledge	190
9.1.12d	Configuration change reject	190
9.1.13	Frequency redefinition	191
9.1.13.1	Cell Channel Description	191
9.1.14	Handover access.....	191
9.1.15	Handover command.....	192
9.1.15.1	Synchronization Indication.....	193
9.1.15.2	Mode of the First Channel (Channel Set 1) and Mode of Channel Set "X" (2=<X<=8).....	193
9.1.15.3	Description of the Second Channel	193
9.1.15.4	Mode of the Second Channel	193
9.1.15.5	Frequency Channel Sequence, Frequency List, Frequency short list and Mobile Allocation, after time.	194
9.1.15.6	Starting Time	194
9.1.15.7	Reference cell frequency list.....	195
9.1.15.8	Real Time Difference.....	195
9.1.15.9	Timing Advance.....	195
9.1.15.10	Cipher Mode Setting	195
9.1.15.11	VGCS target mode indication.....	195
9.1.15.12	Description of the multislot allocation	195
9.1.16	Handover complete	196
9.1.16.1	Mobile Observed Time Difference	196
9.1.17	Handover failure	196
9.1.18	Immediate assignment	197
	https://standards.ieee.org/ieee-standards/sist/od2b66f-730c-4dib-b859-bd1c04cabd59/sist-ets-300-940-e5-2005	
9.1.18.1	Mobile Allocation.....	197
9.1.18.2	Starting Time	197
9.1.18.3	IA Rest Octets (Frequency parameters, before time).....	197
9.1.19	Immediate assignment extended	198
9.1.19.1	Unnecessary IEs.....	198
9.1.19.2	Mobile Allocation.....	199
9.1.19.3	Starting Time	199
9.1.19.4	Maximum message length	199
9.1.19.5	IAX Rest Octets	199
9.1.20	Immediate assignment reject	199
9.1.20.1	Use of the indexes.....	200
9.1.20.2	Filling of the message.....	200
9.1.20.3	IAR Rest Octets	200
9.1.21	Measurement report.....	200
9.1.21a	Notification/FACCH	200
9.1.21a.1	Spare	202
9.1.21a.2	Spare	202
9.1.21a.3	Spare	202
9.1.21a.4	Spare	202
9.1.21b	Notification/NCH.....	202
9.1.21b.1	Spare	203
9.1.21b.2	Spare	203
9.1.21.d	Spare	203
9.1.22	Paging request type 1.....	203
9.1.22.1	Unnecessary IE	203
9.1.22.2	Channels needed for Mobiles 1 and 2.....	204
9.1.22.3	Mobile Identities.....	204
9.1.22.4	P1 Rest Octets	204
9.1.23	Paging request type 2.....	204

	9.1.23.1	Channels needed for Mobiles 1 and 2	204
	9.1.23.2	Mobile Identity 3	204
	9.1.23.3	P2 Rest Octets	205
9.1.24		Paging request type 3	205
	9.1.24.1	Channels needed for Mobiles 1 and 2	205
	9.1.24.2	P3 Rest Octets	205
9.1.25		Paging response	206
	9.1.25.1	Mobile Station Classmark	206
9.1.26		Partial release	206
	9.1.26.1	Channel Description	206
9.1.27		Partial release complete	207
9.1.28		Physical information	207
9.1.29		RR Status	207
9.1.30		Synchronization channel information	208
9.1.31		System information Type 1	209
9.1.32		System information type 2	209
9.1.33		System information type 2bis	210
9.1.34		System information type 2ter	210
9.1.35		System information type 3	211
9.1.36		System information type 4	212
	9.1.36.1	CBCH Channel description	212
	9.1.36.2	CBCH Mobile Allocation	212
	9.1.36.3	SI 4 Rest Octets	212
9.1.37		System information type 5	212
9.1.38		System information type 5bis	213
9.1.39		System information type 5ter	213
9.1.40		System information type 6	214
	9.1.40.1	Cell Identity	214
	9.1.40.2	Location Area Identification	214
	9.1.40.3	Cell Options	214
	9.1.40.4	NCC permitted	215
9.1.41		System information type 7	215
9.1.42		System information type 8	215
9.1.43		System information Type 9	216
9.1.44		Talker indication	216
9.1.45		Uplink access	217
9.1.46		Uplink busy	218
9.1.47		Uplink free	218
9.1.48		Uplink release	219
9.1.49		VGCS uplink grant	220
9.1.50		System information type 10 \$(ASCI)\$	221
9.1.51		EXTENDED MEASUREMENT ORDER \$(MAFA)\$	221
9.1.52		Extended measurement report \$(MAFA)\$	222
9.2		Messages for mobility management	223
9.2.1		Authentication reject	224
9.2.2		Authentication request	224
9.2.3		Authentication response	225
9.2.4		CM Re-establishment request	225
	9.2.4.1	Location area identification	225
	9.2.4.2	Mobile Station Classmark	225
9.2.5		CM service accept	226
9.2.5a		CM service prompt \$(CCBS)\$	226
9.2.6		CM service reject	226
9.2.7		CM service abort	227
9.2.8		Abort	227
9.2.9		CM service request	228
	9.2.9.1	Mobile Station Classmark	228
	9.2.9.2	Priority	228
9.2.10		Identity request	229
9.2.11		Identity response	229
9.2.12		IMSI detach indication	230
	9.2.12.1	Mobile Station Classmark	230
9.2.13		Location updating accept	231

	9.2.13.1	Follow on proceed	231
9.2.14		Location updating reject	231
9.2.15		Location updating request	232
	9.2.15.1	Location area identification	232
	9.2.15.2	Mobile Station Classmark	232
9.2.15a		MM information	233
	9.2.15a.1	Full name for network	233
	9.2.15a.2	Short name for network	233
	9.2.15a.3	Network time zone	233
	9.2.15a.4	Network time zone and time	233
9.2.16		MM Status	234
9.2.17		TMSI reallocation command	234
9.2.18		TMSI reallocation complete	234
9.2.19		MM Null	235
9.2.20		Notification response	235
9.3		Messages for circuit-switched call control	236
9.3.1		Alerting	237
	9.3.1.1	Alerting (network to mobile station direction)	237
	9.3.1.1.1	Facility	237
	9.3.1.1.2	Progress indicator	237
	9.3.1.1.3	User-user	237
	9.3.1.2	Alerting (mobile station to network direction)	238
	9.3.1.2.1	Facility	238
	9.3.1.2.2	User-user	238
	9.3.1.2.3	SS version	238
9.3.2		Call confirmed	239
	9.3.2.1	Repeat indicator	240
	9.3.2.2	Bearer capability 1 and bearer capability 2	240
	9.3.2.3	Cause	240
	9.3.2.4	CC Capabilities	240
9.3.3		Call proceeding	241
	9.3.3.1	Repeat indicator	241
	9.3.3.2	Bearer capability 1 and bearer capability 2	241
	9.3.3.3	SIST ETS 300 940 E5:2005 https://standards.iteh.ai/catalog/standards/sist/aid2b66f730c-4d1b-b839-bd1cb04cabd59/sist-ets-300-940-e5-2005	241
	9.3.3.4	Facility	241
	9.3.3.5	Progress Indicator	241
	9.3.3.5	Priority granted	241
9.3.4		Congestion control	242
	9.3.4.1	Cause	242
9.3.5		Connect	243
	9.3.5.1	Connect (network to mobile station direction)	243
	9.3.5.1.1	Facility	243
	9.3.5.1.2	Progress indicator	243
	9.3.5.1.3	User-user	243
	9.3.5.2	Connect (mobile station to network direction)	244
	9.3.5.2.1	Facility	244
	9.3.5.2.2	User-user	244
	9.3.5.2.3	SS version	244
9.3.6		Connect acknowledge	245
9.3.7		Disconnect	245
	9.3.7.1	Disconnect (network to mobile station direction)	245
	9.3.7.1.1	Facility	246
	9.3.7.1.2	Progress indicator	246
	9.3.7.1.3	User-user	246
	9.3.7.2	Disconnect (mobile station to network direction)	246
	9.3.7.2.1	Facility	247
	9.3.7.2.2	User-user	247
	9.3.7.2.3	SS version	247
9.3.8		Emergency setup	247
	9.3.8.1	Bearer capability	247
9.3.9		Facility	248
	9.3.9.1	Facility (network to mobile station direction)	248
	9.3.9.2	Facility (mobile station to network direction)	248
	9.3.9.2.1	SS version	249