

Designation: F 856 – 97

An American National Standard

Standard Practice for Mechanical Symbols, Shipboard—Heating, Ventilation, and Air Conditioning (HVAC)¹

This standard is issued under the fixed designation F 856; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ϵ) indicates an editorial change since the last revision or reapproval.

This standard has been approved for use by agencies of the Department of Defense.

1. Scope

- 1.1 This practice covers symbols used on heating, ventilation, and air conditioning (HVAC) detailed engineering drawings.
- 1.2 These symbols may be useful on contract and preliminary design drawings.

2. Significance and Use

- 2.1 When symbolic representation is required for an item not covered in this standard, the character of the symbol shall be adequately identified and shall be subject to one interpretation only. If necessary, a note shall be attached to the symbol for further clarity.
- 2.2 Symbolic representation does not require exact or scale layouts of the actual system. Therefore, the symbols may be used in all views of the system layout.

3. Abbreviations

3.1 The abbreviations (for use only in this practice) are defined as follows:

AFP = axial fan, ndards. iteh.ai/catalog/standards/sist/3cb4

AFD = automatic fire damper with manual override,

BD = balance damper,

CC = cooling coil,

CCW = counter clockwise,

CE = convection heater, electric,

CF = centrifugal fan,

CS = convection heater, steam,

CW = clockwise.

EH = turret heater electric,

EP = duct preheater, electric,

ER = duct reheater, electric,

EU = electric unit heater,

F = filter.

FA = flame arrester,

FCA = fan coil assembly,

FCU = fan coil unit,

G = grille,

GC = gravity cooling coil,

H = humidistat, humidifier,

L = louver.

M = motor,

MFD = manual fire damper,

NE = natural exhaust,

NS = natural supply,

R = return air,

RO = remote operated,

SFD = solenoid fire damper,

SP = preheater, steam,

SR = reheater, steam,

SU_d= steam unit heater, | e5abd6a22a/astm-f856-97

T = thermostat,

TE = tempered air, electric,

TS = tempered air, steam,

U = undercut,

UC = unit cooler,

V = volume, volumetric, and

VC = volume control.

4. Illustrations

4.1 Illustrations for HVAC symbols are given in Figs. 1-4.

5. Keywords

5.1 air conditioning; design symbols; engineering symbols; heating; HVAC; marine; ship; symbols; ventilation

¹ This practice is under the jurisdiction of ASTM Committee F-25 on Ships and Marine Technology and is the direct responsibility of Subcommittee F25.11 on Machinery.

Current edition approved Nov. 10, 1997. Published October 1998. Originally published as F 856 – 83. Last previous edition F 856 – 88 (1994) $^{\varepsilon 1}$.

₩ F 856 – 97

L	AIR FLOW DUC	TS		AIR FLOW DUCTS		
NO	TITLE	SYMBOL	ND	TITLE	SYMBOL	
-	SUPPLY DUCT		11	DUCT - UP AND DOWN		
2	EXHAUST DUCT		12	DUCT - UP AND DOWN WATERTIGHT OR CLASS "A" CONSTRUCTION (SEE NOTE !)		
3	AIR CONDITIONING DUCT		13	TRUNK UP		
4	RETURN AIR DUCT	R	4	TRUNK UP WATERTIGHT OR CLASS "A" CONSTRUCTION (SEE NOTE)		
5	WATERTIGHT OR CLASS "A" CONSTRUCTION DUCT (SEE NOTE I)		15	TRUNK DOWN		
6	FLEXIBLE CONNECTION	len Sta 	16.	TRUNK DOWN WATERTIGHT OR CLASS "A" CONSTRUCTION (SEE NOTE +)		
7	рист ир ДО	cupen	17	TRUNK UP AND DOWN		
aro	DUCT UP WATERTIGHT OR CLASS "A" CONSTRUCTION (SEE NOTE 1)		18	TRUNK UP AND DOWN WATERTIGHT OR -ALL CLASS "A" CONSTRUCTION (SEE NOTE)	5al Was	
,	DUCT DOWN	<u></u>				
0	DUCT DOWN WATERTIGHT OR CLASS "A" CONSTRUCTION (SEE NOTE)					

Note 1—"Class A" is in reference to bulkhead classification as described in the Code of Federal Regulations, Title 46, Section 92.07-5. (Available from Superintendent of Documents, U. S. Government Printing Office, Washington, DC 20402.)

FIG. 1 HVAC Symbols for Air Flow Ducts

	DUCT FITTINGS			DUCT FITTINGS	
NΟ	TITLE	SYMBOL	NO	TITLE	SYMBOL
_	SUPPLY TERMINAL TYPE "E"		11	WATERTIGHT COVER, MANUAL OR FIRE CLOSURE CLASS "A" CONSTRUCTION, MANUAL (SEE NOTE 1)	
2	SUPPLY TERMINAL DOWN TO DECK		12	FIRE DAMPER, AUTOMATIC W/ MANUAL OVERRIDE	AFO
3	SUPPLY TERMINAL CONE		13	FIRE DAMPER, MANUAL	MFD
4	EXHAUST TERMINAL DOWN TO DECK		14	FIRE DAMPER, SOLENOID	SFD
5	EXHAUST TERMINAL CONE	->	15	BALANCE DAMPER	BD
6	EXHAUST GRILLE	Teh Sta	16	DIVERTING DAMPER	<u>'</u>
7	RETURN AIR GRILLE	cu∑ - en	17	VOLUMETRIC DAMPER	
ar	ds.iteh.aveatalog/standa	rds/s TM	F8 18 10	56-97)-d1d0-4019-0817-a16	5abd/a22a/a
9	REGISTER	\bigcirc	19	MULTI-LOUVER DAMPER. MANUAL OPERATED	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\
10	AIR INTAKE/DISCHARGE LIFT TYPE	**	20	MULII-LOUVER DAMPER, MOTOR OPERATED	1,7,7,1 (M)

FIG. 2 HVAC Symbols for Duct Fittings