



Designation: D7320 – 17a

# Standard Test Method for Evaluation of Automotive Engine Oils in the Sequence IIIG, Spark-Ignition Engine<sup>1</sup>

This standard is issued under the fixed designation D7320; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon ( $\epsilon$ ) indicates an editorial change since the last revision or reapproval.

## INTRODUCTION

Portions of this test method are written for use by laboratories that make use of ASTM Test Monitoring Center (TMC)<sup>2</sup> services (see [Annex A1 – Annex A4](#)).

The TMC provides reference oils, and engineering and statistical services to laboratories that desire to produce test results that are statistically similar to those produced by laboratories previously calibrated by the TMC.

In general, the Test Purchaser decides if a calibrated test stand is to be used. Organizations such as the American Chemistry Council require that a laboratory utilize the TMC services as part of their test registration process. In addition, the American Petroleum Institute and the Gear Lubricant Review Committee of the Lubricant Review Institute (SAE International) require that a laboratory use the TMC services in seeking qualification of oils against their specifications.

The advantage of using the TMC services to calibrate test stands is that the test laboratory (and hence the Test Purchaser) has an assurance that the test stand was operating at the proper level of test severity. It should also be borne in mind that results obtained in a non-calibrated test stand may not be the same as those obtained in a test stand participating in the ASTM TMC services process.

Laboratories that choose not to use the TMC services may simply disregard these portions.

## 1. Scope\*

1.1 This test method covers an engine test procedure for evaluating automotive engine oils for certain high-temperature performance characteristics, including oil thickening, varnish deposition, oil consumption, as well as engine wear. Such oils include both single viscosity grade and multiviscosity grade oils that are used in both spark-ignition, gasoline-fueled engines, as well as in diesel engines.

1.1.1 Additionally, with nonmandatory supplemental requirements, a IIIGA Test (Mini Rotary Viscometer and Cold Cranking Simulator measurements), a IIIGVS Test (EOT viscosity increase measurement), or a IIIGB Test (phosphorous retention measurement) can be conducted. These supplemental

test procedures are contained in [Appendix X1](#), [Appendix X2](#), and [Appendix X3](#), respectively.

NOTE 1—Companion test methods used to evaluate engine oil performance for specification requirements are discussed in SAE J304.

1.2 The values stated in SI units are to be regarded as standard. No other units of measurement are included in this standard.

1.2.1 *Exception*—Where there is no direct SI equivalent such as screw threads, national pipe threads/diameters, and tubing size.

1.3 This test method is arranged as follows:

	Section
Introduction	
Scope	1
Referenced Documents	2
Terminology	3
Summary of Test Methods	4
Significance and Use	5
Apparatus	6
Laboratory	6.1
Drawings	6.2
Specified Equipment	6.3
Test Engine	6.4
Engine Parts	6.4.1
Engine Speed and Load Control	6.5
Fluid Conditioning Module	6.6
Engine Cooling System	6.6.1
Flushing Tank	6.7

<sup>1</sup> This test method is under the jurisdiction of ASTM Committee D02 on Petroleum Products, Liquid Fuels, and Lubricants and is the direct responsibility of Subcommittee D02.B0.01 on Passenger Car Engine Oils.

Current edition approved Oct. 1, 2017. Published October 2017. Originally approved in 2006. Last previous edition approved in 2017 as D7320 – 17. DOI: 10.1520/D7320-17A.

<sup>2</sup> Until the next revision of this test method, the ASTM Test Monitoring Center will update changes in the test method by means of information letters. Information letters may be obtained from the ASTM Test Monitoring Center, 6555 Penn Avenue, Pittsburgh, PA 15206-4489. Attention: Administrator. This edition incorporates revisions in all information letters through No. 17-2.

\*A Summary of Changes section appears at the end of this standard

	Section		Section
Coolant Mixing Tank	6.8	External Cooling System Cleaning	9.46
Condenser Cooling Systems	6.9	Engine Coolant Jacket Cleaning (Flushing)	9.47
Engine Oil-Cooling System	6.10	Coolant Charging	9.48
Fuel System	6.11	Test Oil Charging	9.49
Induction Air Supply Humidity, Temperature, and Pressure	6.12	Engine Oil Pump Priming	9.50
Temperature Measurement	6.13	Calibration	10
Thermocouple Location	6.13.1	Laboratory and Engine Test Stand Calibration	10.1
Air-to-Fuel Ratio Determination	6.14	Testing of Reference Oils	10.2
Injector Flow Testing	6.14.1	Reference Oil Test Frequency	10.3
Exhaust and Exhaust Back Pressure Systems	6.15	Evaluation of Reference Oil Test Results	10.4
Blowby Flow Rate Measurement	6.16	Status of Non-Reference Oil Tests Relative to Reference	10.5
Pressure Measurement and Pressure Sensor Location	6.17	Oil Test	
Reagents and Materials	7	Status of Test Stands Used for Non-Standard Tests	10.6
Test Fuel	7.1	Data Acquisition and Control	10.7
Engine and Condenser Coolant	7.2	Sample Rate	10.7.1
Coolant Additive	7.3	Measurement Accuracy	10.7.2
Coolant Preparation	7.4	Temperature	10.7.3
Pre-Test Cleaning Materials	7.5	Pressure	10.7.4
Sealing and Anti-seize Compounds	7.6	Flow	10.7.5
Test Oil Sample Requirements	8	Speed	10.7.6
Preparation of Apparatus	9	Load	10.7.7
Condenser Cleaning	9.1	Measurement Resolution	10.7.8
Intake Manifold Cleaning	9.2	System Time Response	10.7.9
Cleaning of Engine Parts (other than the block and heads)	9.3	Quality Index	10.7.10
Connecting Rod Cleaning	9.4	Engine Operating Procedure	11
Engine Block Cleaning	9.5	Dipstick and Hole Plug	11.1
Cylinder Head Cleaning	9.6	Dipstick Hole O-ring	11.2
Engine Build-up Procedure	9.7	Engine Start-up and Shutdown Procedures	11.3
General Information	9.7.1	Start-up	11.4
Special Parts	9.7.2	Scheduled Shutdown	11.5
Hardware Information	9.7.3	Non-Scheduled Shutdowns	11.6
Fastener Torque Specifications and Torquing Procedures	9.7.4	Oil Sampling	11.7
Main Bearing Cap Bolts	9.7.4.1	Oil Leveling	11.8
Cylinder Head Bolts	9.7.4.2	Air-to-Fuel-Ratio Measurement and Control	11.9
Torques for Miscellaneous Bolts, Studs, and Nuts	9.7.4.3	Air-to-Fuel Ratio Verification	11.10
Parts Replacement	9.8	Blowby Flow Rate Measurement	11.11
Engine Block Preparation	9.9	NOx Determinations	11.12
Piston Fitting and Numbering	9.10	Data Recording	11.13
Piston Ring Fitting	9.10.1	Initial run (10 min)	11.14
Pre-Test Camshaft and Lifter Measurements	9.11	Engine Oil Quality Testing (100 h)	11.15
Camshaft Bearing Installation	9.12	Test Termination	11.16
Camshaft Installation	9.13	Determination of Test Results	12
Main Bearings	9.14	Engine Disassembly	12.2
Crankshaft Installation	9.14.1	Preparation of Parts for Rating of Sticking, Deposits,	12.3
Main Bearing Cap Installation	9.14.2	and Plugging	
Crankshaft Sprocket	9.15	Piston Deposit Rating	12.4
Camshaft Sprocket, and Timing Chain	9.16	Post-Test Camshaft and Lifter Wear Measurements	12.5
Crankshaft End Play	9.17	Viscosity Test	12.6
Piston Pin Installation	9.18	Testing Oil Samples for Wear Metals	12.7
Piston Installation	9.18.1	Blowby Flow Rate Measurements	12.8
Harmonic Balancer	9.19	Oil Consumption Computation	12.9
Connecting Rod Bearings	9.20	Photographs of Test Parts	12.10
Engine Front Cover	9.21	Retention of Representative Test Parts	12.11
Coolant Inlet Adapter	9.22	Severity Adjustments	12.12
Oil Dipstick Hole	9.23	Determination of Operational Validity	12.13
Oil Pan	9.24	Report	13
Cylinder Head Assembly	9.25	Report Forms	13.1
Adjustment of Valve Spring Loads	9.26	Precision of Reported Units	13.4
Cylinder Head Installation	9.27	Precision and Bias	14
Hydraulic Valve Lifters	9.28	Keywords	15
Pushrods	9.29	ASTM Test Monitoring Center: Organization	Annex A1
Valve Train Loading	9.30	ASTM Test Monitoring Center: Calibration Procedures	Annex A2
Intake Manifold	9.31	ASTM Test Monitoring Center: Maintenance Activities	Annex A3
Rocker Covers	9.32	ASTM Test Monitoring Center: Related Information	Annex A4
Water Inlet Adapter	9.33	Sequence IIIG Test Parts Replacement Guidelines	Annex A5
Condenser	9.34	Sequence IIIG Determination Volume of Engine Oil in Pan	Annex A6
Coolant Outlet Adapter	9.35	Sequence IIIG Test Fuel Analysis	Annex A7
External Oil Cooling System	9.36	Sequence IIIG Test Report Forms and Data Dictionary	Annex A8
Oil Sample Valve	9.37	Sequence IIIG Test Air-to-Fuel Ratio Control Flow Chart	Annex A9
Ignition System	9.38	Sequence IIIG Test Set Points and Control States	Annex A10
Throttle Body	9.39	Sequence IIIG Quality Index Upper and Lower Values	Annex A11
Accessory Drive Units	9.40	Sequence IIIG Engine Oil Level Worksheet	Annex A12
Exhaust Manifolds, Water-Cooled	9.41	Blowby Flow Rate Determination	Annex A13
Engine Flywheel	9.42	Safety Hazards	Annex A14
Pressure Checking of Engine Coolant System	9.43	Sequence IIIG Blueprint Listing	Annex A15
Lifting of Assembled Engines	9.44	Fluid Condition Module Components	Annex A16
Mounting the Engine on the Test Stand	9.45	Engine Build Worksheets	Annex A17

Engine Oil Cooling System Schematic  
 Guidelines For Hardware Subject To First-In/First-Out Criteria  
 Sequence IIIGA Test Procedure  
 Sequence IIIGVIS Test Procedure  
 Sequence IIIGB Test Procedure

Section  
 Annex A18  
 Annex A19  
 Appendix X1  
 Appendix X2  
 Appendix X3

1.4 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety, health, and environmental practices and determine the applicability of regulatory limitations prior to use.* Specific warning statements are provided in 6.14.1.1 and 7.1.

1.5 *This international standard was developed in accordance with internationally recognized principles on standardization established in the Decision on Principles for the Development of International Standards, Guides and Recommendations issued by the World Trade Organization Technical Barriers to Trade (TBT) Committee.*

## 2. Referenced Documents

### 2.1 ASTM Standards:<sup>3</sup>

- D86 Test Method for Distillation of Petroleum Products and Liquid Fuels at Atmospheric Pressure
- D130 Test Method for Corrosiveness to Copper from Petroleum Products by Copper Strip Test
- D235 Specification for Mineral Spirits (Petroleum Spirits) (Hydrocarbon Dry Cleaning Solvent)
- D240 Test Method for Heat of Combustion of Liquid Hydrocarbon Fuels by Bomb Calorimeter
- D323 Test Method for Vapor Pressure of Petroleum Products (Reid Method)
- D381 Test Method for Gum Content in Fuels by Jet Evaporation
- D445 Test Method for Kinematic Viscosity of Transparent and Opaque Liquids (and Calculation of Dynamic Viscosity)
- D525 Test Method for Oxidation Stability of Gasoline (Induction Period Method)
- D1319 Test Method for Hydrocarbon Types in Liquid Petroleum Products by Fluorescent Indicator Adsorption
- D2699 Test Method for Research Octane Number of Spark-Ignition Engine Fuel
- D2700 Test Method for Motor Octane Number of Spark-Ignition Engine Fuel
- D3231 Test Method for Phosphorus in Gasoline
- D3237 Test Method for Lead in Gasoline by Atomic Absorption Spectroscopy
- D3244 Practice for Utilization of Test Data to Determine Conformance with Specifications
- D3338 Test Method for Estimation of Net Heat of Combustion of Aviation Fuels
- D3343 Test Method for Estimation of Hydrogen Content of Aviation Fuels
- D4052 Test Method for Density, Relative Density, and API Gravity of Liquids by Digital Density Meter

- D4175 Terminology Relating to Petroleum Products, Liquid Fuels, and Lubricants
  - D4485 Specification for Performance of Active API Service Category Engine Oils
  - D4684 Test Method for Determination of Yield Stress and Apparent Viscosity of Engine Oils at Low Temperature
  - D4815 Test Method for Determination of MTBE, ETBE, TAME, DIPE, tertiary-Amyl Alcohol and C<sub>1</sub> to C<sub>4</sub> Alcohols in Gasoline by Gas Chromatography
  - D5185 Test Method for Multielement Determination of Used and Unused Lubricating Oils and Base Oils by Inductively Coupled Plasma Atomic Emission Spectrometry (ICP-AES)
  - D5191 Test Method for Vapor Pressure of Petroleum Products (Mini Method)
  - D5293 Test Method for Apparent Viscosity of Engine Oils and Base Stocks Between -10 °C and -35 °C Using Cold-Cranking Simulator
  - D5452 Test Method for Particulate Contamination in Aviation Fuels by Laboratory Filtration
  - D5453 Test Method for Determination of Total Sulfur in Light Hydrocarbons, Spark Ignition Engine Fuel, Diesel Engine Fuel, and Engine Oil by Ultraviolet Fluorescence
  - D5862 Test Method for Evaluation of Engine Oils in Two-Stroke Cycle Turbo-Supercharged 6V92TA Diesel Engine (Withdrawn 2009)<sup>4</sup>
  - D6593 Test Method for Evaluation of Automotive Engine Oils for Inhibition of Deposit Formation in a Spark-Ignition Internal Combustion Engine Fueled with Gasoline and Operated Under Low-Temperature, Light-Duty Conditions
  - D6750 Test Methods for Evaluation of Engine Oils in a High-Speed, Single-Cylinder Diesel Engine—1K Procedure (0.4 % Fuel Sulfur) and 1N Procedure (0.04 % Fuel Sulfur)
  - D6984 Test Method for Evaluation of Automotive Engine Oils in the Sequence IIIF, Spark-Ignition Engine
  - D7422 Test Method for Evaluation of Diesel Engine Oils in T-12 Exhaust Gas Recirculation Diesel Engine
  - E29 Practice for Using Significant Digits in Test Data to Determine Conformance with Specifications
  - E191 Specification for Apparatus For Microdetermination of Carbon and Hydrogen in Organic and Organo-Metallic Compounds
  - E608/E608M Specification for Mineral-Insulated, Metal-Sheathed Base Metal Thermocouples
  - E1119 Specification for Industrial Grade Ethylene Glycol
  - IEEE/ASTM SI 10 Standard for Use of the International System of Units (SI): The Modern Metric System<sup>3</sup>
- ### 2.2 Military Specification:<sup>5</sup>
- MIL-PRF-2104, Lubricating Oil, Internal Combustion Engine, Tactical Service

<sup>3</sup> For referenced ASTM standards, visit the ASTM website, [www.astm.org](http://www.astm.org), or contact ASTM Customer Service at [service@astm.org](mailto:service@astm.org). For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

<sup>4</sup> The last approved version of this historical standard is referenced on [www.astm.org](http://www.astm.org).

<sup>5</sup> Hardcopy available from Document Automation and Production Service, Building 4/D, 700 Robbins Avenue, Philadelphia, PA 19111-5094. Also, can be downloaded from internet address: <http://assist2.daps.dla.mil/quicksearch/>.

### 2.3 SAE Standards:<sup>6</sup>

**J183, Engine Oil Performance and Engine Service Classification (Other Than “Energy-Conserving”)**  
**J300, Engine Oil Viscosity Classification \*HS-23/00**  
**J304, Engine Oil Tests**

### 2.4 Other ASTM Documents:

**Guidelines for Calibration**<sup>7</sup>

**The Lubricant Test Monitoring System, Sequence IIIG Test Control Chart Technique for Developing and Applying Severity Adjustments (SA)**<sup>8</sup>

**ASTM Deposit Rating Manual 20 (Formerly CRC Manual 20)**<sup>9</sup>

## 3. Terminology

### 3.1 Definitions:

3.1.1 *blowby, n*—in internal combustion engines, that portion of the combustion products and unburned air/fuel mixture that leaks past piston rings into the engine crankcase during operation.

3.1.2 *BTDC (before top dead center), n*—used with the degree symbol to indicate the angular position of the crankshaft relative to its position at the point of uppermost travel of the piston in the cylinder. **D4175**

3.1.3 *calibrate, v*—to determine the indication or output of a device (for example, thermometer, manometer, engine) with respect to that of a standard.

3.1.4 *clogging, n*—the restriction of a flow path due to the accumulation of material along the flow path boundaries. **D4175**

3.1.5 *cold-stuck piston ring, n*—in internal combustion engines, a piston ring that is stuck when the piston and ring are at room temperature, but inspection shows that it was free during engine operation.

3.1.5.1 *Discussion*—A cold-stuck piston ring cannot be moved with moderate finger pressure. It is characterized by a polished face over its entire circumference, indicating essentially no blowby passed over the outside of the ring during operation. **D6593**

3.1.6 *correction factor, n*—a mathematical adjustment to a test result to compensate for industry wide shifts in severity.

3.1.7 *corrosion, n*—the chemical or electrochemical reaction between a material, usually a metal surface, and its environment that can produce a deterioration of the material and its properties. **D4175**

<sup>6</sup> Available from Society of Automotive Engineers, 400 Commonwealth Dr., Warrendale, PA 15096-0001. These standards are not available separately. Order either *SAE Handbook*, Vol. 3, or *SAE Fuels and Lubricants Standards Manual/HS-23*.

<sup>7</sup> Guidelines for Calibration can be found in the Lubricant Test Monitoring System, available from the Test Monitoring Center, <http://www.astmtmc.cmu.edu/>.

<sup>8</sup> Sequence IIIG Test Control Chart Technique For Developing And Applying Severity Adjustments (SA), available at internet address: <ftp://ftp.astmtmc.cmu.edu/docs/ltms/ltms.pdf>.

<sup>9</sup> For STOCK# TMCNML20, visit the ASTM website, [www.astm.org](http://www.astm.org), or contact ASTM Customer Service at [service@astm.org](mailto:service@astm.org).

3.1.8 *debris, n*—in internal combustion engines, solid contaminant materials unintentionally introduced into the engine or resulting from wear. **D5862**

3.1.9 *engine oil, n*—a liquid that reduces friction or wear, or both, between the moving parts within an engine; removes heat, particularly from the underside of pistons; and serves as a combustion gas sealant for piston rings.

3.1.9.1 *Discussion*—It may contain additives to enhance certain properties. Inhibition of engine rusting, deposit formation, valve train wear, oil oxidation, and foaming are examples. **D6750**

3.1.10 *EWMA, n*—abbreviation for exponentially-weighted moving average.

3.1.11 *free piston ring, n*—in internal combustion engines, a piston ring that will fall in its groove under the force of its own weight when the piston with the ring in a horizontal plane, is turned 90° (putting the ring in a vertical plane). **D4175**

3.1.11.1 *Discussion*—In determination of this condition, the ring may be touched slightly to overcome static friction.

3.1.12 *hot-stuck piston ring, n*—in internal combustion engines, a piston ring that is stuck when the piston and ring are at room temperature, and inspection shows that it was stuck during engine operation.

3.1.12.1 *Discussion*—The portion of the ring that is stuck cannot be moved with moderate finger pressure. A hot-stuck ring is characterized by varnish or carbon across a portion of its face, indicating that portion of the ring was not contacting the cylinder wall during engine operation. **D4175**

3.1.13 *Lubricant Test Monitoring System (LTMS), n*—an analytical system in which ASTM calibration test data are used to manage lubricant test precision and severity (bias).

3.1.14 *LTMS date, n*—the date the test was completed unless a different date is assigned by the TMC.

3.1.15 *LTMS time, n*—the time the test was completed unless a different time is assigned by the TMC.

3.1.16 *lubricant, n*—any material interposed between two surfaces that reduces the friction or wear, or both, between them. **D4175**

3.1.17 *lubricating oil, n*—a liquid lubricant, usually comprising several ingredients, including a major portion of base oil and minor portions of various additives. **D4175**

3.1.18 *Material Safety Data Sheet, (MSDS), n*—a fact sheet summarizing information about material identification; hazardous ingredients; health, physical, and fire hazards; first aid; chemical reactivities and incompatibilities; spill, leak, and disposal procedures; and protective measures required for safe handling and storage. **http://www.msdssearch.com**

3.1.19 *non-compounded engine oil, n*—a lubricating oil having a viscosity within the range of viscosities of oils normally used in engines, and that may contain anti-foam agents or pour depressants, or both, but not other additives. **D4175**

3.1.20 *non-reference oil, n*—any oil, other than a reference oil; such as a research formulation, commercial oil, or candidate oil. **D4175**

3.1.21 *oxidation, n—of engine oil*, the reaction of the oil with an electron acceptor, generally oxygen, that can produce deleterious acidic or resinous materials often manifested as sludge formation, varnish formation, viscosity increase, or corrosion, or a combination thereof.

3.1.22 *quality index (QI), n*—a mathematical formula that uses data from controlled parameters to calculate a value indicative of control performance.

3.1.23 *reference oil, n*—an oil of known performance characteristics, used as a basis for comparison.

3.1.23.1 *Discussion*—Reference oils are used to calibrate testing facilities, to compare the performance of other oils, or to evaluate other materials (such as seals) that interact with oils. **D4175**

3.1.24 *rust (coatings), n—of iron or its alloys*, a corrosion product consisting of hydrated iron oxides, usually reddish in color, but can also be brown-to-black.

3.1.25 *SA, n*—abbreviation for severity adjustment.

3.1.26 *scoring, n—in tribology*, a severe form of wear characterized by the formation of extensive grooves and scratches in the direction of sliding. **D4175**

3.1.27 *scuffing, n—in lubrication*, damage caused by instantaneous localized welding between surfaces in relative motion that does not result in immobilization of the parts. **D6593**

3.1.28 *test oil, n*—any oil subjected to evaluation in an established procedure.

3.1.28.1 *Discussion*—It can be any oil selected by the laboratory conducting the test. It could be an experimental product or a commercially available oil. Often, it is an oil that is a candidate for approval against engine oil specifications (such as manufacturers' or military specifications, etc.).

3.1.29 *test procedure, n*—one where test parameters, apparatus, apparatus preparation, and measurements are principal items specified.

3.1.30 *used oil, n*—any oil that has been in a piece of equipment (for example, an engine, gearbox, transformer, or turbine), whether operated or not. **D4175**

3.1.31 *varnish, n—in internal combustion engines*, a hard, dry, generally lustrous, deposit that can be removed by solvents but not by wiping with a cloth. **D4175**

3.1.32 *wear, n*—the loss of material from a surface, generally occurring between two surfaces in relative motion, and resulting from mechanical or chemical action or a combination of both. **D7422**

### 3.2 *Definitions of Terms Specific to This Standard:*

3.2.1 *build-up oil, n*—EF-411, non-compounded, ISO VG 32 (SAE 10) oil used in lubricating some of the Sequence IIIG parts during engine assembly.

3.2.2 *calibrated test stand, n*—a test stand on which Sequence IIIG engine oil tests are conducted within the LTMS as administered by the TMC. (See 10.1.)

3.2.3 *central parts distributor (CPD), n*—the manufacturer and supplier of many of the parts and fixtures used in this test method.

3.2.3.1 *Discussion*—Because of the need for rigorous in-

spection and control of many of the parts used in this test method, and because of the need for careful manufacture of special parts and fixtures used, companies having the capabilities to provide the needed services have been selected as the official suppliers for the Sequence IIIG test method. These companies work closely with the original parts suppliers, with the Test Procedure Developer, and with the ASTM groups associated with the test method to help ensure that the equipment and materials used in the method function satisfactorily.

3.2.4 *special test parts (STP), n*—parts that do not meet all the definitions of critical parts, non-production parts, or SPO parts, but shall be obtained only from the specified distributor.

3.2.5 *critical parts (CP), n*—those components used in the test, which are known to affect test severity.

3.2.5.1 *Discussion*—Critical parts shall be obtained from the Central Parts Distributor or Special Parts Supplier, who will identify them with either a serial number or a batch/lot control number.

3.2.6 *EOT time (end of test time), n*—twenty minutes after the engine reaches 100 test h of operation, which allows 120 s for ramp-down/idle, a 15 min wait for oil to drain into the sump, and allows the operator 3.0 min to measure oil level.

3.2.7 *non-production parts (NP), n*—components used in the test, which are available only through the Central Parts Distributor, Special Parts Supplier, or the Test Procedure Developer.

3.2.8 *participating laboratory, n*—a laboratory equipped to conduct Sequence IIIG tests, which conducts reference oil tests in cooperation with the TMC, in order to have calibrated test stands available for non-reference oil testing.

3.2.9 *pinched piston ring, n*—an installed piston ring which will not move in its groove under moderate finger pressure, but which has a polished face over its entire circumference indicating that it was free during engine operation; the ring may be restricted over varying degrees of its circumference.

3.2.10 *reference oil test, n*—a standard Sequence IIIG engine oil test of a reference oil designated by the TMC.

3.2.11 *service parts operations parts (SPO), n*—these test components are obtained from Service Parts Operations a division of General Motors Corporation.

3.2.12 *sluggish piston ring, n*—an installed piston ring which it offers resistance to movement in its groove, but it can be pressed into or out of the groove under moderate finger pressure; when so moved, it does not spring back (one that is neither free nor stuck).

3.2.13 *special parts supplier (SPS), n*—the manufacturer and supplier of many of the parts and fixtures used in this test method.

3.2.14 *special test parts, n*—parts that do not meet all the definitions of critical parts, non-production parts, or SPO parts, but shall be obtained from the Special Parts Supplier.

3.2.15 *standard test, (valid test), n*—an operationally valid, full-length Sequence IIIG test conducted on a calibrated test stand in accordance with the conditions listed in this standard.

3.2.16 *stuck piston ring, n*—one that is either partially or completely bound in its groove and cannot be readily moved with moderate finger pressure.

3.2.17 *test procedure developer, n*—the group or agency which developed the Sequence IIIG test procedure before its standardization by ASTM, and which continues to be involved with the test in respect to modifications in the test method, development of Information Letters, supply of test parts, and so forth.

3.2.17.1 *Discussion*—In the case of the Sequence IIIG test, the Test Procedure Developer is General Motors Research and Development Center.

3.2.18 *test full mark, n*—the oil level established after the 10-min initial run-in.

3.2.19 *test stand, n*—a suitable foundation (such as a bed-plate) to which is mounted a dynamometer, and which is equipped with a suitable data acquisition system, fluids process control system, supplies of electricity, compressed air, and so forth, to provide a means for mounting and operating an engine in order to conduct a Sequence IIIG engine oil test.

3.2.20 *test start, n*—introduction of test oil into the engine after the final assembly and mounting in the test stand.

3.2.21 *test start time, n*—the time that test oil was introduced into the engine on the test stand.

#### 4. Summary of Test Method

4.1 A 3800 series II V-6 test engine block with a displacement of 3.8 L is solvent-cleaned, measured, and rebuilt; using new parts installed as specified in this test method.

4.2 The engine is installed on a test stand equipped with an appropriate data acquisition system, the required fluids process control system, and all necessary accessories for controlling speed, torque, and various other operating parameters.

4.3 The engine is charged with the test oil.

4.4 The engine is operated for an initial run-in period of 10 min to check all test stand operating systems and to establish a zero hour oil level reading and initial oil viscosity sample.

4.5 Following the run-in and oil leveling period of 10 min, the engine is ramped up to test conditions over a 15 min period then operated under non-cyclic, moderately high speed, torque, and temperature conditions for 100 h, in 20 h segments.

4.6 The initial oil level in the oil pan is determined after the 10 min initial run-in, and subsequent oil level calculations are determined during the oil leveling period at the end of each 20 h segment.

4.7 Used oil samples are taken after the 10 min initial run-in and after each 20 h test segment; kinematic viscosity at 40 °C is determined for each of the seven samples; the percentage change in viscosity of the five latter samples is determined relative to the viscosity of the first used oil sample (10 min initial run-in).

4.8 At the conclusion of the test, the engine is disassembled and the parts are visually rated to determine the extent of deposits formed. In addition, wear measurements are obtained.

#### 5. Significance and Use

5.1 This test method was developed to evaluate automotive engine oils for protection against oil thickening and engine wear during moderately high-speed, high-temperature service.

5.2 The increase in oil viscosity obtained in this test indicates the tendency of an oil to thicken because of oxidation. In automotive service, such thickening can cause oil pump starvation and resultant catastrophic engine failures.

5.3 The deposit ratings for an oil indicate the tendency for the formation of deposits throughout the engine, including those that can cause sticking of the piston rings in their grooves. This can be involved in the loss of compression pressures in the engine.

5.4 The camshaft and lifter wear values obtained in this test provide a measure of the anti-wear quality of an oil under conditions of high unit pressure mechanical contact.

5.5 The test method was developed to correlate with oils of known good and poor protection against oil thickening and engine wear. Specially formulated oils that produce less than desirable results with unleaded fuels were also used during the development of this test.

5.6 The Sequence IIIG engine oil test has replaced the Sequence IIIF test and can be used in specifications and classifications of engine lubricating oils, such as the following:

5.6.1 Specification **D4485**,

5.6.2 Military Specification MIL-PRF-2104, and

5.6.3 SAE Classification J183.

#### 6. Apparatus

6.1 *Laboratory*—Observe the following laboratory conditions to ensure good control of test operations, and good repeatability:

6.1.1 Maintain the ambient laboratory atmosphere relatively free of dirt, dust, and other contaminants.

6.1.2 Control the temperature of the room in which parts measurements are made so that the temperature for after-test measurements is within a range of  $\pm 3$  °C relative to the temperature for the before-test measurements. If difficulties with parts fits are encountered, consider the effects of temperature coefficient of expansion. See **6.2**.

6.1.3 Filter the air in the engine build-up area, and control its temperature and humidity to prevent accumulation of dirt or rust on engine parts.

6.1.4 If an engine is assembled in an area of controlled environment and moved to a non-controlled area, provide suitable protection of the engine so that moist air cannot enter the engine and promote rusting before the test.

6.1.5 Do not permit air from fans or ventilation systems to blow directly on an engine mounted on a test stand during test operation.

6.2 *Drawings*—Obtain the equipment drawings referenced in **Annex A15** of this test method from the TMC. Because the drawings may not be to scale or may not contain dimensions, when using them to fabricate special parts, do not use a dimensionless drawing as a pattern. Drawings supplied with

dimensions are considered to be correct when the temperature of the equipment is  $22\text{ }^{\circ}\text{C} \pm 3\text{ }^{\circ}\text{C}$ , unless otherwise specified.

**6.3 Specified Equipment**—Use the equipment specified in the procedure whenever possible. Substitution of equivalent equipment is allowed, but only after equivalency has been proven to the satisfaction of the TMC, the Test Procedure Developer, and the ASTM Sequence IIIIG Surveillance Panel.

**6.3.1** Do not use heat lamps or fans directed at the engine, and do not use insulation on the engine, for oil or coolant temperature control.

**6.3.1.1 Discussion**—For operator safety and the protection of test components, the use of shielding and insulation on the exhaust system may be incorporated downstream of the oxygen sensor elbow.

**6.4 Test Engine**—The test engine is based on a 1996-97 L36 3800 series II V-6 engine with a displacement of 3.8 L, a compression ratio of 9.0:1, equipped with a production fuel injection system, a retrofit flat-tappet valvetrain, and a special Powertrain Control Module (PCM) for test specific dynamometer operation. Rebuild the engine as specified in this test method.

NOTE 2—Complete test engines are not available for purchase. Test engines can be rebuilt using parts and test kits. See *Sequence IIIIG Engine Assembly Manual*.<sup>10</sup> See [Annex A5](#) and [Annex A15](#) for listings of parts and related equipment.

**6.4.1 Engine Parts**—Use the engine parts specified in the Sequence IIIIG Engine Assembly Manual.

**6.4.1.1** Use all engine parts as received from the supplier, Central Parts Distributor, Special Parts Supplier, or original equipment manufacturer, unless modifications are specified in this test method or the Sequence IIIIG Engine Assembly Manual.<sup>10</sup>

**6.4.1.2** Do not divert any parts obtained for use in Sequence IIIIG testing to other applications.

**6.4.1.3** Before disposing of any Sequence IIIIG engine parts, destroy or otherwise render them useless for automotive engine applications.

**6.4.1.4** Use the components listed in [Annex A19](#) on a first-in/first-out basis. Specific guidelines are also listed in [Annex A19](#).

**6.5 Engine Speed and Torque Control**—Use dynamometer speed and torque control systems that are capable of controlling the speed and torque as specified in Section 11 of this procedure under Data Acquisition and Control.

**6.6 Fluid Conditioning Module**<sup>11,12</sup>—To control the following parameters: engine coolant, condenser coolant, oil cooler coolant, exhaust manifold coolant, and the test fuel supply. The system incorporates the following features: pumps, flow meters, flow control and three-way control valves, external

heating and cooling systems, pressure regulator and low-point drains. The system integrates with the test stand data acquisition and control computer for process control. If a test laboratory wishes to build its own fluid conditioning module, a list of suitable equipment can be found in [Annex A16](#).

**6.6.1 Engine Cooling System**—The Fluid Conditioning Module system supplies non-pressurized coolant at a flow rate of 160 L/min and controls temperature at  $115\text{ }^{\circ}\text{C}$  at the engine coolant outlet. The system incorporates the following features: pump, vortex-type flow meter, flow control and three-way control valves, external heating and cooling systems, and low-point drains.

**6.6.1.1** The system integrates with the test stand data acquisition and control computer for process control and maintains the specified engine coolant temperature and flow.

**6.6.1.2** Strainers may be installed in the system to prevent introduction of casting sand and other debris into the stand instrumentation. A Miller-Leaman, part number MLS03 Thompson Strainer,<sup>13,12</sup> 50-mesh strainer has been found to be suitable.

**6.6.1.3** The system should be flushed with clean water at least once each reference period.

**6.7 Flushing Tank**—Use a flushing tank such as that shown in drawings RX-116924-C, RX-117230-E, and RX-117231-C to circulate the cleaning agents. Use plumbing materials that are impervious to the acidic cleaning agents (stainless steel is satisfactory).

**6.8 Coolant Mixing Tank**—Use a mixing tank such as that shown in drawing RX-117350-D to premix the engine coolant.

**6.9 Condenser Cooling System**—This system, contained in the Fluid Conditioning Module, supplies non-pressurized coolant at a flow rate of  $10\text{ L/min} \pm 2\text{ L/min}$  and temperature controlled at  $40\text{ }^{\circ}\text{C}$  (see [Annex A11](#)) at the condenser outlet. The system incorporates the following features: condenser heat exchanger, BX-212-1 or OHT3F-075-1;<sup>14,12</sup> condenser adapter fitting, pump, magnetic-type flow meter, flow control and three-way control valves, external heating and cooling systems, and low-point drains. The system integrates with the test stand data acquisition and control computer for process control and maintains the specified coolant temperature and flow.

**6.10 Engine Oil-Cooling System**—The system consists of an oil filter adapter, engine-mounted oil cooler, and gaskets as specified in the Engine Assembly Manual, Section 8 Sheet 3 & 3a and a shell-and-tube heat exchanger. The engine oil-cooling system uses engine coolant pumped from the Fluid Conditioning Module through a three-way control valve to the oil cooler circuit which contains a heat exchanger prior to the engine-mounted oil cooler. To maintain the specified oil temperature of  $150\text{ }^{\circ}\text{C}$  at the oil filter adapter, the three-way control valve varies the coolant flow as necessary through the oil cooler circuit. The heat exchanger in the oil cooler coolant circuit is a tube-and-shell style and uses process water as the cooling

<sup>10</sup> Sequence IIIIG Engine Assembly Manual is available at internet address: <ftp://ftp.astmtmc.cmu.edu/docs/gas/sequenceiii/procedure> and [ils/IIIF-EAM.pdf](ftp://ftp.astmtmc.cmu.edu/docs/gas/sequenceiii/procedure).

<sup>11</sup> The sole source of supply of the apparatus known to the committee at this time is Kundinger Controls, 1771 Harmon Road, Auburn Hills, MI 48326.

<sup>12</sup> If you are aware of alternative suppliers, please provide this information to ASTM International Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee,<sup>1</sup> which you may attend.

<sup>13</sup> The sole source of supply of the apparatus known to the committee at this time is Miller-Leaman, 800 Orange Avenue, Daytona Beach, FL 32114.

<sup>14</sup> The sole source of supply of the apparatus known to the committee at this time is OH Technologies Inc. P.O. Box 5039, Mentor, OH 44061-5039.

media (see Fig. A18.1). When testing high-oxidation sensitive oils, the oil cooling system may go into a bypass mode, causing the engine-mounted oil cooler to be bypassed. In this condition, the TMC may allow engineering judgment for the oil temperature Quality Index on reference oil tests.

6.10.1 Replace the oil cooler after every test.

6.10.2 Do not use cuprous lines or fittings in the oil system.

6.10.3 Do not use magnetic plugs in the oil system.

6.10.4 Use suitable hose and fittings when plumbing the oil-cooling system.

6.10.5 The oil cooler or oil filter, or both, can be replaced once each test if (a) the oil filter pressure differential during test operations is greater than 100 kPa, if (b) bypass operation is detected, or if (c) the oil pressure delta slowly climbs as test hours are accumulated and decreases by more than 10 kPa in less than 1 min. If the real-time oil delta pressure value exceeds the average of the test's first hour delta pressure by 10 kPa, the oil filter can be replaced.

6.10.5.1 The oil cooler and oil filter can be replaced at the same time only once each test.

6.10.5.2 If the oil filter is replaced during the test, place a pan underneath it to catch any oil lost from the system or filter, or both. Invert the oil filter and allow the filter to drain any oil contained in the old oil filter. Allow the filter to drain for a minimum of 15 min. Add the captured oil to the new oil filter before installing it on the test engine.

6.10.5.3 Do not add new test oil to the engine as a result of oil filter or oil cooler replacement. Consider as oil consumption any oil lost as a result of oil filter or oil cooler replacement.

6.10.5.4 If the oil cooler or oil filter, or both are replaced during a test, place a note in the test report detailing what components were replaced and when they were replaced.

6.11 *Fuel System*—The Fluid Conditioning Module system contains a pressurized, recirculation fuel system, including a pressure regulator to provide  $377.5 \text{ kPa} \pm 12.5 \text{ kPa}$  fuel pressure. The system should be switched off so no fuel pressure is present at the injector rail during engine shutdowns.

6.12 *Induction Air Supply Humidity, Temperature, and Pressure*—Maintain the throttle body intake air at a moisture content of  $11.4 \text{ g/kg} \pm 0.7 \text{ g/kg}$  of dry air, a dry bulb temperature of  $35 \text{ }^\circ\text{C} \pm 2 \text{ }^\circ\text{C}$ , and a static pressure of 0.050 kPa (see Annex A10). Measure temperature and pressure at the inlet air adapter.

6.13 *Temperature Measurement*—Use 1.6 mm or 3.2 mm metal-sheathed Specification E608/E608M, iron-constantan (Type J) thermocouples for temperature measurements. Use the shortest possible thermocouples to meet the insertion depth requirements listed in this test method and minimize exposed thermocouple sheathing.

6.13.1 *Thermocouple Location*—Locate the sensing tip of all thermocouples in the center of the stream of the medium involved, unless otherwise specified.

6.13.1.1 *Oil Filter Adapter*—Install the thermocouple in the tapped hole in the oil filter adapter as shown in the Sequence IIIG Engine Assembly Manual, Section 8 Sheet 3.

6.13.1.2 *Oil Pan (Sump)*—Install the thermocouple in the oil sump drain plug OHT3F-063-1 with the tip extending 19 mm to 25 mm beyond the end of the sump drain plug.

6.13.1.3 *Engine Coolant In*—Install the thermocouple in the coolant inlet adapter OHT3F-031-1 with the sensing tip centered in the coolant flow.

6.13.1.4 *Engine Coolant Out*—Install the thermocouple for the coolant outlet OHT3F-034-1 with the sensing tip centered in the coolant flow.

6.13.1.5 *Condenser Coolant Out*—Locate the thermocouple in the coolant out fitting in the condenser with the sensing tip centered in the coolant flow.

6.13.1.6 *Blowby Gas*—Install the thermocouple at the outlet of the condenser with the sensing tip centered in the blowby gas flow.

6.13.1.7 *Fuel*—Install the thermocouple in the fuel rail fittings on the inlet side of the fuel rail.

6.13.1.8 *Inlet Air*—Install the thermocouple in the inlet air adapter, as shown in the Sequence IIIG Engine Assembly Manual, Section 8 Sheet 4.

6.14 *Air-to-Fuel Ratio Determination*—Determine the engine air-to-fuel ratio (AFR) by measuring the CO, CO<sub>2</sub>, and O<sub>2</sub> components of the exhaust gas sample with electronic exhaust gas analysis equipment. When using electronic exhaust gas analyzers, take particular care to dry the exhaust gas sample prior to introducing it into the analyzer. Take the exhaust gas samples from the exhaust manifold exit flanges. See Annex A9. (See Sequence IIIG Engine Assembly Manual, Section 8 Sheet 1.)

6.14.1 *Injector Flow Testing*—Flow test the fuel injectors before each test according to the following procedure:

6.14.1.1 Use aliphatic naphtha (**Warning**—Flammable. Health hazard.) as the calibration fluid.

6.14.1.2 Apply 276 kPa to the fuel rail.

6.14.1.3 Apply 13 V to the injector solenoid continuously.

6.14.1.4 Allow the injector to spray into a graduated cylinder capable of holding at least 250 mL.

6.14.1.5 Volume-check all injectors for 60 s and note the volume produced by each injector.

6.14.1.6 Observe the spray pattern that each injector produces; if an injector's spray pattern is a straight stream or dribbles, the injector can be cleaned and reused after satisfactorily undergoing the following steps:

(1) First, immerse the fuel injector in degreasing solvent briefly; remove it and place it in an ultrasonic-type cleaner for 20 min. (Ultrasonic Cleaner Lab Safety Model 32V118<sup>15,12</sup> has been found suitable).

(2) Repeat 6.14.1.1 – 6.14.1.5 above. If a cleaned injector's spray pattern still is a straight stream or dribbles, discard the injector.

6.14.1.7 The six injectors that are to be installed on an engine fuel rail shall produce volumes that are within 5 mL of each other.

6.14.2 Remove the solvent that is remaining in the injector from the flow check using compressed air.

6.15 *Exhaust and Exhaust Back Pressure Systems:*

<sup>15</sup> The sole source of supply of the apparatus (Lab Safety Model 32V118) known to the committee at this time is the Grainger Catalog, <http://www.grainger.com>, or any local Grainger outlet.

6.15.1 *Exhaust Manifolds and Pipes*—Install water-cooled exhaust manifolds and stainless runners as shown in the Sequence IIIG Engine Assembly Manual, Section 8 Sheet 2.

6.15.2 *Water-Jacketed Exhaust Pipes*—For safety, water-jacketed exhaust pipes or external water spray systems are allowed only when introduced beyond the Y pipe and after the system drops below the bedplate or enters the overhead loft.

6.15.3 *Exhaust Sample Lines*—Install exhaust sample lines in the two exhaust manifold exit flanges. Both left and right banks should use the same sample line location (inboard or outboard), as shown in the Sequence IIIG Engine Assembly Manual, Section 8 Sheet 1. Use good laboratory practice to ensure that water does not accumulate in the lines during engine operation.

6.15.4 *Back-Pressure Lines*—Install exhaust-backpressure lines in the two exhaust manifold exit flanges. Both left and right banks should use the same backpressure measurement location (inboard or outboard), as shown in the Sequence IIIG Engine Assembly Manual, Section 8 Sheet 1. Use good laboratory practice to ensure that water does not accumulate in the lines during engine operation.

6.16 *Blowby Flow Rate Measurement*—Use the sharp-edge orifice meter, part number RX-116169-A1, revision N, to measure engine blowby flow rates. (See 11.11.)

6.17 *Pressure Measurement and Pressure Sensor Location*—Use electronic pressure transducers located as indicated in this test method.

6.17.1 *Intake Manifold Vacuum*—Use a transducer having a range of 0 kPa to 100 kPa. Connect the transducer to the vacuum outlet located on the intake plenum main vacuum port. Tee the transducer, manifold absolute pressure sensor and fuel rail pressure regulator all together from the main port.

6.17.2 *Engine Oil Gallery Pressure*—Use a transducer having a range of 0 kPa to 700 kPa. Connect the transducer to the location shown in the Sequence IIIG Engine Assembly Manual, Section 8 Sheet 3 (OUT Port, oil to block).

6.17.3 *Oil Pump Outlet Pressure*—Use a transducer having a range of 0 kPa to 700 kPa. Connect the transducer to the location shown in the Sequence IIIG Engine Assembly Manual, Section 8 Sheet 3 (IN Port, oil to filter).

6.17.4 *Exhaust Back Pressure*—Use a transducer having a range of 0 kPa to 10 kPa; attach the line to the exhaust end plate as shown in the Sequence IIIG Engine Assembly Manual, Section 8 Sheet 1.

6.17.5 *Inlet Air Pressure*—Use a transducer having a range of -125 Pa to +125 Pa. Connect the transducer to the air inlet adapter as shown in the Sequence IIIG Engine Assembly Manual, Section 8 Sheet 4.

6.17.6 *Crankcase Pressure*—Use a transducer having a range of -125 Pa to +125 Pa. Connect the transducer to the front of the lower intake manifold as shown in the Sequence IIIG Engine Assembly Manual, Section 6 Sheet 7.

6.18 *PCV Plug*—Block off the positive crankcase ventilation system during testing using a dummy PCV valve, part number OHT3F-002-1, as shown in the Sequence IIIG Engine Assembly Manual, Section 6 Sheet 11.

6.19 *Parts Modifications*—Modify the following parts according to the instructions listed in the Sequence IIIG Engine Assembly Manual:

6.19.1 Throttle body, Section 7 Sheet 6.

6.19.2 Intake manifold, Section 6 Sheet 7.

6.19.3 Engine block, Section 1 Sheet 2.

## 7. Reagents and Materials

7.1 *Test Fuel*—Use only EEE unleaded fuel<sup>16,12</sup> (**Warning**—Flammable. Health Hazard.) (see Annex A7, Table A7.1), observing the following:

7.1.1 Make certain that all tanks used for transportation and storage are clean before filling with test fuel.

7.1.2 Verify that there are at least 3030 L of test fuel.

7.1.3 Analyze quarterly the contents of each storage tank that contains fuel used for qualified Sequence IIIG tests to ensure the fuel has not deteriorated or been contaminated in storage. Analyze the fuel for Distillation, Gravity, RVP, Sulfur, and Gums. Send the results from these analyses to the TMC for inclusion in the Sequence III Test Fuel data base. Conduct a repeat analysis on an additional sample when the fuel analysis is found to be out of specification for any of the above parameters.

7.2 *Engine and Condenser Coolant*—Use ethylene glycol meeting Specification E1119 for Industrial Grade Ethylene Glycol. (**Warning**—Combustible. Health Hazard.)

7.3 *Coolant Additive*—Use Nacool 2000 or Pencil 2000 coolant additive<sup>17,12</sup> for the engine and condenser coolant. (**Warning**—Combustible. Health Hazard. See appropriate MSDS.)

7.4 *Coolant Preparation*—Prepare the coolant blend for the engine coolant system, and for the oil cooler and condenser coolant system, in the following manner:

7.4.1 Do not apply heat either during, or following, the coolant preparation.

7.4.2 Use a container of a size adequate to hold the entire coolant blend required by both systems. See drawing RX-117350-D for an example of a suitable container.

7.4.3 Add the required amount of glycol (**Warning**—Combustible. Health Hazard.) to the container.

7.4.4 Add the required amount of additive concentrate to the container to achieve a concentration of coolant additive-to-glycol of 15.625 mL/L. (**Warning**—See appropriate MSDS.)

7.4.5 Mix the blend in the container for 30 min.

7.4.6 Add the blend to the engine coolant system and the condenser coolant system.

7.5 *Pre-Test Cleaning Materials*—Use the cleaning materials (**Warning**—See appropriate MSDS.) specified in the following list for cleaning of parts to be used in the test. Do not use unapproved substitutes (see Note 3).

NOTE 3—Only these specific materials and sources have been found

<sup>16</sup> The sole source of supply of the apparatus known to the committee at this time is Haltermann Products, 1201 Sheldon Road, P.O. Box 429, Channelview, TX 77530-0429.

<sup>17</sup> The sole source of supply of the apparatus known to the committee at this time is Penray Companies, Inc., 1801 Estes Ave, Elk Grove, IL 60007.

satisfactory. If chemicals other than these are proposed for use, equivalency shall be proven and approval obtained from the TMC.

7.5.1 Use Penmul L460 as the parts cleaning agent.<sup>18,12</sup> (**Warning**—Corrosive. Health Hazard.)

7.5.2 *Degreasing Solvent*—Use only mineral spirits meeting the specifications for Aromatic Content (0-2 % vol), Flash Point (61 °C, min) and Color (not darker than +25 on Saybolt Scale or 25 on Pt-Co Scale) from Specification **D235** for Type II, Class C mineral spirits. (**Warning**—Combustible. Health hazard.) Obtain a Certificate of Analysis for each batch of mineral spirits from the supplier.

7.5.3 Sequence IIIG Test Component Cleaner, a mixture (by mass) of:

94 parts oxalic acid<sup>19,12</sup> (**Warning**—Corrosive. Health Hazard.)

6 parts dispersant<sup>20,12</sup> (**Warning**—Corrosive. Health Hazard.)

NOTE 4—If permitted by the hazardous materials disposal practices in a laboratory, sodium carbonate can be used to neutralize the oxalic acid in used Sequence IIIG Test component cleaner.

7.5.4 Use NAT-50 or PDN-50 soap<sup>21,12</sup> in automatic parts washers to clean Sequence IIIG engine parts. If using an ultrasonic cleaner, use solution 7 and solution B<sup>22,12</sup> or a 50/50 Brulin US Solution of 815 GD and 815 QR-DF in a 12.5 % concentration. See 9.5.

7.6 *Sealing and Anti-Seize Compounds*—Use the sealing compounds specified in the following list.

7.6.1 Use Permatex Number 2 non-hardening sealer as the sealing compound for cylinder head bolts.

7.6.2 Use Perfect Seal Number 4 Brush-Type Sealing Compound as the sealing compound for front and rear cover gaskets.<sup>23,12</sup>

7.6.3 Use only GM Autocare Adhesive, part number 12346141, or Dow RTV Grade 3154 sealer and Permatex Ultra Black Sealer, part number 24105 on the oil pan gasket and intake manifold gasket only. (See Sequence IIIG Engine Assembly Manual, Section 4 Sheet 12 and Section 6 Sheet 6.)

7.6.4 Teflon tape may be used, provided it does not come into contact with engine oil.

## 8. Test Oil Sample Requirements

8.1 *Selection*—The supplier of the test oil sample shall determine that the test oil sample is representative of the lubricant formulation to be evaluated and that it is not contaminated.

<sup>18</sup> The sole source of supply of the apparatus known to the committee at this time is Penetone Corporation 74 Hudson Ave. Tenafly, NJ 07670.

<sup>19</sup> The sole source of supply of the apparatus known to the committee at this time is Ashland Chemical Co., P.O. Box 391, Ashland, KY 41114.

<sup>20</sup> The sole source of supply of the apparatus known to the committee at this time is Petro Dispersant Number 425 Powder (50-lb bags) is available from Witco Corp., 3230 Brookfield, Houston, TX 77045.

<sup>21</sup> The sole source of supply of the apparatus known to the committee at this time is Better Engineering Mfg., Inc., 8361 Town Center Court, Baltimore, MD 21236.

<sup>22</sup> The sole source of the product known to the committee at this time is Purvis Industries, 10500 North Stemmons Freeway, Dallas, TX 75220.

<sup>23</sup> The sole source of supply of the product known to the committee at this time is Perfect Seal, 3322 Beekman St., Cincinnati, OH 45223.

8.2 *Quantity*—The supplier shall provide the test oil sample of 12 L.

NOTE 5—A Sequence IIIG Test can be conducted with a sample of test oil as little as 10 L, provided that no spillage or leakage occur during test preparation. The greater quantity is specified to accommodate minor spillage and leakage.

8.3 *Storage Prior to Test*—The test laboratory shall store the test oil sample in a covered building to prevent contamination by rainwater.

## 9. Preparation of Apparatus

9.1 *Condenser Cleaning*—Immediately after completing a Sequence IIIG test, remove the stainless steel condenser assembly, disassemble it, and soak it in parts cleaning agent. After the soaking, clean the inside of the tube with parts cleaning agent and a non-cuprous bristle brush. Rinse both the blowby gas and coolant sides of the condenser with clean degreasing solvent.

9.1.1 After ten tests, or more frequently if film is present, clean the coolant side of the condenser by flushing it for one half-hour with a solution of Sequence IIIG test component cleaner at 20 g per 1 L of water. (See 7.5.) Rinse it thoroughly with tap water at 60 °C.

9.1.2 After cleaning the coolant side of the condenser, pressure check it for leaks using air at 70 kPa.

9.2 *Intake Manifold Cleaning*—Clean the intake manifold with degreasing solvent.

9.3 *Cleaning of Engine Parts*—Clean all engine parts (other than the connecting rods, block and heads; see 9.4, 9.5, and 9.6) thoroughly prior to engine assembly. Degrease the parts (any reusable parts that come into contact with test oil as shown in Table A5.2), and then soak them in parts cleaning agent (7.5.1) for a period of at least 30 min but shall not exceed 24 h. Immediately remove the cleaner by spraying with hot tap water. Blow-dry the parts with clean, dry shop air (**Warning**—For technical use only) and immediately coat them with a 50/50 mixture of build-up oil and degreasing solvent.

9.4 *Connecting Rod Cleaning*—Clean the connecting rods according to the following:

9.4.1 Clean the connecting rods by soaking in degreasing solvent for a minimum of 2 h. Spray the rods with a 50/50 mix of build-up oil and degreasing solvent.

9.5 *Engine Block Cleaning*—Clean the block according to the following:

9.5.1 Remove the debris in the head bolt and main bearing-cap bolt holes using class 2B bottoming taps of the appropriate sizes.

9.5.2 Physically remove all sand and slag deposits, and any other debris, from the water jacket using a sharp-ended drill rod or a long straight slot screwdriver.

9.5.2.1 Check the camshaft tunnel for sharp edges on the front of each bore and along the cross-drilled oil gallery inside each bearing bore. Deburr as necessary. See the Sequence IIIG Engine Assembly Manual, Section 1 Sheet 2.

9.5.3 Thoroughly clean the block prior to honing as follows: For new and used blocks, remove the crankshaft, main

bearings, and bearing caps. In addition, remove all bushings, bearings, and oil gallery plugs prior to cleaning.

9.5.3.1 With either a new or a used block, prevent cleaner or oil from entering the engine coolant passages. (See Sequence IIIG Engine Assembly Manual, Section 1 Sheet 4.)

9.5.3.2 Clean the block in a heated bath, a temperature-controlled automated parts washer, or ultrasonic cleaner before and after honing. Follow these suggested guidelines to ensure there is no rusting of the engine block after this process:

*If Using a Heated Bath or an Automated Parts Washer:*

(1) Use only NAT-50 or PDN-50 soap at a concentration of 7.3 kg of soap per 380 L of water. Change the soap and water solution at least after every 25 h of use.

(2) Control the water temperature at  $60\text{ }^{\circ}\text{C} \pm 10\text{ }^{\circ}\text{C}$ .

(3) Use only fresh tap water in the bath.

(4) Prior to installing the engine in the parts washer, ensure that all coolant passages are blocked off to prevent cleaning solutions from entering the passages.

(5) Run the block through the cleaning cycle for a period of 30 min to 40 min.

(6) After the cycle is complete, immediately remove the block from the washer and spray it down with degreasing solvent.

(7) Wipe cylinder bores out with a lint free towel.

(8) Spray engine block with a 50:50 mixture of build-up oil and degreasing solvent.

(9) Do not remove the paint dot from the crankcase area of the block.

(10) Allow the block to cool to room temperature before honing the block.

*If Using the Ultrasonic Cleaner Parts Washer:*

(1) Based on bath volume, use solution 7 at a ratio of 132.5 mL (4.48 oz) per 3.785 L (1 gal) of water plus solution B at a ratio of 11 mL (0.38 oz) per 3.785 L (1 gal) of water. As an alternative, a 50/50 Brulin US Solution of 815 GD and 815 QR-DF may be utilized in a 12.5 % concentration.

(2) Use only fresh tap water in the bath.

(3) Control the solution-in-water temperature at  $65\text{ }^{\circ}\text{C} \pm 5\text{ }^{\circ}\text{C}$ .

(4) Prior to installing the engine in the parts washer, ensure that all coolant passages are blocked off to prevent cleaning solutions from entering the passages.

(5) Run the block through the cleaning cycle for a period of 60 min.

(6) After the cycle has completed, immediately remove the block from the washer and thoroughly spray clean the block with hot water.

(7) Replace the mixture of the two solutions-in-water with a new mixture at least after every 25 h of use.

(8) Spray engine block with a 50:50 mixture of build-up oil and degreasing solvent.

(9) Do not remove the paint dot from the crankcase area of the block.

(10) Allow the block to cool to room temperature before honing the block.

9.5.3.3 See the Sequence IIIG Engine Assembly Manual, Section 2 for the honing procedure.

9.5.3.4 After honing the cylinder walls, clean the engine block again according to 9.5.3 and spray the engine block (including all oil galleries) first with degreasing solvent followed by a 50:50 mixture of degreasing solvent and build-up oil. Using this 50:50 mixture, wipe out the cylinder bores with clean cloth towels until all honing residue has been removed.

9.5.3.5 Air dry the engine block, using clean dry shop air, and coat the cylinder walls with build-up oil using soft, lint-free, clean cloths.

9.6 *Cylinder Head Cleaning*—Clean the cylinder heads according to the following:

9.6.1 Explore all accessible water passages with a flexible probe to detect any material that would interfere with coolant flow.

9.6.2 Clean the cylinder heads according to the recommended engine block cleaning procedure (see 9.5.3.2) or clean with degreasing solvent. Spray the heads with a 50/50 mix of degreasing solvent and build-up oil. When cleaning the heads, do not remove the paint dot.

9.7 *Engine Build-Up Procedure*—Laboratories shall maintain engine-build data sheets as shown in Annex A17. This data shall be available to the TMC and the Test Procedure Developer for investigative studies as deemed necessary for hardware investigations during times of industry severity shifts or other problems.

9.7.1 *General Information*—Use only the listed service parts, special test parts, and special build up procedures specific to this test as outlined in this test method and the Sequence IIIG Engine Assembly Manual. See 6.4. Make and record measurements specified in this test method of the cylinders, pistons, rings, valve train, cam, and lifters. These measurements will provide evidence of conformance to the specifications of the method, and will provide baselines for determining engine wear that occurs during a Sequence IIIG test.

9.7.2 *Special Parts*—Use the special parts listed in the Sequence IIIG Engine Assembly Manual Section 8.

9.7.2.1 *Hardened Seat Heads*—Cylinder heads with hardened seats, part number 24502260S, can be used for non-reference oil tests once an acceptable reference oil test has been completed in the laboratory. These heads can also be reused, provided an acceptable reference oil test has been obtained with the reused heads and the criteria in section 5a of the assembly manual has been met. Once a laboratory has obtained acceptable reference oil results on both new and reused 24502260S heads, the laboratory can use either new or reused heads for any tests. When a test is conducted on an acceptable reused cylinder head with part number 24502260S, thereafter, append an “X” to the part number reported in the test report, where “X” is the number of tests the head has been used.

9.7.3 *Hardware Information*—Complete Form 12, Hardware Information, in standardized report form set (see Annex A8).

9.7.4 *Fastener Torque Specifications and Torquing Procedures*—Use the following specifications and torquing procedures when installing bolts in the engine:

9.7.4.1 *Main Bearing Cap Bolts*—Use new main cap bolts on every test, including tests on new engine blocks; do not

modify the threads of the bolts. Do not use air tools on bolts to seat the main bearing caps in the engine block. Use a speed handle and socket, in a crisscross pattern to draw down and lightly seat the main cap. Apply build-up oil to the threads and to the surfaces of the bolts that contact the main bearing caps. In order to prevent hydraulic lock, do not apply oil to the tapped holes in the cylinder block. Install the bolts finger-tight and tighten them further with the SPS Torque Sensor I,<sup>24,12</sup> Ingersoll-Rand ETW-E180,<sup>25,12</sup> or Snap-on ATECH3FR250 Torque Wrench<sup>26,12</sup> only, working from the center out in a crisscross pattern. See the Sequence IIIG Engine Assembly Manual for torquing instructions. (See Section 1 Sheet 6 for honing and Section 3 Sheet 6 for final assembly.)

9.7.4.2 *Cylinder Head Bolts*—Install the cylinder head bolts, GM Part No. 25527831 (long) and 25533811 (short), that are of special design for yield applications using the SPS Torque Sensor I, Ingersoll-Rand ETW-E180 Torque Wrench, or Snap-on ATECH3FR250 Torque Wrench. See the Sequence IIIG Engine Assembly Manual for installation instructions. Replace the bolts after each test. (See Section 1 Sheet 7 for honing and Section 5 Sheet 3 for final assembly.)

9.7.4.3 *Torques for Miscellaneous Bolts, Studs, and Nuts*—Use the torques for miscellaneous bolts, studs, and nuts given in the Sequence IIIG Engine Assembly Manual.

9.8 *Parts Replacement*—See 9.8.1 for information regarding parts. Replace test parts as follows:

9.8.1 Install the new parts listed in Annex A5, Table A5.1 for each test.

9.8.2 Install the new parts listed in Annex A5, Table A5.2, only if the used part is no longer suitable for test purposes.

9.9 *Engine Block Preparation*—Prepare the engine block as follows:

9.9.1 Install new engine block freeze plugs; use a driver to facilitate this replacement.

9.9.2 Install the main bearing caps, without the bearings in place. Tighten the retaining bolts using the procedure in 9.7.4.1.

9.9.3 To prevent entry of honing fluid into the coolant passages of the engine block, cover and seal the coolant inlet passages and freeze plug openings. Close the petcocks if previously installed; if not, install ¼ in. NPT pipe plugs.

9.9.4 With a 30 cm smoothing file, deburr the surfaces of the block that mate with the cylinder heads to ensure adequate gasket seating.

9.9.5 Use the honing torque plates B-H-J GM 3.8L/3E-R-s\_t-HT<sup>27,12</sup> to pre-stress the engine block for honing. Install the torque plates with the proper hardened washers (supplied with the honing torque plates), single washers on top row and double washers on bottom row, to establish proper bolt depth.

<sup>24</sup> The sole source of supply of the apparatus known to the committee at this time is Sunnen Products Co., 7910 Manchester Ave, St. Louis, MO 63143.

<sup>25</sup> The sole source supply of the apparatus known to the committee at this time is Ingersoll-Rand Assembly Solutions, 510 Hester Drive, White House, TN 37188.

<sup>26</sup> Available from local Snap-on dealers. Snap-on is a trademark of Snap-on, Inc., 10801 Corporate Drive, Kenosha, WI 53141-1430.

<sup>27</sup> The sole source of supply of the apparatus known to the committee at this time is B-H-J Products Inc., 37530 Enterprise Court, Newark, CA 94560.

9.9.5.1 Clean the threaded bores for the cylinder head attachment bolts using a bottoming tap before each installation of the torque plates.

9.9.5.2 The torque plates require the use of new head gaskets, SPO Part No. 24503802 left head and 24503801 right head, along with cylinder head, torque-to-yield fasteners, SPO Part No. 25527831 (long).

9.9.5.3 Clean all sealing and thread locking compounds from the fasteners for the torque plate installation. Lightly lubricate the fasteners (head bolts) during this operation with EF-411.

9.9.6 Use only the Sunnen CV-616<sup>24,12</sup> honing machine to hone the cylinder walls. See the Sequence IIIG Engine Assembly Manual, Section 2 for all of the proper setup and operational procedures for each specific run on the Sequence IIIG engine block. Have the honing machine's power output and current verified by Sunnen Products Co. biennially.

9.9.7 Replace the honing fluid, filters, and fiber mats used in the honing machine after every 15 h of honing machine operation. Use the honing machine hour meter to determine hours of operation. See the Sequence IIIG Engine Assembly Manual, Section 2 Sheet 8.

9.9.8 The flow rate of the honing lubricant should be approximately 7 L/min. In addition, do not introduce solvents into the honing fluid or use them to clean the honing stones or guides. Use only honing fluid to clean honing stones or guides.

9.9.9 Hone the cylinder walls without the main bearings in place, but with all bearing caps installed.

9.9.10 Clean the engine block following honing according to 9.5.3.2.

9.9.10.1 Allow the cylinder block to cool for a minimum of 10 min before taking final bore measurements. See Section 2, Sheet 9 of the Sequence IIIG Engine Assembly Manual.

9.9.11 If desired (this is not required), check the main bearing bore clearances using a mandrel, part BX-398-1, according to the following procedure:

9.9.11.1 Starting from the front of the block, slide the mandrel through all four main bearing bores. If excessive resistance is encountered while inserting the mandrel, remove the mandrel from the engine block and inspect the main bearing bores for burrs, nicks, dirt, alignment problems, or any abnormalities. Carefully remove any nicks, burrs, scratches, or dirt with 400-grit paper or a fine stone. Then use a clean shop towel with degreasing solvent to wipe the affected surfaces. Reinstall the mandrel to ensure that it can freely pass through all four main bearing bores. If the mandrel still will not clear the bores after completing the above steps, do not use this block and notify the Test Procedure Developer of the problem. After honing, repeat the above procedure prior to final engine build. The mandrel is an alignment and clearance gage only, not an assembly tool. The mandrel should not be in the bores when installing the main bearing caps or torquing the main bearing bolts.

9.10 *Piston Fitting and Numbering*—Fit the pistons to the cylinders according to recommendations listed in the Sequence IIIG Engine Assembly Manual for the run sequence of the block. Use only the specified code pistons for each run

sequence. Number the pistons with odd numbers in the left bank from front to rear and with even numbers in the right bank from front to rear.

9.10.1 *Piston Rings*—The rings are pre-sized for each run; check the gap in the cylinder bore for each test. The top ring gap shall be  $0.635 \text{ mm} \pm 0.051 \text{ mm}$ . The bottom ring gap shall be  $1.067 \text{ mm} \pm 0.051 \text{ mm}$ . The top ring gap shall be smaller than the bottom ring gap and the difference between the two ring gaps shall be between 0.330 mm and 0.533 mm. If the ring gap difference is below 0.330 mm, contact the Test Procedure Developer.

9.10.1.1 Check the ring gap with a Starrett Ring Taper Gage No. 270 with the ring positioned in the cylinder bore using a piston ring depth gage (drawing RX-118602-B). Remove the torque plates and position the rings 23.67 mm below the cylinder-block deck surface during gap measurement.

9.10.1.2 Record the top and bottom ring gaps on Form 12, Hardware Information, in the standardized report form set (see [Annex A8](#)). Record and report ring gaps in millimeters.

9.11 *Pre-Test Camshaft and Lifter Measurements*—Measure the camshaft lobe height and lifter lengths, prior to engine assembly, according to the following procedure:

9.11.1 Remove camshaft and lifters from laboratory inventory.

9.11.2 Remove camshaft and lifters from original container and packaging and set container and packaging aside for later use. Clean camshaft with degreasing solvent. Do not clean the lifters; wipe the lifters with a clean cloth or towel.

9.11.3 Make the camshaft measurement using Mitutoyo Snap Gauge, model 201-152,<sup>28,12</sup> and a Mitutoyo Digital Indicator, model 543-252B,<sup>28,12</sup> to measure the camshaft lobes. Make the lifter measurement with a digital indicator equipped with a Mitutoyo 4.3 mm flat tip, model 131-259 mounted in a indicator stand. Equip the indicator stand with a V-block that is rigidly mounted to the base and locates the lifter with its center axis in line with the digital indicator. Store the camshaft and lifters in a temperature-controlled room, before making dimensional measurements, for at least 90 min to ensure temperature stabilization.

9.11.3.1 Use Mitutoyo Digital Indicator for measurement accurate to 0.001 mm. Before each measurement session, use standards traceable to the National Institute of Standards and Technology, to ensure measuring equipment accuracy. Include standards having length values within 1.3 mm of the typical lifter and lobe measurement taken.

9.11.3.2 Use the same equipment and standards post-test measuring as were used for pre-test measuring. If a calibration shift between the pre-test and post-test measurements is detected, evaluate the shift to determine the effect on the wear measurement. Record the results of the evaluation and any corrective action taken.

9.11.4 With the camshaft positioned in a set of V-blocks, remove any burrs around the outer edge of the camshaft thrust surface, if necessary. Thoroughly clean the camshaft with

degreasing solvent to remove all rust preventative coatings and blow-dry it with clean, dry shop air.

9.11.5 Measure the maximum pre-test dimension of each camshaft lobe, transverse to the camshaft axis to the nearest 0.001 mm. This dimension is at the rear edge of all lobe positions (lobes are numbered from the front to the rear of the camshaft). Record the measurements and temperature at the time of measurement on internal laboratory forms. See 9.7. After measuring, coat the camshaft with build-up oil. Return the camshaft to its original packaging and container until installed in the engine.

9.11.6 Measure the pre-test length of the lifters at the center of the lifter foot to the nearest 0.001 mm. Record the measurements and temperature at time of measurement on internal laboratory forms. See 9.7.

9.11.7 Record the unique serial number for each lifter on internal laboratory forms. See 9.7. Do not use electro-mechanical scribing devices. Do not place any marks on the lifter body or foot. Return the lifters to their original packaging until installed in the engine.

9.12 *Camshaft Bearing Installation*—Install the main bearing caps (see 9.14.2) before installing the camshaft bearings. The camshaft tunnel is specially processed and uses oversize bearings provided through the CPD. Install the camshaft bearings according to the Sequence IIIG Engine Assembly Manual Section, 3 Sheet 4.

9.12.1 Always inspect the lifter and main bearing oil galleries for splintered babbitt materials that might have been shaved from the outside diameter of the bearings during installation. Remove any materials from the oil galleries with clean dry shop air.

9.13 *Camshaft Installation*—Install the camshaft according to the Sequence IIIG Engine Assembly Manual, Section 3 Sheet 11:

9.13.1 Coat the camshaft lobes and journals with a light film of test oil.

9.13.2 Install the camshaft in the engine block, taking care to avoid damage to the lobes, journals, and bearings.

9.13.3 *Installation of Camshaft Thrust Plate*—Lubricate the thrust plate with build-up oil and install the thrust plate to the front of the engine block using new Torx fasteners.<sup>29</sup>

9.14 *Main Bearings*—Verify that the main bearing bore areas in the engine block and bearing caps are clean. Install new main bearings, part number OHT3F-042-2, in the engine block and main bearing caps, and lightly oil the bearing surfaces with build-up oil. New main bearing cap bolts shall be used for each Sequence IIIG test engine build including a new engine block (discard the bolts the block was machined with).

9.14.1 *Crankshaft*—Install the crankshaft.

9.14.2 *Main Bearing Cap Installation*—Install the main bearing caps using new bolts for each test. Do not use the bolts from the new engine block for the first build; use new fasteners for the first build. Do not remove the phosphate coating from the bolts. Do not use air tools on the main bearing cap bolts to

<sup>28</sup> The sole source of the of the apparatus known to the committee at this time is Mitutoyo America Corp, 945 Corporate Blvd, Aurora, IL 60502.

<sup>29</sup> Trademark of Textron Fastening Systems, 840 W. Long Lake Road Suite 450 Troy, MI 48098.

seat the caps. Install the bolts finger-tight, and tighten them according to the procedure in 9.7.4.1. Use the main bearings as received.

9.15 *Crankshaft Sprocket*—Install a matched set two-piece crankshaft sprocket, part number OHT3F-036-1.

9.16 *Camshaft Sprocket, and Timing Chain*—Install a new camshaft sprocket and timing chain.

9.17 *Crankshaft Endplay*—Measure the crankshaft endplay. It should be between 0.076 mm and 0.279 mm.

9.18 *Piston Pin Installation*—Install new piston pins and retainers for each test. Clean piston pins using a clean lint-free cloth and oil with build-up oil. The piston pins are full floating and held in place by two retainers.

9.18.1 *Piston Installation*—Clean pistons using degreasing solvent and air dry. Wipe the piston with a lint-free towel prior to installation.

9.18.2 Use a piston ring expander to install the pre-gapped piston rings (see 9.10.1) on the pistons.

9.18.3 Position the ring end gaps as shown in the Sequence IIIG Engine Assembly Manual, Section 3 Sheet 8.

9.18.4 Coat the cylinder walls with build-up oil and wipe them with a clean, lint-free soft cloth, repeating the process until clean; apply a final coat of build-up oil before installing the piston assembly.

9.18.5 Coat the pistons and rings with build-up oil.

9.18.6 Install the pistons in the cylinders, using a ring compressor tool.

9.19 *Harmonic Balancer*—Deburr the harmonic balancer key way slot and the slot on the crankshaft with a mill file. On a new balancer, remove the rolled edge on the inside diameter of the balancer so there is a slip-fit on to the crankshaft. Do not install the balancer until after performing the oil pump priming operation in the test stand just prior to test start.

9.20 *Connecting Rod Bearings*—Clean the bearings using a clean lint-free cloth and oil with build up oil prior to installation. Use new connecting rod bearings, part number OHT3F-042-2, for each test, furnished as part of the engine bearing kit.

9.20.1 Install the bearings in the connecting rods, and install the bearing caps with the rods in place on the crankshaft.

9.20.1.1 Tighten the connecting rod bolts according to the specifications listed in the Sequence IIIG Engine Assembly Manual. Determine the torque specifications for the connecting rod bolts by the type of connecting rod: cast or powdered metal.

9.21 *Engine Front Cover*—Use a new front cover with each new engine block or if the oil pump gerotor housing is worn. Front covers can be used for as many as six tests. Remove any slag that may be present, and deburr the front cover prior to use.

9.21.1 Install new oil pump gears, or a new front cover and new gears, as deemed necessary according to the Sequence IIIG Engine Assembly Manual inspection requirements Section 4 Sheet 2. Deburr machined surfaces and remove any casting slag in oil passages as necessary.

9.21.2 Install a new oil pump relief valve and spring.

9.21.3 Ensure the oil pump relief valve moves freely inside its bore in the front cover. Check the oil-pump-relief-valve

clearance according to the Sequence IIIG Engine Assembly Manual, Section 4 Sheet 4.

9.21.4 Bolt the front cover and oil pump assembly to the engine block.

9.21.5 Inspect the oil pickup tube and screen assembly for cleanliness; install using a new gasket.

9.22 *Coolant Inlet Adapter*—Replace the water pump with a coolant inlet adapter, as shown in drawing OHT3F-031-1.

9.23 *Oil Dipstick Hole*—Plug the oil dipstick hole with a hole-plug (Part OHT3F-065-2). To determine the oil level at the appropriate time during a test, temporarily remove this plug and insert the calibrated dipstick (Part OHT3F-064-2).

9.24 *Oil Pan*—Install the oil pan, part number OHT3F-073-1, on the engine block, using a new gasket. Do not use magnetic drain plugs in the pan.

NOTE 6—Ensure the cut out area of the windage tray/oil pan gasket does not interfere with the oil dipstick and modify if necessary.

9.25 *Cylinder Head Assembly*—Prepare the cylinder heads according to the following procedure:

9.25.1 Install new cup-type freeze plugs.

9.25.2 Deburr all surfaces of the cylinder heads that mate with the engine block and the manifolds with a 30 cm smooth file to ensure satisfactory gasket seating.

9.25.3 Thoroughly clean the cylinder heads according to 9.6 and air blow them dry prior to final assembly. If the automatic parts washer is not used, clean cylinder heads with degreasing solvent and spray with 50/50 solution of build-up oil and degreasing solvent.

9.25.4 Coat the valve stems and valve guides with build-up oil.

9.25.5 Install new valves for each test. Lapping or grinding of valves or valve seats, or both, is not allowed.

9.25.6 Install new valve stem seals over the valve stems onto the valve guides. Exercise extreme care when installing the seals in order to avoid either cutting the seals or mis-positioning them on the guides, thereby helping to preclude high oil consumption. See Sequence IIIG Engine Assembly Manual, Section 5 Sheet 1.

9.25.7 Install new valve springs, part number OHT3G-059-1 (color code pink). Place the smaller diameter end of the spring against the retainer. Do not remove the factory paint dot from the valve spring.

9.25.8 Install valve retainers and keepers.

9.26 *Adjustment of Valve Spring Loads*—Adjust the load of each valve spring according to the following procedure:

9.26.1 Before and after using the valve spring load measurement apparatus (such as Part BX-310-2), calibrate the load cell using the following technique. Use dead weights to produce the specified load of 912 N.

9.26.1.1 *Load Cell to Load Cell Technique*—Affix load cell weight adapter plate (see Fig. 1) to calibration load cell. Zero the calibration load cell. Individually place calibrated dead weights onto calibration load cell. Verify that each dead weight indicates the appropriate force on calibration transducer read-out. Repeat the calibration of the calibration load cell. The two consecutive readings shall agree within 2.2 N; if not, inspect the load cell and replace as necessary. Align calibration load