
TPMS snap-in valves —

**Part 3:
Performances**

*Valves à boutonner («snap-in») pour TPMS —
Partie 3: Performances*

iTeh Standards
(<https://standards.iteh.ai>)
Document Preview

[ISO 18885-3:2019](https://standards.iteh.ai/catalog/standards/iso/b049eb19-a35a-45aa-82c9-c63b47f90102/iso-18885-3-2019)

<https://standards.iteh.ai/catalog/standards/iso/b049eb19-a35a-45aa-82c9-c63b47f90102/iso-18885-3-2019>



iTeh Standards
(<https://standards.iteh.ai>)
Document Preview

[ISO 18885-3:2019](https://standards.iteh.ai/catalog/standards/iso/b049eb19-a35a-45aa-82c9-c63b47f90102/iso-18885-3-2019)

<https://standards.iteh.ai/catalog/standards/iso/b049eb19-a35a-45aa-82c9-c63b47f90102/iso-18885-3-2019>



COPYRIGHT PROTECTED DOCUMENT

© ISO 2019

All rights reserved. Unless otherwise specified, or required in the context of its implementation, no part of this publication may be reproduced or utilized otherwise in any form or by any means, electronic or mechanical, including photocopying, or posting on the internet or an intranet, without prior written permission. Permission can be requested from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
CP 401 • Ch. de Blandonnet 8
CH-1214 Vernier, Geneva
Phone: +41 22 749 01 11
Fax: +41 22 749 09 47
Email: copyright@iso.org
Website: www.iso.org

Published in Switzerland

Contents

Page

Foreword	v
1 Scope	1
2 Normative references	1
3 Terms and definitions	1
4 Conditions for testing TPMS snap-in valves	2
4.1 General.....	2
4.2 Test fixtures.....	2
4.3 Installation.....	2
4.4 Ageing.....	3
5 Test methods	3
5.1 General.....	3
5.2 Adhesion.....	3
5.2.1 Test method.....	3
5.2.2 Performance.....	3
5.3 Valves core seal.....	3
5.3.1 General.....	3
5.3.2 Room temperature test.....	3
5.3.3 Low temperature test.....	4
5.3.4 High temperature test.....	4
5.4 Valve cap seal (optional, for sealing caps only).....	4
5.4.1 Test method.....	4
5.4.2 Performance.....	4
5.5 Valve to rim seal.....	5
5.5.1 General.....	5
5.5.2 Low temperature.....	5
5.5.3 High temperature.....	6
5.6 Installation test.....	6
5.6.1 General.....	6
5.6.2 Force to seat.....	6
5.6.3 Force to pull-out.....	7
5.6.4 Force to pull back (unseating).....	7
5.7 Burst.....	7
5.7.1 Test method.....	7
5.7.2 Performance.....	8
5.8 Ozone resistance.....	8
5.8.1 Test method.....	8
5.8.2 Performance.....	8
5.9 Flexing resistance.....	8
5.9.1 Test method.....	8
5.9.2 Performance.....	8
5.10 Corrosion test.....	9
5.10.1 Test method.....	9
5.10.2 Performance.....	9
5.11 Valve core torque test.....	9
5.11.1 Test method.....	9
5.11.2 Performance.....	10
5.12 Valve core cycling test.....	10
5.12.1 Test method.....	10
5.12.2 Performance.....	10
5.13 Valve flow rate.....	10
5.13.1 Test method.....	10
5.13.2 Performance.....	10