

---

---

## Plain bearings — Handling of plain bearings

*Paliers lisses — Manipulation des paliers lisses*

iTeh Standards  
(<https://standards.iteh.ai>)  
Document Preview

ISO 21433:2018

<https://standards.iteh.ai/catalog/standards/iso/4c99958f-a003-487d-8502-424f0f67585e/iso-21433-2018>



**iTeh Standards**  
**(<https://standards.iteh.ai>)**  
**Document Preview**

ISO 21433:2018

<https://standards.iteh.ai/catalog/standards/iso/4c99958f-a003-487d-8502-424f0f67585c/iso-21433-2018>



**COPYRIGHT PROTECTED DOCUMENT**

© ISO 2018

All rights reserved. Unless otherwise specified, or required in the context of its implementation, no part of this publication may be reproduced or utilized otherwise in any form or by any means, electronic or mechanical, including photocopying, or posting on the internet or an intranet, without prior written permission. Permission can be requested from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office  
CP 401 • Ch. de Blandonnet 8  
CH-1214 Vernier, Geneva  
Phone: +41 22 749 01 11  
Fax: +41 22 749 09 47  
Email: [copyright@iso.org](mailto:copyright@iso.org)  
Website: [www.iso.org](http://www.iso.org)

Published in Switzerland

# Contents

Page

|                                                              |           |
|--------------------------------------------------------------|-----------|
| <b>Foreword</b>                                              | <b>v</b>  |
| <b>Introduction</b>                                          | <b>vi</b> |
| <b>1 Scope</b>                                               | <b>1</b>  |
| <b>2 Normative references</b>                                | <b>1</b>  |
| <b>3 Terms and definitions</b>                               | <b>1</b>  |
| <b>4 Storage and transportation</b>                          | <b>1</b>  |
| 4.1 General                                                  | 1         |
| 4.2 Storage and transportation by packing                    | 1         |
| 4.2.1 General                                                | 1         |
| 4.2.2 Purpose of packing                                     | 1         |
| 4.2.3 Packing method                                         | 2         |
| 4.2.4 Packing material                                       | 2         |
| 4.2.5 Unpacking                                              | 2         |
| 4.3 Storage and transportation in containers                 | 2         |
| 4.3.1 General                                                | 2         |
| 4.3.2 Purpose of storage and transportation in containers    | 2         |
| 4.3.3 Points to notice at storage and transportation         | 3         |
| 4.3.4 Other methods of storage and transportation            | 3         |
| 4.3.5 Attachment of test and quality certificate             | 3         |
| 4.4 Selection of rust inhibitors and cleaning agents         | 3         |
| 4.5 Storage environment                                      | 3         |
| 4.5.1 Warehouse or storage room                              | 3         |
| 4.5.2 Ambient temperature of storage room                    | 3         |
| 4.5.3 Environmental humidity for storage room                | 3         |
| 4.5.4 First-in first-out                                     | 4         |
| 4.6 Handling                                                 | 4         |
| 4.7 Documentation                                            | 4         |
| <b>5 Method of installation of plain bearings</b>            | <b>4</b>  |
| 5.1 Points to consider during plain bearings installation    | 4         |
| 5.1.1 Plain bearings                                         | 4         |
| 5.1.2 Housing                                                | 4         |
| 5.1.3 Press-fit method                                       | 4         |
| 5.1.4 Screw –fixing method                                   | 5         |
| 5.1.5 Keyed joint method                                     | 5         |
| 5.1.6 Retaining ring fixing method                           | 5         |
| 5.1.7 Shrink fitting by cooling                              | 5         |
| 5.1.8 Shrink fitting by heating                              | 5         |
| 5.1.9 Points to notice during installation of plain bearings | 6         |
| 5.1.10 Points to notice after installation of plain bearings | 6         |
| 5.2 Mating shaft and assembly inspection                     | 6         |
| 5.2.1 Mating shaft                                           | 6         |
| 5.2.2 Installation of shaft                                  | 6         |
| 5.2.3 Check of operation                                     | 6         |
| <b>6 Operation</b>                                           | <b>6</b>  |
| 6.1 Cleaning (flushing) of lubrication system                | 6         |
| 6.2 Running-in                                               | 6         |
| 6.3 Supervision during operation                             | 7         |
| 6.3.1 Control and check items                                | 7         |
| 6.3.2 Record                                                 | 7         |
| <b>7 Replacement of plain bearings</b>                       | <b>7</b>  |
| 7.1 General                                                  | 7         |
| 7.2 Dismounting of plain bearings                            | 7         |