



Designation: F980 – 16 (Reapproved 2024)

Standard Guide for Measurement of Rapid Annealing of Neutron-Induced Displacement Damage in Silicon Semiconductor Devices¹

This standard is issued under the fixed designation F980; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ϵ) indicates an editorial change since the last revision or reapproval.

1. Scope

1.1 This guide defines the requirements and procedures for testing silicon discrete semiconductor devices and integrated circuits for rapid annealing effects from displacement damage resulting from neutron radiation. This test will produce degradation of the electrical properties of the irradiated devices and should be considered a destructive test. Rapid annealing of displacement damage is usually associated with bipolar technologies.

1.1.1 Heavy ion beams can also be used to characterize displacement damage annealing (1),² but ion beams have significant complications in the interpretation of the resulting device behavior due to the associated ionizing dose. The use of pulsed ion beams as a source of displacement damage is not within the scope of this standard.

1.2 The values stated in SI units are to be regarded as standard. No other units of measurement are included in this standard.

1.3 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety, health, and environmental practices and determine the applicability of regulatory limitations prior to use.*

1.4 *This international standard was developed in accordance with internationally recognized principles on standardization established in the Decision on Principles for the Development of International Standards, Guides and Recommendations issued by the World Trade Organization Technical Barriers to Trade (TBT) Committee.*

¹ This guide is under the jurisdiction of ASTM Committee E10 on Nuclear Technology and Applications and is the direct responsibility of Subcommittee E10.07 on Radiation Dosimetry for Radiation Effects on Materials and Devices.

Current edition approved Jan. 1, 2024. Published January 2024. Originally approved in 1986. Last previous edition approved in 2016 as F980 – 16. DOI: 10.1520/F0980-16R24.

² The boldface numbers in parentheses refer to the list of references at the end of this standard.

2. Referenced Documents

2.1 *ASTM Standards:*³

E264 Test Method for Measuring Fast-Neutron Reaction Rates by Radioactivation of Nickel

E265 Test Method for Measuring Reaction Rates and Fast-Neutron Fluences by Radioactivation of Sulfur-32

E666 Practice for Calculating Absorbed Dose From Gamma or X Radiation

E720 Guide for Selection and Use of Neutron Sensors for Determining Neutron Spectra Employed in Radiation-Hardness Testing of Electronics

E721 Guide for Determining Neutron Energy Spectra from Neutron Sensors for Radiation-Hardness Testing of Electronics

E722 Practice for Characterizing Neutron Fluence Spectra in Terms of an Equivalent Monoenergetic Neutron Fluence for Radiation-Hardness Testing of Electronics

E1854 Practice for Ensuring Test Consistency in Neutron-Induced Displacement Damage of Electronic Parts

E1855 Test Method for Use of 2N2222A Silicon Bipolar Transistors as Neutron Spectrum Sensors and Displacement Damage Monitors

E1894 Guide for Selecting Dosimetry Systems for Application in Pulsed X-Ray Sources

3. Terminology

3.1 *Definitions of Terms Specific to This Standard:*

3.1.1 *B*—gain also known as the common emitter gain. The ratio of the collector current over the base current at a constant V_{CE} .

3.1.2 *annealing function*—the ratio of the change in the displacement damage metric (as manifested in device parametric measurements) as a function of time following a pulse of neutrons to the change in the residual late-time displacement

³ For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

damage metric remaining at the time the imparted damage achieves quasi-equilibrium.

3.1.2.1 *Discussion*—This late-time quasi-equilibrium time is sometimes set to a fixed time on the order of approximately 1000 s, or it is, as in Test Method E1855, set to a displacement damage measurement made after temperature/time stabilizing thermal anneal procedure of 80 °C for 2 h. Fig. 1 shows an example of the annealing function for a 2N2907 pnp bipolar transistor with an operational current of 2 mA during and after the irradiation. The displacement damage metric of interest is often the reciprocal gain change in a bipolar device. This damage metric is widely used since the Messenger-Spratt equation (2, 3) states that this quantity, at late time, is proportional to the 1 MeV(Si) equivalent fluence; see Practice E722. In this case the

$$\left(\frac{1}{G_\infty} - \frac{1}{G_0}\right) = k\Phi \quad (1)$$

Φ is the 1 MeV(Si) equivalent fluence, k is a device-specific displacement damage constant referred to as the Messenger constant, G_0 is the initial gain of the device, and G_∞ is the late-time quasi-equilibrium gain of the device. For this damage metric, the anneal function, $AF(t)$, is given by:

$$AF(t) = \frac{\frac{1}{G(t)} - \frac{1}{G_0}}{\frac{1}{G_\infty} - \frac{1}{G_0}} \quad (2)$$

where $G(t)$ is the gain of the device at a time t .

3.1.2.2 *Discussion*—The annealing function has typical values of 2 to 10 for time periods extending out to several thousands of seconds following irradiation; see Refs (4-10). The annealing function decreases to unity at late time; “late time” is taken to be the time point where the G_∞ late-time quasi-equilibrium device gain was determined.

3.1.3 *displacement damage effects*—effects induced by the non-ionizing portion of the deposited energy during an irradiation. The dominant effect of displacement damage in bipolar silicon devices is a reduction in the minority carrier lifetime and a reduction in the common emitter current gain.

3.1.4 *in situ tests*—electrical measurements made on devices before, after, or during irradiation while they remain in the immediate vicinity of the irradiation location. All rapid annealing measurements are performed *in situ* because measurement must begin immediately following irradiation (usually <1 ms).

3.1.4.1 *Discussion*—For reactor neutron irradiations, there will be a gamma environment as well as a neutron pulse. In addition to the neutron displacement damage, the transient photocurrent from the gamma environment may affect the electrical measurements. During a fast-burst reactor pulse the peak gamma dose rate can exceed 1.E8 rad(Si)/s. The induced photocurrents may interfere with the determination of the early-time (<100 ms) device gain. Fig. 2 shows a representative time profile for the prompt gamma, prompt neutron, and delayed gamma radiation components for a maximum pulse in a fast-burst reactor. After a reactor pulse the delayed fission gamma environment will produce a photocurrent environment that extends out to the time when the device is removed from the reactor. The time-dependent importance of the device photocurrent response will vary with the operational currents within the device itself. At low operational currents the photocurrent interference current will exceed the operational currents for a longer period of time.

3.1.5 *LET*—linear energy transfer, also called the linear electronic stopping power, is the energy loss of an ionizing particle due to electronic collisions per unit distance into a material.

3.1.6 *remote tests*—electrical measurements made on devices that are physically removed from the irradiation location. For the purpose of this guide, remote tests are used only for the characterization of the parts before and after they are subjected to the neutron radiation (see 6.4).

4. Summary of Guide

4.1 A rapid annealing radiation test requires that continual or periodic time-sequential electrical parameter measurements


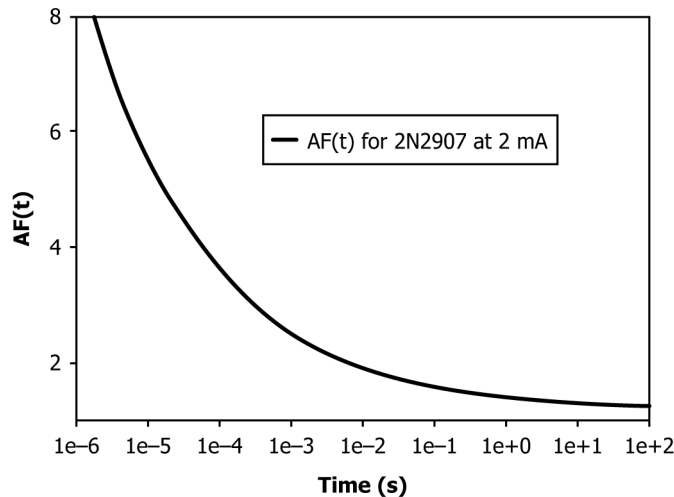


FIG. 1 Example Gain Annealing Function for a 2N2907 Bipolar Transistor

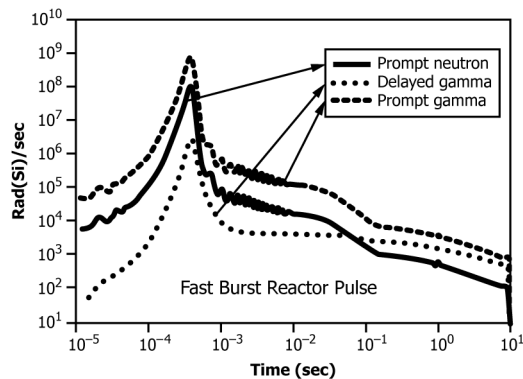

NOTE 1—Fig. 2 shows the radiation components from a maximum pulse ($\Delta\Theta = 300\text{ }^\circ\text{C}$, neutron fluence = 3.4×10^{14} 1 MeV(Si)/ cm^2) in a fast-burst reactor. The wiggles in the millisecond time period are a real effect and represent the temperature-induced shock oscillations in the reactor power as a result of the fuel expansion. The time-dependence of the reactor pulse was measured with a diamond PCD and the calculations were performed to deconvolute the radiation components of the reactor pulse (11, 12).

FIG. 2 Representative Time-Dependent Ionizing Dose from a Fast-Burst Reactor

of key parameters of a device be made immediately following exposure to a short pulse of neutron radiation capable of causing significant displacement damage.

4.2 Because many factors enter into the effects of the radiation on the part, parties to the test must establish many circumstances of the test before the validity of the test can be established or the results of one group of parts can be meaningfully compared with those of another group. Those factors that must be established are as follows:

4.2.1 *Radiation Source*—The type and characteristics of the neutron radiation source to be used (see 6.2).

4.2.2 *Dose Rate Range*—The range of ionizing dose rates within which the neutron exposures must take place. These dose rates and the subsequent device response must be taken into account in the interpretation of the parametric measurements being made (see 6.6).

4.2.3 *Operating Conditions*—The test circuit, electrical biases to be applied, and operating sequence (if applicable) for the part during and following exposure (see 6.5).

4.2.4 *Electrical Parameter Measurements*—The pre-irradiation measurements to be made before the test and post-irradiation measurements to be made after the radiation exposure on the test unit. These measurements include the measurement of relevant electrical properties accompanying changes in annealing-sensitive parameters of interest in the test.

4.2.5 *Time Sequence*—The exposure time, time after exposure when measurements of the selected parameter(s) are to begin, time when measurements are to end, and the time intervals between measurements.

4.2.6 *Neutron Fluence Levels*—The fluence range required to attain the desired damage to the device.

4.2.6.1 *Total Ionizing Dose Levels*—If the part is sensitive to an accompanying type of radiation (such as gamma rays), the levels to which the part is exposed before the rapid annealing measurement is affected (see 6.4).

Discussion—The damage from total dose can depend upon the dose rate and the LET of the irradiating particle (13). For reactor irradiations, ionizing dose can result from the neutrons

or the associated gamma rays. In the case of neutrons, the ionizing dose is delivered by the residual ions resulting from nuclear reactions. The relevant reactions can be elastic, inelastic, spallation, or transmutation reactions.

4.2.7 *Dosimetry*—The type of monitor and the read-out technique used to measure the radiation levels. The selection of a dosimetry system is dependent to some extent on the radiation source selection.

4.2.7.1 Since a short-pulsed radiation source is implied for a rapid annealing measurement, a time profile of the radiation intensity and its time relationship to the subsequent measurements should be obtained (see 7.1).

4.2.8 *Temperature*—The temperature during exposure and the allowable temperature change during the time interval of the rapid annealing measurement (see 6.7).

4.2.9 *Experimental Configuration*—The physical arrangement of the radiation source, test unit, radiation shielding, and any other mechanical or electrical elements of this test.

5. Significance and Use

5.1 Electronic circuits used in many space, military, and nuclear power systems may be exposed to various levels and time profiles of neutron radiation. It is essential for the design and fabrication of such circuits that test methods be available that can determine the vulnerability or hardness (measure of survivability) of components to be used in them. A determination of hardness is often necessary for the short term ($\approx 100\text{ }\mu\text{s}$) as well as long term (permanent damage) following exposure. See Practice E722.

6. Interferences

6.1 There are many factors that can affect the results of rapid annealing tests. Care must be taken to control these factors to obtain consistent and reproducible results.

6.2 *Pulsed Neutron Radiation Source*—Because the objective of a rapid annealing test is to observe short-term damage effects, it is implied that this damage is incurred in a short time period and is severe enough to be easily measured. These factors imply a pulsed neutron source. The most commonly