



Standard Terminology Relating to Methods of Mechanical Testing¹

This standard is issued under the fixed designation E 6; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ε) indicates an editorial change since the last revision or reapproval.

This standard has been approved for use by agencies of the Department of Defense.

^{ε1} NOTE— The term *elastic constants* was deleted: Section 3.1 and the term **initial stress** were editorially revised in April 2000.

1. Scope

1.1 This terminology covers the principal terms relating to methods of mechanical testing of solids. The general definitions are restricted and interpreted, when necessary, to make them particularly applicable and practicable for use in standards requiring or relating to mechanical tests. These definitions are published to encourage uniformity of terminology in product specifications.

1.2 Terms relating to fatigue and fracture testing are defined in Terminology E 1823.

2. Referenced Documents

2.1 ASTM Standards:

- E 796 Test Method for Ductility Testing of Metallic Foil²
- E 1823 Terminology Relating to Fatigue and Fracture Testing²

3. Index of Terms

3.1 The definitions of the following terms, which are listed alphabetically, appear in the indicated sections of 4.1.

Term	Section
angle of bend	D
angular strain	see strain
axial strain	see strain
bearing area	F
bearing load	B
bearing strain	F
bearing strength	F
bearing stress	F
bearing yield strength	F
bend test	D
break elongation	see maximum elongation
breaking load	B
Brinell hardness number	C
Brinell hardness test	C
chord modulus	see modulus of elasticity
compressive strength	B

compressive stress	see stress
compressometer	see extensometer
constraint	A
creep	E
creep recovery	E
creep rupture strength	E
creep strength	E
discontinuous yielding	B
ductility	A
edge distance	F
edge distance ratio	F
elastic constants	see modulus of elasticity and Poisson's ratio
elastic limit	A
elastic true strain	A
elongation	B
engineering strain	see strain
engineering stress	see stress
extensometer	B
fatigue ductility	B
fatigue ductility exponent	B
fatigue life	B
fracture ductility	A
fracture strength	A
fracture stress	see stress
free bend	D
gage length	A
guided bend	D
hardness	C
indentation hardness	C
initial recovery	E
initial strain	E
initial stress	E
Knoop hardness number	C
Knoop hardness test	C
linear strain	see strain
linear (tensile or compressive) strain	A
lower yield strength	B
macrostrain	see strain
malleability	see ductility
mandrel (in bend testing)	D
maximum elongation	B
mechanical hysteresis	A
mechanical properties	A
mechanical testing	A
microstrain	see strain
modulus of elasticity	A
modulus of rigidity	see modulus of elasticity
modulus of rupture in bending	D
modulus of rupture in torsion	B
necking	B
nominal stress	see stress
normal stress	see stress
physical properties	see mechanical properties
pin	see mandrel (in bend testing)

¹ This terminology is under the jurisdiction of ASTM Committee E-28 on Mechanical Testing and is the direct responsibility of Subcommittee E28.91 on Editorial and Terminology except where designated otherwise. A subcommittee designation in parentheses following a definition indicates the subcommittee with responsibility for that definition.

Current edition approved July 10, 1999. Published October 1999. Originally published as E 6 – 23 T. Last previous edition E 6 – 98.

² *Annual Book of ASTM Standards*, Vol 03.01.

plastic true strain	A
plunger	see mandrel (in bend testing)
principal stress	see stress
Poisson's ratio	A
proportional limit	A
radius of bend	D
rate of creep	E
reduction of area	B
relaxation rate	E
relaxed stress	E
remaining stress	E
residual strain	see strain
residual stress	see stress
Rockwell hardness number, HR	C
Rockwell hardness test	C
Rockwell superficial hardness number	see Rockwell hardness number
Rockwell superficial hardness test	C
semi-guided bend	D
set	A
secant modulus	see modulus of elasticity
shear fracture	B
shear modulus	see modulus of elasticity
shear strain	see strain
shear strength	B
shear stress	see stress
slenderness ratio	B
strain	A
stress	A
stress relaxation	E
stress-strain diagram	A
tangent modulus	see modulus of elasticity
tensile strength	B
tensile stress	see stress
torsional modulus	see modulus of elasticity
torsional stress	see stress
total elongation	B
transverse strain	see strain
true strain	see strain
true stress	see strain
ultimate elongation	see maximum elongation
uniform elongation	B
upper yield strength	B
Vickers hardness number	C
Vickers hardness test	C
wrap-around bend	D
yield point	B
yield point elongation	B
yield strength	B
Young's modulus	see modulus of elasticity
zero time	E

4. Terminology

4.1 *Terms and Definitions:*

A. GENERAL DEFINITIONS

constraint, *n*—any restriction to the deformation of a body. (E28.11)

ductility, *n*—the ability of a material to deform plastically before fracturing. (E28.02)

DISCUSSION—Ductility is usually evaluated by measuring (1) the elongation or reduction of area from a tension test, (2) the depth of cup from a cupping test, (3) the radius or angle of bend from the bend test, or (4) the fatigue ductility from the fatigue ductility test (see Test Method E 796).

DISCUSSION—Malleability is the ability to deform plastically under repetitive compressive forces.

elastic limit [FL⁻²], *n*—the greatest stress which a material is capable of sustaining without any permanent strain remaining upon complete release of the stress.

DISCUSSION—Due to practical considerations in determining the

elastic limit, measurements of strain, using a small load rather than zero load, are usually taken as the initial and final reference.

fracture ductility, ϵ_f , *n*—the true plastic strain at fracture.

fracture strength, S_f [FL⁻²], *n*—the normal stress at the beginning of fracture. Fracture strength is calculated from the load at the beginning of fracture during a tension test and the original cross-sectional area of the specimen.

gage length [L], *n*—the original length of that portion of the specimen over which strain or change of length is determined. (E28.04)

least count, *n*—the smallest change in indication that can customarily be determined and reported.

DISCUSSION—In machines with close graduations it may be the value of a graduation interval; with open graduations or with magnifiers for reading, it may be an estimated fraction, rarely as fine as one tenth, of a graduated interval; and with verniers it is customarily the difference between the scale and vernier graduation measured in terms of scale units. In the indicating mechanism includes a stepped detent, the detent action may determine the least count.

mechanical hysteresis, *n*—the energy absorbed in a complete cycle of loading and unloading. (E28.03)

DISCUSSION—A complete cycle of loading and unloading includes any stress cycle regardless of the mean stress or range of stress.

mechanical properties, *n*—those properties of a material that are associated with elastic and inelastic reaction when force is applied, or that involve the relationship between stress and strain.

DISCUSSION—These properties have often been referred to as “physical properties,” but the term “mechanical properties” is much to be preferred.

mechanical testing, *n*—the determination of mechanical properties. (E28.90)

modulus of elasticity [FL⁻²], *n*—the ratio of stress to corresponding strain below the proportional limit.

tension or compression, *E* [FL⁻²], *n*—Young's modulus (modulus in tension or modulus in compression).

shear or torsion, *G* [FL⁻²], *n*—commonly designated as modulus of rigidity, shear modulus, or torsional modulus.

DISCUSSION—The stress-strain relations of many materials do not conform to Hooke's law throughout the elastic range, but deviate therefrom even at stresses well below the elastic limit. For such materials the slope of either the tangent to the stress-strain curve at the origin or at a low stress, the secant drawn from the origin to any specified point on the stress-strain curve, or the chord connecting any two specified points on the stress-strain curve is usually taken to be the “modulus of elasticity.” In these cases the modulus should be designated as the “tangent modulus,” the “secant modulus,” or the “chord modulus,” and the point or points on the stress-strain curve described. Thus, for materials where the stress-strain relationship is curvilinear rather than linear, one of the four following terms may be used:

(a) *initial tangent modulus* [FL⁻²], *n*—the slope of the stress-strain curve at the origin.

(b) *tangent modulus* [FL⁻²], *n*—the slope of the stress-strain curve at any specified stress or strain.

(c) *secant modulus* [FL⁻²], *n*—the slope of the secant drawn from the origin to any specified point on the stress-strain curve.

(d) *chord modulus* [FL⁻²], *n*—the slope of the chord drawn between any two specified points on the stress-strain curve.

DISCUSSION—Modulus of elasticity, like stress, is expressed in force per unit of area (pounds per square inch, etc.).

Poisson's ratio, μ , n —the absolute value of the ratio of transverse strain to the corresponding axial strain resulting from uniformly distributed axial stress below the proportional limit of the material. (E28.03)

DISCUSSION—Above the proportional limit, the ratio of transverse strain to axial strain will depend on the average stress and on the stress range for which it is measured and, hence should not be regarded as Poisson's ratio. If this ratio is reported, nevertheless, as a value of "Poisson's ratio" for stresses beyond the proportional limit, the range of stress should be stated.

DISCUSSION—Poisson's ratio will have more than one value if the material is not isotropic.

proportional limit [FL^{-2}], n —the greatest stress which a material is capable of sustaining without any deviation from proportionality of stress to strain (Hooke's law).

DISCUSSION—Many experiments have shown that values observed for the proportional limit vary greatly with the sensitivity and accuracy of the testing equipment, eccentricity of loading, the scale to which the stress-strain diagram is plotted, and other factors. When determination of proportional limit is required, the procedure and the sensitivity of the test equipment should be specified.

set—strain remaining after complete release of the load producing the deformation.

DISCUSSION—Due to practical considerations, such as distortion in the specimen and slack in the strain indicating system, measurements of strain at a small load rather than zero load are often taken.

DISCUSSION—Set is often referred to as permanent set if it shows no further change with time. Time elapsing between removal of load and final reading of set should be stated.

strain, e , n —the per unit change, due to force, in the size or shape of a body referred to its original size or shape. Strain is a nondimensional quantity, but it is frequently expressed in inches per inch, metres per metre, or percent.

DISCUSSION—Strain, as defined here is sometimes called "engineering strain," to emphasize the difference from true strain.

DISCUSSION—In this standard, "original" refers to dimensions or shape of cross section of specimens at the beginning of testing.

DISCUSSION—Strain at a point is defined by six components of strain: three linear components and three shear components referred to a set of coordinate axes.

DISCUSSION—In the usual tension, compression, or torsion test it is customary to measure only one component of strain and to refer to this as "the strain." In a tension or a compression test this is usually the axial component.

DISCUSSION—Strain has an elastic and a plastic component. For small strains the plastic component can be imperceptibly small.

DISCUSSION—Linear thermal expansion, sometimes called "thermal strain," and changes due to the effect of moisture are not to be considered strain in mechanical testing.

linear (tensile or compressive) strain, n —the change per unit length due to force in an original linear dimension. (E28.04)

DISCUSSION—An increase in length is considered positive.

axial strain, n —linear strain in a plane parallel to the longitudinal axis of the specimen. (E28.04)

transverse strain, n —linear strain in a plane perpendicular to the axis of the specimen.

DISCUSSION—Transverse strain may differ with direction in anisotropic materials.

angular strain, n —use *shear strain*.

shear strain, n —the tangent of the angular change, due to force, between two lines originally perpendicular to each other through a point in a body. (E28.04)

true strain, ϵ , n —in a body subjected to axial force, the natural logarithm of the ratio of the gage length at the moment of observation to the original gage length.

elastic true strain, ϵ_e , n —elastic component of the true strain.

plastic true strain, ϵ_p , n —the inelastic component of true strain.

macrostrain, n —the mean strain over any finite gage length of measurement large in comparison with interatomic distances. (E28.13)

DISCUSSION—Macrostrain can be measured by several methods, including electrical-resistance strain gages and mechanical or optical extensometers. Elastic macrostrain can be measured by X-ray diffraction.

DISCUSSION—When either of the terms *macrostrain* or *microstrain* is first used in a document, it is recommended that the physical dimension or the gage length, which indicate the size of the reference strain volume involved, be stated.

microstrain, n —the strain over a gage length comparable to interatomic distances. (E28.13)

DISCUSSION—These are the strains being averaged by the macrostrain measurement. Microstrain is not measurable by existing techniques. Variance of the microstrain distribution can, however, be measured by X-ray diffraction.

DISCUSSION—When either of the terms *macrostrain* or *microstrain* is first used in a document, it is recommended that the physical dimension or the gage length, which indicate the size of the reference strain volume involved, be stated.

residual strain, n —strain associated with residual stress. (E28.13)

DISCUSSION—Residual strains are elastic.

stress [FL^{-2}], n —the intensity at a point in a body of the forces or components of force that act on a given plane through the point. Stress is expressed in force per unit of area (pounds-force per square inch, megapascals, and so forth).

DISCUSSION—As used in tension, compression, or shear tests prescribed in product specifications, stress is calculated on the basis of the original dimensions of the cross section of the specimen. This stress is sometimes called "engineering stress," to emphasize the difference from true stress.

engineering stress, S [FL^{-2}], n —the stress calculated on the basis of the original dimensions of the specimen.

nominal stress [FL^{-2}], n —the stress at a point calculated on the net cross section by simple elastic theory without taking into account the effect on the stress produced by geometric discontinuities such as holes, grooves, fillets, and so forth.

normal stress [FL^{-2}], n —the stress component perpendicular to a plane on which the forces act. Normal stress may be either.

tensile stress [FL^{-2}], n —normal stress due to forces directed away from the plane on which they act, or (E28.04)

compressive stress [FL^{-2}], n —normal stress due to forces directed toward the plane on which they act. (E28.04)

DISCUSSION—Tensile stresses are positive and compressive stresses are negative.

shear stress $[FL^{-2}]$, n —the stress component tangential to the plane on which the forces act. (E28.04)

torsional stress $[FL^{-2}]$, n —the shear stress on a transverse cross section resulting from a twisting action. (E28.04)

true stress, σ $[FL^{-2}]$, n —in a tension or compression test the axial stress calculated on the basis of the cross-sectional area at the moment of observation instead of the original cross-sectional area.

principal stress (normal) $[FL^{-2}]$, n —the maximum or minimum value of the normal stress at a point in a plane considered with respect to all possible orientations of the considered plane. On such principal planes the shear stress is zero.

DISCUSSION—There are three principal stresses on three mutually perpendicular planes. The states of stress at a point may be:

(1) *uniaxial* $[FL^{-2}]$, n —a state of stress in which two of the three principal stresses are zero,

(2) *biaxial* $[FL^{-2}]$, n —a state of stress in which only one of the three principal stresses is zero, or

(3) *triaxial* $[FL^{-2}]$, n —a state of stress in which none of the principal stresses is zero.

(4) *multiaxial* $[FL^{-2}]$, n —biaxial or triaxial.

fracture stress $[FL^{-2}]$, n —the true normal stress on the minimum cross-sectional area at the beginning of fracture.

DISCUSSION—This term usually applies to tension tests of unnotched specimens.

residual stress $[FL^{-2}]$, n —stress in a body which is at rest and in equilibrium and at uniform temperature in the absence of external and mass forces. (E28.13)

stress-strain diagram, n —a diagram in which corresponding values of stress and strain are plotted against each other. Values of stress are usually plotted as ordinates (vertically) and values of strain as abscissas (horizontally). (E28.04)

B. TENSION, COMPRESSION, DUCTILITY, SHEAR, AND TORSION TESTING

bearing load $[F]$, n —a compressive load on an interface. (E28.04)

breaking load $[F]$, n —the load at which fracture occurs. (E28.04)

DISCUSSION—When used in connection with tension tests of thin materials or materials of small diameter for which it is often difficult to distinguish between the breaking load and the maximum load developed, the latter is considered to be the breaking load.

compressive strength $[FL^{-2}]$, n —the maximum compressive stress which a material is capable of sustaining. Compressive strength is calculated from the maximum load during a compression test and the original cross-sectional area of the specimen. (E28.04)

DISCUSSION—In the case of a material which fails in compression by a shattering fracture, the compressive strength has a very definite value. In the case of materials which do not fail in compression by a shattering fracture, the value obtained for compressive strength is an arbitrary value depending upon the degree of distortion which is regarded as indicating complete failure of the material.

discontinuous yielding, n —in a uniaxial test, a hesitation or fluctuation of force, such as is sometimes observed at or near

the onset of plastic deformation, due to localized yielding. (The stress-strain curve need not appear to be discontinuous.) (E28.04)

elongation El , n —the increase in gage length of a body subjected to a tension force, referenced to a gage length on the body. Usually elongation is expressed as a percentage of the original gage length. (E28.04)

DISCUSSION—The increase in gage length may be determined either *at* or *after* fracture, as specified for the material under test.

DISCUSSION—The term elongation, when applied to metals, generally means measurement after fracture; when applied to plastics and elastomers, measurement at fracture. Such interpretation is usually applicable to values of elongation reported in the literature when no further qualification is given.

DISCUSSION—In reporting values of elongation the gage length shall be stated.

DISCUSSION—Elongation is affected by: specimen geometry; length, width, thickness of the gage section and adjacent regions; and test procedure, such as alignment and speed of pulling.

extensometer, n —a device for measuring linear strain (E28.04)

DISCUSSION—Devices for measuring decreases in length are sometimes called “compressometers.”

fatigue ductility D_f —the ability of a material to deform plastically before fracturing, determined from a constant-strain amplitude, low-cycle fatigue test. (E28.04)

DISCUSSION—Fatigue ductility is usually expressed in percent in direct analogy with elongation and reduction of area ductility measures.

DISCUSSION—The fatigue ductility corresponds to the fracture ductility. Elongation and reduction of area represent the engineering tensile strain after fracture.

DISCUSSION—For the purpose of this definition, the fatigue ductility exponent, c , is defined as $C \equiv -0.60$.

DISCUSSION—The fatigue ductility is used for metallic foil for which the tension test does not give useful elongation and reduction of area measures.

fatigue ductility exponent, c , n —the slope of a log-log plot of the plastic strain range and the fatigue life. (E28.04)

fatigue life, N_f , n —the numbers of cycles of stress or strain of a specified character that a given specimen sustains before failure of a specified nature occurs. (E28.04)

lower yield strength, LYS $[FL^{-2}]$, n —in a uniaxial test, the minimum stress recorded during discontinuous yielding at or near the onset of plastic deformation, ignoring transient effects. See Figs. 1 and 2. (E28.04)

maximum elongation, El_{max} , n —the elongation at the time of fracture, including both elastic and plastic deformation of the tensile specimen.

DISCUSSION—This definition is used for rubber, plastic, and some metallic materials. (E28.04)

DISCUSSION—Maximum elongation is also called ultimate elongation or break elongation.

modulus of rupture in torsion $[FL^{-2}]$, n —the value of maximum shear stress in the extreme fiber of a member of circular cross section loaded to failure in torsion computed from the equation:

$$S_s = Tr/J \quad (1)$$

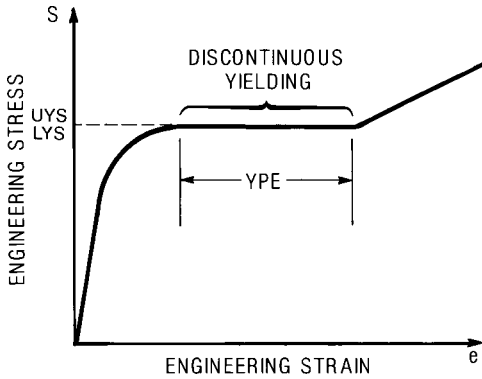


FIG. 1 Stress-Strain Diagram for Determination of Upper and Lower Yield Strengths and Yield Point Elongation in a Material Exhibiting Discontinuous Yielding

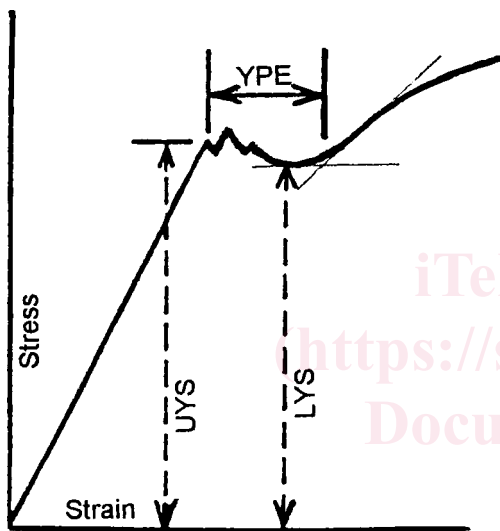


FIG. 2 Stress Strain Diagram Showing Yield Point Elongation and Upper and Lower Yield Strengths

where:

T = maximum twisting moment,

r = original outer radius, and

J = polar moment of inertia of the original cross section.

(E28.04)

DISCUSSION—When the proportional limit in shear is exceeded, the modulus of rupture in torsion is greater than the actual maximum shear stress in the extreme fiber, exclusive of the effect of stress concentration near points of application of torque.

DISCUSSION—If the criterion for failure is other than fracture or attaining the first maximum of twisting moment, it should be so stated.

necking, n —the localized reduction of the cross-sectional area of a specimen which may occur during stretching.

(E28.04)

reduction of area, n —the difference between the original cross-sectional area of a tension test specimen and the area of its smallest cross section. The reduction of area is usually expressed as a percentage of the original cross-sectional area of the specimen.

(E28.04)

DISCUSSION—The smallest cross section may be measured *at or after* fracture as specified for the material under test.

DISCUSSION—The term reduction of area when applied to metals

generally means measurement after fracture; when applied to plastics and elastomers, measurement at fracture. Such interpretation is usually applicable to values for reduction of area reported in the literature when no further qualification is given.

shear fracture, n —a mode of fracture in crystalline materials resulting from translation along slip planes which are preferentially oriented in the direction of the shearing stress.

(E28.04)

shear strength, n —the maximum shear stress which a material is capable of sustaining. Shear strength is calculated from the maximum load during a shear or torsion test and is based on the original dimensions of the cross section of the specimen.

(E28.04)

slenderness ratio, n —the effective unsupported length of a uniform column divided by the least radius of gyration of the cross-sectional area.

(E28.04)

tensile strength, S_u [FL^{-2}], n —the maximum tensile stress which a material is capable of sustaining. Tensile strength is calculated from the maximum load during a tension test carried to rupture and the original cross-sectional area of the specimen.

(E28.04)

total elongation, El_t , n —the elongation determined after fracture by realigning and fitting together of the broken ends of the specimen.

(E28.04)

DISCUSSION—This definition is usually used for metallic materials.

uniform elongation, El_u , n —the elongation determined when the maximum load is reached.

(E28.04)

DISCUSSION—This definition applies to materials whose cross section decreases uniformly along the gage length up to maximum load.

DISCUSSION—Some steel sheet materials exhibit a flat plateau (see Fig. 1) at maximum load. When this occurs, the uniform elongation is determined as indicated in Fig. 3.

upper yield strength, UYS [FL^{-2}], n —in a uniaxial test, the first stress maximum (stress at first zero slope) associated with discontinuous yielding at or near the onset of plastic deformation. See Figs. 1 and 2, and Fig. 4

(E28.04)

yield point, YP [FL^{-2}], n —term previously used, by E 8 and E 8M, for the property which is now referred to as **upper**

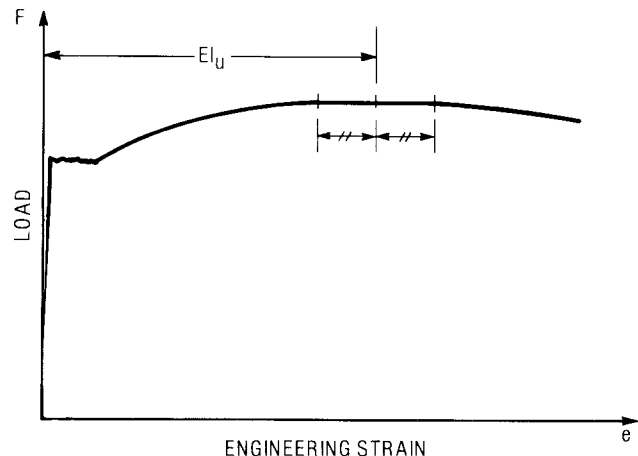


FIG. 3 Load-Strain Diagram for Determination of Uniform Elongation of Steel Sheet Materials Exhibiting a Flat Plateau at Maximum Load

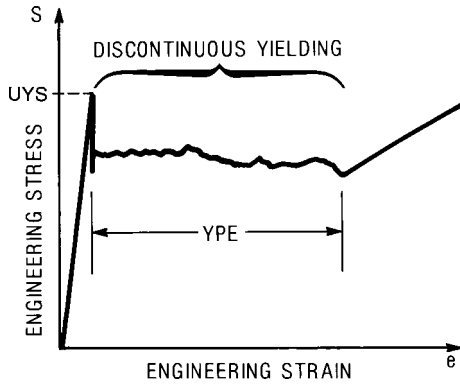


FIG. 4 Stress-Strain Diagram for Determination of Upper Yield Strength and Yield Point Elongation in a Material Exhibiting Discontinuous Yielding

yield strength. (E28.04)

yield point elongation, YPE, n —in a uniaxial test of a material exhibiting discontinuous yielding at or near the onset of plastic deformation, the strain (expressed in percent) separating the stress-strain curve's first point of zero slope from the point of transition from discontinuous yielding to uniform strain hardening. See Figs. 1 and 2, and Fig. 4. If the transition occurs over a range of strain, as shown in Fig. 2, the YPE end point is the intersection between (a) a horizontal line drawn tangent to the curve at the last zero slope and (b) a line drawn tangent to the strain hardening portion of the stress-strain curve at the point of inflection. If there is no point at or near the onset of yielding at which the slope reaches zero, the material has 0 % YPE. (E28.04)

yield strength, YS or S_y [FL^{-2}], n —the engineering stress at which, by convention, it is considered that plastic elongation of the material has commenced. This stress may be specified in terms of (a) a specified deviation from a linear stress-strain relationship, (b) a specified total extension attained, or (c) maximum or minimum engineering stresses measured during discontinuous yielding. (E28.04)

DISCUSSION—The following types of yield strengths, which correspond to the approaches listed above may be specified:

(a) **specified offset yield strength, n** (usually an offset strain of 0.2 % is specified)—the engineering stress at which the material has been plastically strained by an amount equal to the specified offset strain. This stress is reached at the point where the stress-strain curve intersects a line having a slope equal to the modulus of elasticity and constructed such that it is offset from the linear portion of the stress-strain curve by an amount equal to the specified strain (see Fig. 5).

(b) **specified extension under load yield strength, n** (usually a strain of 0.5 % is specified, although higher strains may need to be used in testing of elastomers, polymers, and high-strength materials, to ensure that the yield strength determined will exceed the material's elastic limit)—the engineering stress at which the material has elongated (including both elastic and plastic deformation) an amount corresponding to the specified strain. This stress is attained at the point where the stress-strain curve intersects a line drawn parallel to the stress axis at the specified strain on the strain axis (see Fig. 6).

(c) **upper or lower yield strengths, n** —the upper (first maximum) or the lower (minimum, ignoring transient effects) engineering stress measured during discontinuous yielding occurring at or near the onset of plastic deformation (see Figs. 1 and 2, and Fig. 4).

DISCUSSION—When yield strength is specified, the type of yield strength must be stated, along with the specified offset or extension

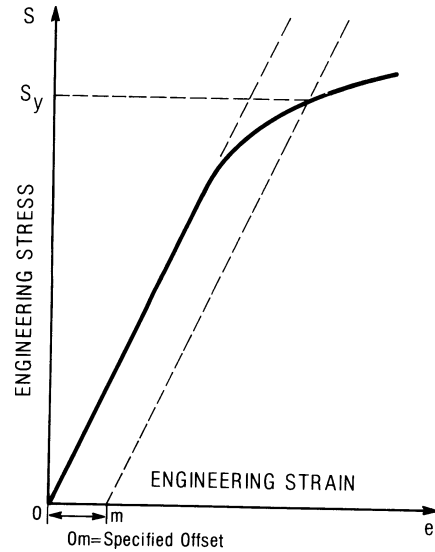


FIG. 5 Stress-Strain Diagram for Determination of Yield Strength by the Offset Method

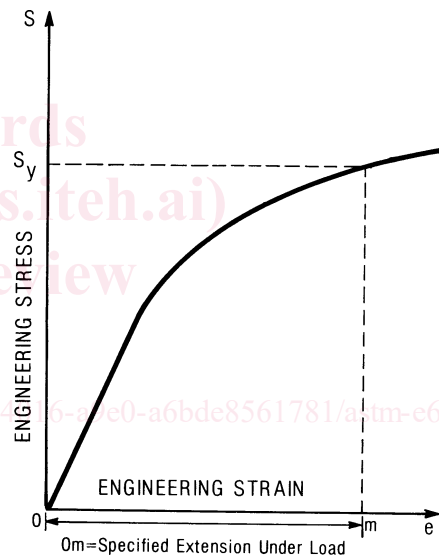


FIG. 6 Stress-Strain Diagram for Determination of Yield Strength by the Extension-Under-Load Method

under load, when applicable. The following are examples: YS (0.2 % offset), YS (0.5 % EUL), UYS , LYS .

DISCUSSION—Offset or extension under load yield strengths should be specified for continuously yielding materials, because upper and lower yield strengths are not defined for such materials. Determination of upper or lower yield strengths, or both, is often favored for discontinuously yielding materials, because offsets or extensions constructed would generally intersect the portion of the stress-strain curve reflecting the stress oscillations which are characteristic of discontinuous yielding.

DISCUSSION—The values obtained by the methods described above may differ. However, when discontinuous yielding causes the stress-strain curve to show a stress hesitation with no pronounced increases or decreases (see Fig. 1), the offset, EUL and upper and lower yield strengths generally approach or attain a common value.

DISCUSSION—Yield strength, however determined, is generally affected by speed of testing. However, upper and lower yield strengths can also be dramatically influenced by test equipment parameters such as stiffness and alignment. (For more information, consult Appendix I of E 8 or E 8M.)