



Designation: F 2450 – 04

# Standard Guide for Assessing Microstructure of Polymeric Scaffolds for Use in Tissue Engineered Medical Products<sup>1</sup>

This standard is issued under the fixed designation F 2450; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon ( $\epsilon$ ) indicates an editorial change since the last revision or reapproval.

## 1. Scope

1.1 This guide covers an overview of test methods that may be used to obtain information relating to the dimensions of pores, the pore size distribution, the degree of porosity, interconnectivity, and measures of permeability for porous materials used as polymeric scaffolds in the development and manufacture of tissue engineered medical products (TEMPs). This information is key to optimizing the structure for a particular application, developing robust manufacturing routes, and for providing reliable quality control data.

1.2 *This guide does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and to determine the applicability of regulatory limitations prior to use.*

## 2. Referenced Documents

### 2.1 ASTM Standards:<sup>2</sup>

**D 2873** Test Method for Interior Porosity of Poly(Vinyl Chloride) (PVC) Resins by Mercury Intrusion Porosimetry<sup>3</sup>

**D 4404** Test Method for Determination of Pore Volume and Pore Volume Distribution of Soil and Rock by Mercury Intrusion Porosimetry

**E 128** Test Method for Maximum Pore Diameter and Permeability of Rigid Porous Filters for Laboratory Use

**E 1294** Test Method for Pore Size Characteristics of Membrane Filters Using Automated Liquid Porosimeter

**F 316** Test Method for Pore Size Characteristics of Membrane Filters by Bubble Point and Mean Flow Pore Test

**F 2150** Guide for Characterization and Testing of Biomaterial Scaffolds Used in Tissue-Engineered Medical Products

<sup>1</sup> This guide is under the jurisdiction of ASTM Committee F04 on Medical and Surgical Materials and Devices and is the direct responsibility of Subcommittee F04.42 on Biomaterials and Biomolecules for TEMP.

Current edition approved Nov. 1, 2004. Published December 2004.

<sup>2</sup> For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

<sup>3</sup> Withdrawn.

### 2.2 ISO Standard:<sup>4</sup>

ISO 845 Cellular Plastics and Rubbers—Determination of Apparent (Bulk) Density

## 3. Terminology

### 3.1 Definitions:

3.1.1 *bioactive agent, n*—any molecular component in, on, or within the interstices of a device that is intended to elicit a desired tissue or cell response.

3.1.1.1 *Discussion*—Growth factors and antibiotics are typical examples of bioactive agents. Device structural components or degradation byproducts that evoke limited localized bioactivity are not included.

3.1.2 *blind (end)-pore, n*—a pore that is in contact with an exposed internal or external surface through a single orifice smaller than the pore's depth.

3.1.3 *closed cell, n*—a void isolated within a solid, lacking any connectivity with an external surface. Synonym: *closed pore*

3.1.4 *hydrogel, n*—a water-based open network of polymer chains that are cross-linked either chemically or through crystalline junctions or by specific ionic interactions.

3.1.5 *permeability, n*—a measure of fluid, particle, or gas flow through an open pore structure.

3.1.6 *polymer, n*—a long chain molecule composed of monomers including both natural and synthetic materials, for example, collagen, polycaprolactone.

3.1.7 *pore, n*—a liquid (fluid or gas) filled externally connecting channel, void, or open space within an otherwise solid or gelatinous material (for example, textile meshes composed of many or single fibers (textile based scaffolds), open cell foams, (hydrogels). Synonyms: *open-pore, through-pore*.

3.1.8 *porogen, n*—a material used to create pores within an inherently solid material.

3.1.8.1 *Discussion*—For example, a polymer dissolved in an organic solvent is poured over a water-soluble powder. After evaporation of the solvent, the porogen is leached out, usually by water, to leave a porous structure. The percentage of porogen needs to be high enough to ensure that all the pores are interconnected.

<sup>4</sup> Available from American National Standards Institute (ANSI), 25 W. 43rd St., 4th Floor, New York, NY 10036.

3.1.9 *porometry, n*—the determination of the distribution of open pore diameters relative to the direction of fluid flow by the displacement of a non-volatile wetting fluid as a function of pressure.

3.1.10 *porosimetry, n*—the determination of the pore volume and pore size distribution through the use of a non-wetting liquid (typically mercury) intrusion into a porous material as a function of pressure.

3.1.11 *porosity, n*—property of a solid which contains an inherent or induced network of channels and open spaces. Porosity can be determined by measuring the ratio of pore (void) volume to the apparent (total) volume of a porous material and is commonly expressed as a percentage.

3.1.12 *scaffold, n*—a support, delivery vehicle, or matrix for facilitating the migration, binding, or transport of cells or bioactive molecules used to replace, repair, or regenerate tissues.

3.1.13 *through-pores, n*—an inherent or induced network of voids or channels that permit flow of fluid (liquid or gas) from one side of the structure to the other.

3.1.14 *tortuosity, n*—a measure of the mean free path length of through-pores relative to the sample thickness. Alternative definition: The squared ratio of the mean free path to the minimum possible path length.

#### 4. Summary of Guide

4.1 The microstructure, surface chemistry, and surface morphology of polymer-based tissue scaffolds plays a key role in encouraging cell adhesion, migration, growth, and proliferation. The intention of this guide is to provide a compendium of techniques for characterizing this microstructure. The breadth of the techniques described reflects the practical difficulties of quantifying pore sizes and pore size distributions over length scales ranging from nanometres to sub-millimetres and the porosity of materials that differ widely in terms of their mechanical properties.

4.2 These microstructural data when used in conjunction with other characterization methods, for example, chemical analysis of the polymer (to determine parameters such as the molecular weight and its distribution), will aid in the optimization of scaffolds for tissue engineered medical products (TEMPs). Adequate characterization is also critical to ensure the batch-to-batch consistency of scaffolds; either to assess base materials supplied by different suppliers or to develop robust manufacturing procedures for commercial production.

4.3 Application of the techniques described in this guide will not guarantee that the scaffold will perform the functions for which it is being developed but they may help to identify the reasons for success or failure.

4.4 This guide does not suggest that all listed tests be conducted. The choice of technique will depend on the information that is required and on the scaffold's physical properties; for example, mercury porosimetry will not yield meaningful data if used to characterize soft materials that deform during the test and cannot be used for highly hydrated scaffolds.

4.5 **Table 1** provides guidance for users of this guide by providing a brief overview of the applicability of a range of different measurement techniques that can be used to physically characterize tissue scaffolds. This list of techniques is not definitive.

#### 5. Significance and Use

5.1 The ability to culture functional tissue to repair damaged or diseased tissues within the body offers a viable alternative to xenografts or heterografts. Using the patient's own cells to produce the new tissue offers significant benefits by limiting rejection by the immune system. Typically, cells harvested from the intended recipient are cultured *in vitro* using a temporary housing or scaffold. The microstructure of the scaffold, that is, its porosity, the mean size, and size distribution of pores and their interconnectivity is critical for cell migration, growth and proliferation (**Appendix X1**). Optimizing the design of tissue scaffolds is a complex task, given the range of available materials, different manufacturing routes, and processing conditions. All of these factors can, and will, affect the surface roughness, surface chemistry, and microstructure of the resultant scaffolds. Factors that may or may not be significant variables depend on the characteristics of a given cell type at any given time that is, changes in cell behavior due to the number of passages, mechanical stimulation, and culture conditions.

5.2 Tissue scaffolds are typically assessed using an overall value for scaffold porosity and a range of pore sizes, though the distribution of sizes is rarely quantified. Published mean pore sizes and distributions are usually obtained from electron microscopy images and quoted in the micron range. Tissue scaffolds are generally complex structures that are not easily interpreted in terms of pore shape and size, especially in three-dimensions. Therefore it is difficult to quantifiably assess

**TABLE 1 A Guide to the Physical Characterization of Tissue Scaffolds**

Generic Technique	Information Available	Section
Microscopy	Pore shape, size and size distribution, porosity.	6.1 (Electron microscopy) 6.2 (Optical microscopy) 6.3 (Confocal microscopy) 6.4 (Optical coherence tomography) 6.5 (Optical coherence microscopy)
Micro X-ray computer tomography	Pore shape, size and size distribution, porosity.	6.6
Magnetic Resonance Imaging	Pore shape, size and size distribution, porosity.	6.7
Measurement of density	Porosity, pore volume	7.2
Porosimetry	Porosity, total pore surface area, pore diameter, pore size distribution	7.3
Porometry	Median pore diameter (assuming cylindrical geometry), through-pore size distribution	7.4
Diffusion of markers	Permeability	8.2
NMR	Pore size and distribution	8.3

the batch-to-batch variance in microstructure or to enable a systematic investigation to be made of the role that the mean pore size and pore size distribution has on influencing cell behavior based solely on electron micrographs (Tomlins et al, (1)).<sup>5</sup>

5.2.1 Fig. 1 gives an indication of potential techniques that can be used to characterize porous tissue scaffolds and the length scale that they can measure. Clearly a range of techniques must be utilized if the scaffold is to be assessed in detail.

5.2.2 The classification of pore sizes given in Fig. 1 has yet to be standardized. Typical size ranges for pores are, according to their dimensions:

- 5.2.2.1 Micropores (~0.5 to 2 nm)
- 5.2.2.2 Mesopores (~2 to 50 nm)
- 5.2.2.3 Macropores (~50 to 2000 nm)
- 5.2.2.4 Capillaries (~2000 nm to 0.8 mm)
- 5.2.2.5 Macrocapillaries (>0.8 μm)

5.2.3 This list is by no means complete; the literature contains many other terms for defining pores (Perret et al (3)). It is recommended that the terms used by authors to describe pores are defined in order to avoid potential confusion.

5.2.4 All the techniques listed in Table 1 have their limitations for assessing complex porous structures. Fig. 2a and Fig. 2b show a through- and a blind-end pore respectively. Porometry measurements (see 7.4) are only sensitive to the narrowest point along a variable diameter through-pore and therefore can give a lower measure of the pore diameter than other investi-

gative techniques, such as SEM, which may sample at a different point along the pore. The physical basis of porometry depends on the passage of gas through the material. Therefore, the technique is not sensitive to blind-end or enclosed pores. Therefore, estimates of porosity based on porometry data will be different to those obtained from, for example, porosimetry (see 7.3), which is sensitive to both through- and blind-pores or density determinations that can also account for through-, blind-end, and enclosed pores. The significance of these differences will depend on factors such as the percentage of the different pore types and on their dimensions. Further research will enable improved guidance to be developed.

5.2.5 Polymer scaffolds range from being mechanically rigid to those that are soft hydrogels. The methods currently used to manufacture these structures include, but are not limited to:

5.2.5.1 Casting a polymer, dissolved in an organic solvent, over a water-soluble particulate porogen, followed by leaching.


5.2.5.2 Melt mixing of immiscible polymers followed by leaching of the water-soluble component.

5.2.5.3 Dissolution of supercritical carbon dioxide under pressure into an effectively molten polymer, a phenomenon attributed to the dramatic reduction in the glass transition temperature which occurs, followed by a reduction in pressure that leads to the formation of gas bubbles and solidification.

5.2.5.4 Controlled deposition of molten polymer to produce a well-defined three-dimensional lattice.

5.2.5.5 The manufacture of three-dimensional fibrous weaves, knits, or non-woven structures.

<sup>5</sup> The boldface numbers in parentheses refer to the list of references at the end of this standard.

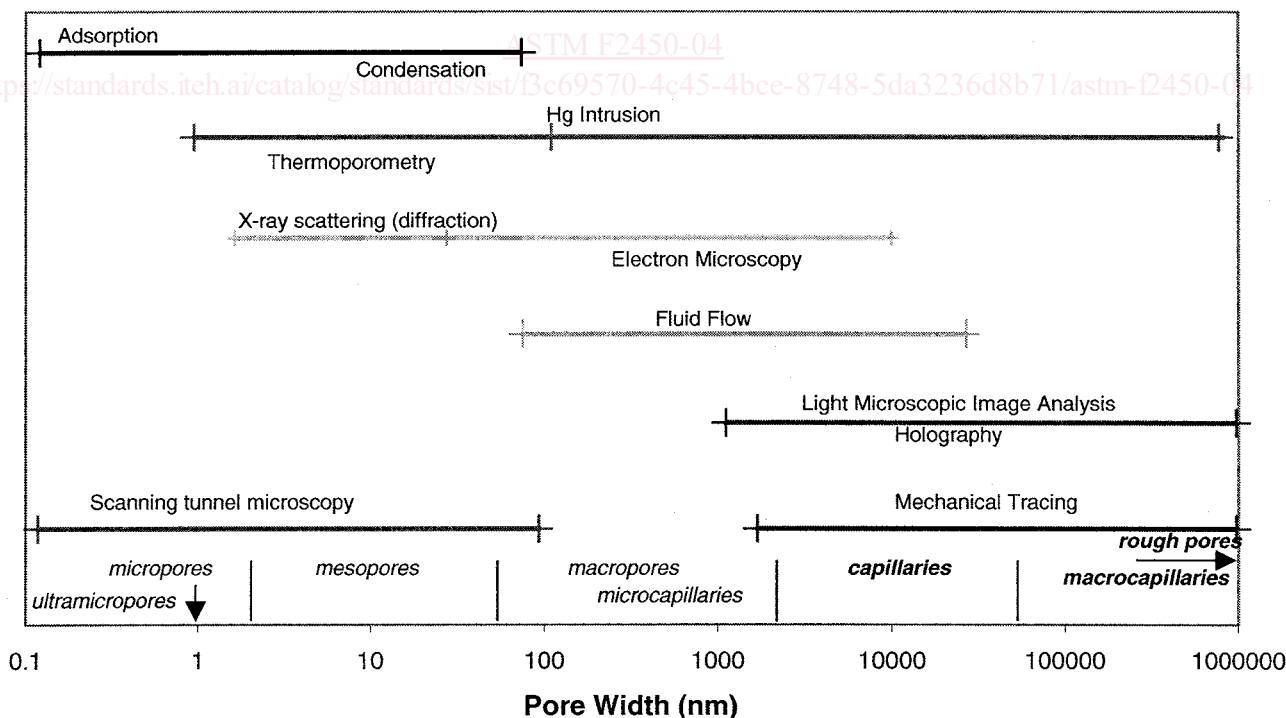

NOTE—(Redrawn from Meyer (2))  
**FIG. 1 A Range of Techniques is Required to Fully Characterize Porous Materials**

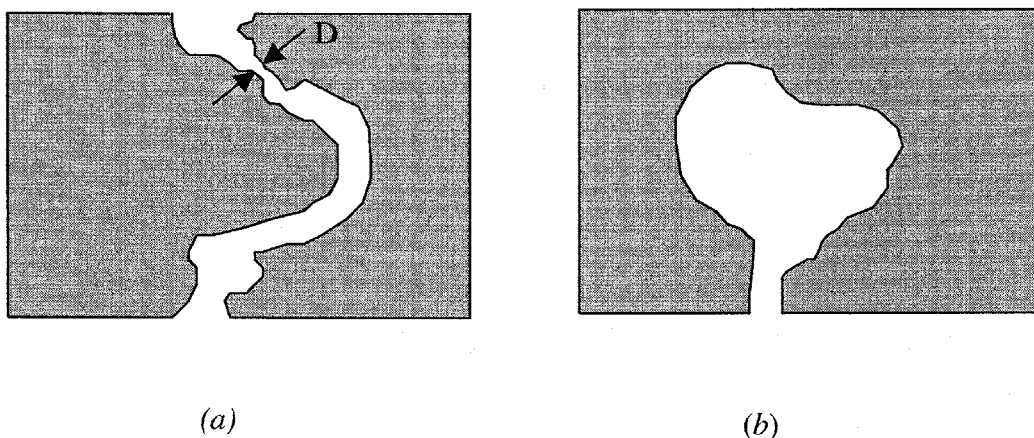


FIG. 2 A through-pore showing a variation of pore diameter,  $D$  (a); and an example of a blind-pore (b).

5.2.5.6 Chemical or ionic cross-linking of a polymeric matrix.

5.2.6 Considerations have been given to the limitations of these methods in [Appendix X1](#).

5.2.7 This guide focuses on the specific area of characterization of polymer-based porous scaffolds and is an extension of an earlier ASTM guide, Guide [F 2150](#).

## 6. Imaging

6.1 *Electron Microscopy*—Both transmission and scanning electron microscopy can be used to image intact or fractured surfaces or sections cut from tissue scaffolds. The resultant images can be interpreted using image analysis software packages to generate data concerning the shape of pores within the scaffold, their mean size, and distribution. Estimates of both permeability and tortuosity can be made from three-dimensional virtual images generated from transmission electron microscopic images of serially sectioned samples.

6.1.1 There is likely to be a high degree of uncertainty in the reliability of quantitative data derived from electron microscopic examination of soft or especially highly hydrated soft polymer-based scaffolds due to the presence of artifacts created during sample preparation. These problems may be overcome by using environmental scanning electron microscopy. Highly hydrated scaffolds need to be freeze-dried before examination under vacuum in a conventional scanning electron microscope. This process, if carried out in liquid nitrogen, usually results in a significant amount of ice damage due to the relatively slow cooling rates that are encountered due to the thin layer of insulating nitrogen gas that forms around the sample as it is frozen. Freezing samples in slush nitrogen can reduce ice damage by enabling faster cooling rates by apparently reducing the thickness of the insulating gas layer.

6.1.2 Polymer-based scaffolds often lack sufficient electron density to provide suitable levels of contrast; this can be overcome by staining using a high electron density material such as osmium tetroxide that has a high affinity for carbon-carbon double bonds.

6.1.3 Most polymer-based scaffolds can be mounted in epoxy resin using standard procedures and subsequently sectioned for serial examination in the transmission electron

microscope. This method is less appropriate for investigating hydrogels that can be gradually dehydrated using a series of alcohol solutions, following standardized procedures, before embedding. However, this procedure tends to reduce the size of the water-filled pores within the sample. The quantifiable pore size data subsequently obtained are of value if microstructural comparisons between different samples are required. Consequently, these data are likely to be inappropriate for characterizing the microstructure of samples per se due to the artifacts.

6.2 *Optical Microscopy*—Images of the surfaces of tissue scaffolds can be obtained using an optical microscope. This technique enables surface features to be studied with minimal preparation in a ‘natural’ state, that is, the specimen does not need to be stained or sectioned. This examination is simplified if the specimen is illuminated from above. For thin specimens or materials lacking in opacity, the resultant images may be difficult to interpret due to lack of clarity that is attributable to the underlying structure. In some cases, differential focus can be used to collect images at different depths within semi-transparent specimens, providing that there is sufficient contrast and detail in the images. These deep view images can be used to track the path of interconnected pores within the sample.

6.3 *Confocal Microscopy*—Substantial improvements in the quality of ‘optically’ sectioned samples can be made by either exploiting the fluorescent properties that the scaffold may have or by introducing a fluorophore into it. Confocal microscopy can capture well-resolved images at different depths because of its shallow depth of field and elimination of out-of-focus glare. A laser is usually used as a point light source in preference to a conventional lamp. Laser scanning confocal microscopy (LSCM) is used extensively in the biomedical arena. LSCM utilizes a variable sized pinhole to reject the image out-of-plane scatter i.e. glare and can be utilized in reflection or transmission modes. The size of the pinhole and the numerical aperture of the objective primarily determine the resolution in the thickness or axial direction. Generally, smaller holes give better resolution but at the expense of reduced intensity.

6.3.1 Some work has been reported on scaffold characterization using laser scanning confocal microscopy (LSCM) (Tjia and Moghe, (4), Birla and Matthew (5)). Using LSCM,