

SLOVENSKI STANDARD oSIST prEN ISO 12460-2:2025

01-januar-2025

Lesne plošče - Ugotavljanje sproščanja formaldehida - 2. del: Metoda z majhno komoro (ISO 12460-2:2024)

Wood-based panels - Determination of formaldehyde release - Part 2: Small-scale chamber method (ISO 12460-2:2024)

Holzwerkstoffe - Bestimmung der Formaldehydabgabe - Teil 2: Kleinprüfkammerverfahren (ISO 12460-2:2024)

Panneaux à base de bois - Détermination du dégagement de formaldéhyde - Partie 2: Méthode à la petite chambre (ISO 12460-2:2024)

Ta slovenski standard je istoveten z: prEN ISO 12460-2

ICS:

79.060.01 Lesne plošče na splošno Wood-based panels in

general

oSIST prEN ISO 12460-2:2025 en,fr,de

iTeh Standards (https://standards.iteh.ai) Document Preview

oSIST prEN ISO 12460-2:2025

https://standards.iteh.ai/catalog/standards/sist/a4e891ef-0976-4b57-b503-63939ffa11ab/osist-pren-iso-12460-2-2025



International Standard

ISO 12460-2

Wood-based panels — Determination of formaldehyde release —

Part 2:

Small-scale chamber method

Panneaux à base de bois — Détermination du dégagement de formaldéhyde —

Partie 2: Méthode à la petite chambre

oSIST prEN ISO 12460-2:2025

https://standards.iteh.ai/catalog/standards/sist/a4e891ef-0976-4b57-b503-63939ffa11ab/osist-pren-iso-12460-2-2025

Second edition 2024-02

iTeh Standards (https://standards.iteh.ai) Document Preview

oSIST prEN ISO 12460-2:2025

https://standards.iteh.ai/catalog/standards/sist/a4e891ef-0976-4b57-b503-63939ffa11ab/osist-pren-iso-12460-2-2025



COPYRIGHT PROTECTED DOCUMENT

© ISO 2024

All rights reserved. Unless otherwise specified, or required in the context of its implementation, no part of this publication may be reproduced or utilized otherwise in any form or by any means, electronic or mechanical, including photocopying, or posting on the internet or an intranet, without prior written permission. Permission can be requested from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office CP 401 • Ch. de Blandonnet 8 CH-1214 Vernier, Geneva Phone: +41 22 749 01 11 Email: copyright@iso.org Website: www.iso.org

Published in Switzerland

Scope	Cor	ntents	Page
2 Normative references	Fore	word	iv
3 Terms and definitions 1 4 General 2 5 Significance and use 2 6 Interferences 3 7 Apparatus 3 7.1 Test chamber 3 7.1.1 General 3 7.1.2 Air exchange rate 3 7.1.3 Air circulation 3 7.1.4 Make-up air 3 7.1.5 Equipment for monitoring of test conditions 3 7.1.6 Air sampling port 3 7.1.7 Sampling system 4 7.2.1 Sampling system for wet-chemistry analysis 4 7.2.1 Sampling system for wet-chemistry analysis 5 8.1 Handling 5 8.2 Test specimen 5 8.2 Test specimen 5 8.3 Conditioning 5 8.4 Sealing of test piece edges 6 9 Procedure 6 9.1 Test procedure for materials 7 9.2 Test procedure for materia	1	Scope	1
4 General 2 5 Significance and use 2 6 Interferences 3 7 Apparatus 3 7.1 Test chamber 3 7.1.1 General 3 7.1.2 Air exchange rate 3 7.1.3 Air circulation 3 7.1.4 Make-up air 3 7.1.5 Equipment for monitoring of test conditions 3 7.1.6 Air sampling system 4 7.2.1 Sampling system for wet-chemistry analysis 4 7.2.1 Sampling system for wet-chemistry analysis 4 7.2.1 Sampling system for wet-chemistry analysis 5 8. Sample material handling and specimen conditioning 5 8.1 Handling 5 8.2 Test specimen 5 8.2 Test specimen 5 8.2 Test specimen 6 8.1 Handling 5 8.2 Test specimen 6 9.1 Test procedure 6 9.1	2	Normative references	1
5 Significance and use 2 6 Interferences 3 7 Apparatus 3 7.1 Test chamber 3 7.1.1 General 3 7.1.2 Air exchange rate 3 7.1.3 Air circulation 3 7.1.4 Make-up air 3 7.1.5 Equipment for monitoring of test conditions 3 7.1.6 Air sampling system 4 7.2.1 Sampling system for wet-chemistry analysis 4 7.2.2 Direct sampling 5 8 Sample material handling and specimen conditioning 5 8.1 Handling 5 8.2 Test specimen 5 8.3 Conditioning 6 8.4 Sealing of test piece edges 6 9 Procedure 6 9.1 Test procedure for materials 7 9.2 Test procedure for materials 7 9.3 Air sampling 7	3	Terms and definitions	1
6 Interferences 3 7 Apparatus 3 7.1 Test chamber 3 7.1.1 General 3 7.1.2 Air exchange rate 3 7.1.3 Air circulation 3 7.1.4 Make-up air 3 7.1.5 Equipment for monitoring of test conditions 3 7.1.6 Air sampling port 3 7.2 Air sampling system 4 7.2.1 Sampling system for wet-chemistry analysis 4 7.2.2 Direct sampling 5 8 Sample material handling and specimen conditioning 5 8.1 Handling 5 8.2 Test specimen 5 8.3 Conditioning 6 8.4 Sealing of test piece edges 6 9 Procedure 6 9.1 Test procedure for materials 7 9.2 Test procedure for materials 7 9.3 Air sampling 7	4	General	2
6 Interferences 3 7 Apparatus 3 7.1 Test chamber 3 7.1.1 General 3 7.1.2 Air exchange rate 3 7.1.3 Air circulation 3 7.1.4 Make-up air 3 7.1.5 Equipment for monitoring of test conditions 3 7.1.6 Air sampling port 3 7.2 Air sampling system 4 7.2.1 Sampling system for wet-chemistry analysis 4 7.2.2 Direct sampling 5 8 Sample material handling and specimen conditioning 5 8.1 Handling 5 8.2 Test specimen 5 8.3 Conditioning 6 8.4 Sealing of test piece edges 6 9 Procedure 6 9.1 Test procedure for materials 7 9.2 Test procedure for materials 7 9.3 Air sampling 7	5	Significance and use	2
7 Apparatus 3 7.1 Test chamber 3 7.1.1 General 3 7.1.2 Air exchange rate 3 7.1.3 Air circulation 3 7.1.4 Make-up air 3 7.1.5 Equipment for monitoring of test conditions 3 7.1.6 Air sampling port 3 7.2 Air sampling system 4 7.2.1 Sampling system for wet-chemistry analysis 4 7.2.2 Direct sampling 5 8 Sample material handling and specimen conditioning 5 8.1 Handling 5 8.2 Test specimen 5 8.3 Conditioning 6 8.4 Sealing of test piece edges 6 9 Procedure 6 9.1 Test conditions 6 9.2 Test procedure for materials 7 9.3 Air sampling 7 9.4 Analysis of air samples 7 9.4.1 General 7 9.4.2 Equivale	6		
7.2 Air sampling system 7.2.1 Sampling system for wet-chemistry analysis 7.2.2 Direct sampling 5 8 Sample material handling and specimen conditioning 5.1 Handling 8.2 Test specimen 5.8.3 Conditioning 8.4 Sealing of test piece edges 6 9 Procedure 9.1 Test conditions 6 9.2 Test procedure for materials 7 9.3 Air sampling 7 9.4 Analysis of air samples 7 9.4.1 General 9.4.2 Equivalence of analytical procedures – General requirements 7 10 Calculation 11 Determination of air exchange rate 12 Test report 9 Annex A (informative) Test chambers 11 Annex B (informative) Conversion of formaldehyde test results 23 Annex C (normative) Analytical procedure of formaldehyde determination 27 Annex D (informative) Establishing of a correlation 56	7	7.1 Test chamber 7.1.1 General 7.1.2 Air exchange rate 7.1.3 Air circulation 7.1.4 Make-up air 7.1.5 Equipment for monitoring of test conditions	
8.1 Handling 5 8.2 Test specimen 5 8.3 Conditioning 6 8.4 Sealing of test piece edges 6 9 Procedure 6 9.1 Test conditions 6 9.2 Test procedure for materials 7 9.3 Air sampling 7 9.4 Analysis of air samples 7 9.4.1 General 7 9.4.2 Equivalence of analytical procedures – General requirements 7 10 Calculation 8 11 Determination of air exchange rate 9 12 Test report 9 Annex A (informative) Test chambers 11 Annex B (informative) Conversion of formaldehyde test results 23 Annex C (normative) Analytical procedure of formaldehyde determination 27 Annex D (informative) Establishing of a correlation 56		7.2 Air sampling system 7.2.1 Sampling system for wet-chemistry analysis	4 4
9 Procedure 69.1 Test conditions 69.2 Test procedure for materials 79.3 Air sampling 79.4 Analysis of air samples 79.4.1 General 79.4.2 Equivalence of analytical procedures – General requirements 779.4.2 Equivalence of analytical procedures – General requirements 770 Calculation 8811 Determination of air exchange rate 9912 Test report 9912 Test report 9913 Annex A (informative) Test chambers 110 Annex B (informative) Conversion of formaldehyde test results 230 Annex C (normative) Analytical procedure of formaldehyde determination 250 Annex D (informative) Establishing of a correlation 560	8	8.1 Handling	5 5
9.1 Test conditions 6 9.2 Test procedure for materials 7 9.3 Air sampling 7 9.4 Analysis of air samples 7 9.4.1 General 7 9.4.2 Equivalence of analytical procedures – General requirements 7 10 Calculation 8 11 Determination of air exchange rate 9 12 Test report 9 Annex A (informative) Test chambers 11 Annex B (informative) Conversion of formaldehyde test results 23 Annex C (normative) Analytical procedure of formaldehyde determination 27 Annex D (informative) Establishing of a correlation 56	9		
11Determination of air exchange rate912Test report9Annex A (informative) Test chambers11Annex B (informative) Conversion of formaldehyde test results23Annex C (normative) Analytical procedure of formaldehyde determination27Annex D (informative) Establishing of a correlation56		9.2 Test procedure for materials 9.3 Air sampling 9.4 Analysis of air samples 9.4.1 General	7 7 7 7 12460 27 7
12 Test report9Annex A (informative) Test chambers11Annex B (informative) Conversion of formaldehyde test results23Annex C (normative) Analytical procedure of formaldehyde determination27Annex D (informative) Establishing of a correlation56	10	Calculation	8
12 Test report9Annex A (informative) Test chambers11Annex B (informative) Conversion of formaldehyde test results23Annex C (normative) Analytical procedure of formaldehyde determination27Annex D (informative) Establishing of a correlation56	11	Determination of air exchange rate	9
Annex A (informative) Test chambers	12	_	
Annex B (informative)Conversion of formaldehyde test results23Annex C (normative)Analytical procedure of formaldehyde determination27Annex D (informative)Establishing of a correlation56	Anno	ex A (informative) Test chambers	11
Annex C (normative) Analytical procedure of formaldehyde determination 27 Annex D (informative) Establishing of a correlation 56			
Annex D (informative) Establishing of a correlation 56			
· · · · · · · · · · · · · · · · · · ·			

Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

The procedures used to develop this document and those intended for its further maintenance are described in the ISO/IEC Directives, Part 1. In particular, the different approval criteria needed for the different types of ISO documents should be noted. This document was drafted in accordance with the editorial rules of the ISO/IEC Directives, Part 2 (see www.iso.org/directives).

ISO draws attention to the possibility that the implementation of this document may involve the use of (a) patent(s). ISO takes no position concerning the evidence, validity or applicability of any claimed patent rights in respect thereof. As of the date of publication of this document, ISO had not received notice of (a) patent(s) which may be required to implement this document. However, implementers are cautioned that this may not represent the latest information, which may be obtained from the patent database available at www.iso.org/patents. ISO shall not be held responsible for identifying any or all such patent rights.

Any trade name used in this document is information given for the convenience of users and does not constitute an endorsement.

For an explanation of the voluntary nature of standards, the meaning of ISO specific terms and expressions related to conformity assessment, as well as information about ISO's adherence to the World Trade Organization (WTO) principles in the Technical Barriers to Trade (TBT), see www.iso.org/iso/foreword.html.

This document was prepared by Technical Committee ISO/TC 89, Wood-based panels.

This second edition cancels and replaces the first edition (ISO 12460-2:2018), which has been technically revised.

The main changes are as follows:

— implementation of different chamber sizes, analytical procedures, re-calculation of results to other standard parameters and establish a correlation between reference chamber method and the method used for factory production control.

A list of all parts in the ISO 12460 series can be found on the ISO website.

Any feedback or questions on this document should be directed to the user's national standards body. A complete listing of these bodies can be found at www.iso.org/members.html.

Wood-based panels — **Determination of formaldehyde** release —

Part 2:

Small-scale chamber method

1 Scope

This document specifies a procedure for a chamber test with different options of chamber sizes to measure the formaldehyde concentrations in air from wood products under defined test conditions of temperature, relative humidity, loading and air exchange rate.

Results obtained from this small-scale chamber test method can be used for quality control (factory production control – 'FPC') based on correlation established by reference chamber test methods according to ISO, EN or ASTM standards. The establishment of a correlation is described in Annex D.

2 Normative references

There are no normative references in this document.

3 Terms and definitions

For the purposes of this document, the following terms and definitions apply.

ISO and IEC maintain terminology databases for use in standardization at the following addresses:

- https://www.iso.org/obp 39ffa11ab/osist-pren-iso-12460-2-2025
 - IEC Electropedia: available at https://www.electropedia.org/

3.1

air exchange rate

N

quotient of air volume Q passing through the chamber per hour (m³/h) and the chamber volume (m³) expressed in (h⁻¹)

3.2

loading ratio

L

total exposed surface area, excluding panel edges, of the product being tested divided by the test chamber's volume (m^2/m^3)

3.3

make-up airflow

0

quantity of conditioned and filtered air fed into the chamber per unit time, in m³/h

3.4

Q/A ratio

ratio of air flow through the chamber (Q) to sample surface area (A), in m³/h m²

3.5

sample surface area

4

total area of all sample faces exposed in the chamber, in m²

3.6

measured concentration

 $\boldsymbol{\mathcal{C}}$

formaldehyde concentration (expressed in mg/m^3 and/or ppm rounded to 2 decimal places) under the defined environmental test parameters of this method. In the case of a establishing a correlation, it can be advantageous to round the results to 3 decimal places

3.7

chamber volume

V

interior volume of the test chamber, in m^3

4 General

This document specifies the measurement to quantify the amount of formaldehyde in an air sample from a test chamber accepted in a range of sizes (examples are described in $\underline{\text{Annex A}}$) and as determined by different analytical methods as specified in $\underline{\text{Annex C}}$. Other analytical procedures may be used to determine the quantity of formaldehyde in the air sample provided that such methods give equivalent results. The test report shall include full description of the analytical procedure employed.

The values stated in SI units are the standard values. Any values given in parentheses are for information only.

NOTE This document does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user to establish appropriate health and safety practices and determine the applicability of regulatory limitations prior to use.

5 Significance and use

- oSIST prEN ISO 12460-2:2025
- **5.1** Various national and regional regulations on formaldehyde emission levels have been established for wood panels. This international test method was adapted from chamber test methods specified in different EN, ISO and ASTM standards. This test method provides a means of testing smaller samples and reduces the time required for testing compared with a reference chamber method.
- **5.2** Formaldehyde concentration levels obtained by this small-scale chamber method can differ from expected in full-scale indoor environments. Variations in product loading, temperature, relative humidity, and air exchange will affect formaldehyde emission rates and thus likely indoor air formaldehyde concentrations.
- **5.3** This test method is applicable for the use of a chambers from $0.004 \, \text{m}^3$ to $1 \, \text{m}^3$ in volume (see examples in Annex A) to evaluate the formaldehyde concentration in air using the following controlled conditions which are defined within this standard method:
- a) conditioning of specimens prior to testing;
- b) exposed surface area of the specimens in the test chamber;
- c) edge sealing;
- d) test chamber temperature and relative humidity;
- e) the *Q/A* ratio;
- f) air exchange rate within the chamber.

6 Interferences

Interferences of the used analytical methods should be determined by reference to other applicable standard test methods.

7 Apparatus

7.1 Test chamber

7.1.1 General

The interior volume of the small chamber shall be between 0,004 m³ and 1 m³ (examples see Annex A). The interior of the test chamber shall be free of refrigeration coils that condense water and items such as humidifiers with water reservoirs since water has the potential for collecting formaldehyde and thus influencing test results. The interior surfaces of the small chamber, including any sample support system, shall be a non-absorbent material. For example, stainless steel, aluminium, and polytetrafluoroethylene (PTFE) have been found appropriate as chamber lining materials. All joints except for doors used for loading and unloading specimens should be sealed. Doors shall be self-sealing.

7.1.2 Air exchange rate

The clean and conditioned air supply to the chamber shall either be monitored continuously or frequently during testing.

The air exchange rate shall not vary by more than ±5 %.

The effective air exchange shall be regularly checked, by using e.g. either a calibrated gas meter, or the tracer gas procedure (see <u>Clause 11</u>).

7.1.3 Air circulation

Low speed mixing fans or multi-port inlet and outlet diffusers are two techniques that have been used successfully to ensure mixing of the chamber air over all sample surfaces. If the air exchange is higher than 10/h mixing fans are not necessary.

7.1.4 Make-up air

The make-up air should come from a filtered dust-free environment and contain no more than 0,006 mg/m³ of formaldehyde. Make-up air for the chamber shall pass through a calibrated air flow measuring device. If the make-up air is taken from a conditioning environment it should contain no more than 0,012 mg/m³.

7.1.5 Equipment for monitoring of test conditions

Measuring equipment and recording facilities capable of continuous or frequent monitoring of the specified test conditions with an error limit as follows:

Temperature: 0,1 K;

Relative humidity: 2 %;

Air exchange rate: 0,03/h.

7.1.6 Air sampling port

The exhaust flow (that is, chamber outlet) is normally used as the sampling point, although separate sampling ports in the chamber can be used. The sampling system shall be constructed of a material to minimize absorption (for example, glass or stainless steel), and the system should be maintained at the same temperature as the test chambers.

7.2 Air sampling system

7.2.1 Sampling system for wet-chemistry analysis

7.2.1.1 General


Figure 1 shows the principle of a sampling system for the determination of the formaldehyde concentration in the chamber air. The sampling tube shall be placed either in the air outlet, or inside the chamber, close to the air outlet.

Other sampling systems may be used based on the requirements of the analytical procedure used.

The numbers in brackets refer to the numbers in Figure 1:

7.2.1.2 sampling tube (1).

- **7.2.1.3 one or two 30 ml up to 100 ml gas washing bottle(s)** (2), with inserts like impinger or Muenke or frits, containing between 8 ml to 40 ml absorber solution, or DNPH cartridges for absorption and subsequent determination of formaldehyde.
- 7.2.1.4 silica absorber for drying the air (3).
- 7.2.1.5 gas flow valve (4).
- 7.2.1.6 gas sampling pump (5).
- 7.2.1.7 gas flow meter (6). ttps://standards.iteh.ai
- 7.2.1.8 gas meter (including a thermometer) for measuring the volume of air (7).

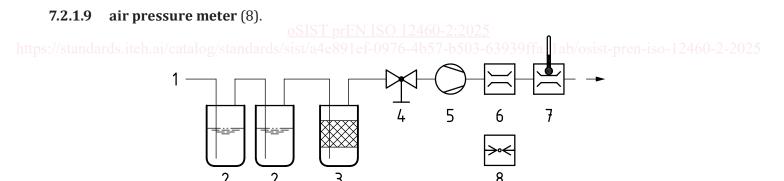

Key

- 1 sampling tube
- 2 gas washing bottle
- 3 silica absorber
- 4 gas flow valve

- 5 gas sampling pump
- 6 gas flow meter
- 7 gas meter with thermometer
- 8 air pressure meter

Figure 1 — Example of a sampling system for the determination of formaldehyde concentration in air

7.2.2 Direct sampling

Formaldehyde in the chamber air is determined by direct sampling analysis (e.g. optical or chemical sensors see <u>Annex C</u>). The measuring cell has to be connected with non-absorbent formaldehyde tubes. The length of tube can have an impact on results and has to be considered.

8 Sample material handling and specimen conditioning

8.1 Handling

Materials selected for testing shall e.g. be wrapped in polyethylene plastic having a minimum thickness of 0,15 mm (0,006 in) until sample conditioning is initiated. When testing wood products that are not newly manufactured such as after original application, installation or use, the method of packaging and shipping the products for testing shall be described e.g. in the quality manual handbook.

8.2 Test specimen

Chambers are operated at a fixed sample size by varying the make-up airflow (Q), or at fixed Q by varying the product sample size by product type. Either mode is acceptable as long as the appropriate Q/A ratios for the product type are met (see <u>Table 1</u> and <u>Table 2</u>). The minimum requirement of Q/A ratio is 1 m³/h m² with a range of ± 2 %

Products can have different surface coverings on front and back side. Therefore, significantly different formaldehyde release characteristics for each surface can occur. In those cases, panels may be tested back-to-back or face-to-face with edges taped together depending on which surface is to be tested.

Table 1 — Examples of calculated Q/A ratio referring to chamber size used to consider the dimensions specified in the standards (here: EN 717-1[8], DMC[12], ISO 12460-3[3])

	Type of WBPa	Flow rate		Q	Air	Sample size ^b			Sample	Q/A
Type of chamber		adjusted		uiiic	ex- change	height	width	Number of sam-	surface area A	ratio
//standards.		[l/min]	[l/h]	[m ³ /h]	rate <i>N</i> 6	0-2:2025 7[mm] ₃ -	[mm]	ples 11ab/osis	[m²] I-pren-is	[m ³ /h m ²]
1 m ³	PB/PLY	16,67	1 000,2	1,000 2	1	500	500	2	1,000 0	1,000
1 m ³	MDF	16,67	1 000,2	1,000 2	1	500	500	2	1,000 0	1,000
0,225 m ³	PB/PLY	3,75	225,0	0,225 0	1	200	280	2	0,224 0	1,004
0,225 m ³	MDF	3,75	225,0	0,225 0	1	200	280	2	0,224 0	1,004
0,045 m ³	PB/PLY	8,91	534,6	0,534 6	12,15	200	381	3	0,457 2	1,169
0,045 m ³	MDF	14,51	870,6	0,870 6	19,79	200	381	3	0,457 2	1,904
0,004 m ³	PB/PLY	1,00	60,0	0,060 0	15	400	50	1	0,040 0	1,500
0,004 m ³	MDF	1,00	60,0	0,060 0	15	400	50	1	0,040 0	1,500

^a WBP: wood-based panel; PB: particleboard, MDF: medium density fibreboard; PLY: plywood.

b Tolerance of sample size for samples used for chamber volume of 1 m³, 0,225 m³ and 0,045 m³: ±2 mm; 0,004 m³: ±1 mm

Table 2 — Examples of calculated Q/A ratio referring to chamber size considering the requirements for different types of wood-based panels (here: ASTM D 6007[11])

	Type of WBPa	Flow rate		Q	Air	Sample size ^b			Sample	Q/A
Type of chamber		adjusted			ex- change	height	width	Num- ber	surface area A	ratio
Chamber		[l/min]	[l/h]	[m ³ /h]	rate N [h ⁻¹]	[mm]	[mm]	of sam- ples	[m ²]	$[m^3/h m^2]$
1 m ³	PB/PLY	8,33	499,8	0,4998	0,5	143	500	3	0,429 0	1,165
1 m ³	MDF	8,33	499,8	0,4998	0,5	85	500	3	0,255 0	1,960
0,225 m ³	PB/PLY	1,87	112,2	0,112 2	0,5	80	200	3	0,096 0	1,169
$0,225 \text{ m}^3$	MDF	1,87	112,2	0,112 2	0,5	49	200	3	0,0588	1,908

WBP: wood-based panel; PB: particleboard, MDF: medium density fibreboard; PLY: plywood.

NOTE <u>Table 1</u> and <u>Table 2</u> show only examples for some wood-based panel products. Any other wood-based panel or other formaldehyde emitting products (coated or uncoated) can be tested as well, e.g. OSB (Oriented Strand Boards), solid wood panels, cement bonded particleboards, wet process fiber boards, LVL, etc.

8.3 Conditioning

The procedure for pre-conditioning of samples prior to testing shall be specified and standardized on an individual basis i.e. at a factory or laboratory. The conditioning and testing parameters shall be specified and kept consistent.

An established procedure for sample conditioning is for example as described:

Condition test specimens with a minimum distance of 0,15 m (6 inch) between each specimen for minimum of 2 h \pm 15 min at the conditions of (24 \pm 3) °C [(75 \pm 5) °F] and (50 \pm 5) % relative humidity. The formaldehyde concentration in the air within 0,3 m (12 inch) of where panels are conditioned shall not be more than the lowest emission limit of the product(s) to be tested during the conditioning period. Alternative conditioning intervals can give better correlation to larger chamber test methods, e.g. 7 days \pm 3 h conditioning or 15 days conditioning.

8.4 Sealing of test piece edges

Edges shall be sealed completely air-tight by using self-adhesive aluminium tape or wax.

9 Procedure

9.1 Test conditions

The following conditions shall be maintained in the chamber throughout the test:

- Temperature (25 ± 1) °C $[(77 \pm 2)$ °F];
- Relative humidity (50 ± 4) %;
- Q/A ratio minimum of 1 m³/h m² ± 2 %.

The conditions can be reached by storing the chamber in a well-conditioned surrounding or by using a self-climatisation system.

b tolerance of sample size for samples used for chamber volume of 1 m³, 0,225 m³ and 0,045 m³: ±2 mm; 0,004 m³: ±1 mm

9.2 Test procedure for materials

9.2.1 General

Purge the chamber by running empty or with the use of filters designed to reduce the formaldehyde background concentration in air, or both. The formaldehyde background concentration in air of the empty operating chamber should not exceed 0.006 mg/m^3 . Clean chamber surfaces with water or suitable solvent if formaldehyde background concentrations approach 0.006 mg/m^3 . If the make-up air is taken from a conditioning environment it should contain no more than 0.012 mg/m^3 .

- **9.2.2** Locate the specimens in the chamber so that the conditioned air stream circulates over all panel surfaces.
- **9.2.3** Operate the chamber at (25 ± 1) °C [(77 ± 2) °F] and (50 ± 4) % relative humidity. Record the temperature, relative humidity, and barometric pressure during the testing period. Conduct the chamber test at the specified Q/A ratio and record this ratio in the report.
- **9.2.4** After placing the specimens in the chamber, allow time for no less than two full air changes before beginning the air sampling.

9.3 Air sampling

The sampling shall be carried out as specified in <u>Annex C</u>. The length of sampling tube can have an impact on results and shall be considered.

9.4 Analysis of air samples

9.4.1 General

Analytical methods for formaldehyde quantification are provided in <u>Annex C</u>. Of the analytical methods provided, the wet-chemistry methods (<u>C.1</u>: Acetylacetone method, <u>C.2</u>: Chromotropic acid method and <u>C.3</u>: DNPH method) are considered reference analytical methods and are the methods that the direct analytical methods (e.g. <u>C.4</u>: Laser Absorption Spectroscopy (LAS), <u>C.5</u>: Chemical sensor) are measured against and have to show equivalent results.

9.4.2 Equivalence of analytical procedures - General requirements

9.4.2.1 General

Where an analytical method other than the wet-chemistry reference analytical methods (C.1 to C.3) is used to determine formaldehyde in the air, equivalence to at least one of this reference methods shall be shown.

9.4.2.2 Demonstration of equivalence - Device manufacturer

Prior to use in a factory's laboratory, the device manufacturer shall carry out at least 15 tests using samples of different types of wood-based panels with varying composition (e.g. glue composition, additives, raw material) per product type (e.g. MDF, particleboard, plywood, OSB) evenly distributed in a wide emission range (at least 0,012 mg/m³ up to 0,25 mg/m³). A linear regression shall be calculated and equivalence is shown if the statistical evaluation complies with the requirements of a slope with $1 \pm 0,05$, $R^2 \ge 0,98$ and r value $\ge 0,99$.

9.4.2.3 Demonstration of equivalence - Factory laboratory

The factory's laboratory shall validate the device manufacturer's data for the specific product(s) intended for FPC testing. To demonstrate equivalence at least five samples of the type of wood-based material respectively products are tested by using one of the reference wet-chemistry methods and the test procedure to be

evaluated. Equivalence is demonstrated if the absolute mean deviation from the wet-chemistry reference method is $\leq 10 \%$.

10 Calculation

10.1 Convert the volume of air sampled to the volume of air at standard conditions by Formula (1):

$$V_{\rm S} = \frac{V \times P \times 298}{101 \times (T + 273)} \tag{1}$$

where

 V_{ς} is the volume of air at standard conditions (101 kPa and 298 K), in cubic metres;

Vis the volume of air sampled, in cubic metres;

Р is the barometric pressure, in kPa;

Tis the temperature of sample air, in °C.

10.2 Calculate total milligrams of formaldehyde collected in each washing bottle by Formula (2):

$$C_{t} = C_{a} \times F_{a} \tag{2}$$

where

 C_{t} is the total mass of formaldehyde in the sample, in milligrams;

is the total quantity of formaldehyde in the sample aliquots taken from the washing bottle (as de- $C_{\rm a}$ termined from the calibration curve in $\underline{C.1}$ to $\underline{C.3}$), in milligrams;

 F_{a} is the aliquot factor:

https://sta
$$F_a = \frac{V_{s,sol}}{V_a}$$
h.ai/catalog/standards/sist/a4e891ef-0976-4b57-b503-63939ffa11ab/osist-pren-iso-1(3)0-2-2025

where

 $V_{\rm s,sol}$ is the sampling solution volume, in ml;

is the. aliquot used, in ml.

10.3 Calculate the concentration of formaldehyde in air in the small chamber as follows:

$$C_{\rm s} = C_{\rm t} / V_{\rm S} \tag{4}$$

where

 C_{s} is formaldehyde concentration in air in mg/m³;

 V_{ς} is the volume of air at standard conditions (101 kPa and 298 K), in cubic metres;

Round calculated formaldehyde concentrations to the nearest 0,01 mg/m³.

NOTE At 25 °C (77°F) and 1 013 hPa the following relationship exists for formaldehyde:

 $1,23 \text{ mg/m}^3 = 1 \text{ ppm (parts per million)};$