



Designation: **D5822—08 D5822 – 13**

Standard Test Method for Determining Seam Strength in Inflatable Restraint Cushions¹

This standard is issued under the fixed designation D5822; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ϵ) indicates an editorial change since the last revision or reapproval.

1. Scope

1.1 This test method covers the measurement of seam efficiency and the maximum seam strength in inflatable restraint cushions composed of woven fabrics when a force is applied perpendicular to the seam, using a grab test. For evaluating sewing thread, refer to Test Method **D204**.

1.2 This test method is restricted to seams that are either obtained from an inflatable restraint cushion, cushion or prepared off-line, specifically for testing, using fabric blanks, not obtained from a previously sewn cushion assembly. Seams may include but are not limited to sewn, OPW, glued, sealed and sewn, or fused (chemically or thermally). This test method can be used for either lot testing of production cushions, or for research and development purposes.

1.3 This test method is used when the measurement of a resistance to a specified force, a breaking force, a minimum elongation, or a combination thereof are required to determine the seam strength, or seam integrity of a particular fabric for inflatable restraint use.

1.4 Procedures and apparatus other than those stated in this standard may be used by agreement between purchaser and supplier with the specific deviations from the standard acknowledged in the report.

1.5 The values stated in either SI units or inch-pound units are to be regarded separately as standard. The values stated in each system are not exact equivalents; therefore, each system must be used independently of the other.

1.6 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.*

2. Referenced Documents

2.1 *ASTM Standards:*²

D123 Terminology Relating to Textiles

D204 Test Methods for Sewing Threads

D1776 Practice for Conditioning and Testing Textiles

D6799 Terminology Relating to Inflatable Restraints

3. Terminology

3.1 For all terminology relating to D13.20, Inflatable restraints, refer to Terminology **D6799**.

3.1.1 The following terms are relevant to this standard: seam efficiency, seam failure, seam strength.

3.2 For all other terms related to textiles, see Terminology **D123**.

4. Summary of Test Method

4.1 Specimens with and without seam assemblies either taken from inflatable restraint cushions or made off-line using fabric blanks, specifically for testing, are destructively tested in a tensile testing machine under laboratory conditions to determine seam strength and seam efficiency. ~~efficiency and nature of the failure mode.~~

¹ This test method is under the jurisdiction of ASTM Committee **D13** on Textiles and is the direct responsibility of Subcommittee **D13.20** on Inflatable Restraints. Current edition approved July 1, 2008/Jan. 1, 2013. Published July 2008/February 2013. Originally approved in 1995. Last previous edition approved in 2007/2008 as **D5822—08/D5822 – 08, (2007)**; DOI: 10.1520/D5822-08;10.1520/D5822-13.

² For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

5. Significance and Use

5.1 Seam strength testing is used for design validation and for lot acceptance.

5.2 This test method constitutes the conditions, procedures, and equipment by which ~~inflatable restraints~~ either seams taken from inflatable restraint cushions, or seam types that can potentially be used for inflatable restraint cushions are tested for ~~seam strength and seam efficiency~~ strength, seam efficiency, and failure mode. It is intended to be used as a guideline in establishing a written part specification or print. The specification or agreement of purchaser and supplier may deviate from the procedures described herein when (based on experience) considerations of equipment, cushion design, or other factors dictate otherwise.

5.3 In cases of dispute arising from differences in reported test results when using this test method for acceptance testing of commercial shipments, the purchaser and the supplier should perform comparative tests to determine if there is a statistical bias between their laboratories. Competent statistical assistance is recommended for the investigation of bias. As a minimum, the two parties should take a group of test specimens from the same lot of fabric to be evaluated, which utilize a like seam assembly (or standard seam assembly) to achieve seam interaction. The test specimens should then be randomly assigned in equal numbers to each laboratory for testing. If a bias is found, either its cause must be determined and corrected, or the purchaser and supplier must agree to interpret future test results in light of the known bias.

5.4 Test Method D5822 is a reliable test method but procedures which may require special attention are identified in the precision and bias section of this test method.

6. Apparatus

6.1 *Tensile Testing Machine*, of the CRE, CRL or CRT type conforming to Specification D76, with respect to force indication, working range, capacity, and elongation indicator, and designed for operation at a speed of 300 ± 10 mm/min (12 ± 0.5 in./min); or, a variable speed drive, change gears, or interchangeable weights as required to obtain a 20 ± 3 -s time-to-break (see 12.4). The constant-rate-of-extension type of tensile testing machine is preferred in this test method.

6.2 *Clamp and Jaw Faces*, adjustable clamps compatible with tensile testing machine, the jaws of which have smooth, flat, metallic gripping surfaces parallel to each other.

6.2.1 Each clamp shall have a front (or top) jaw face measuring 25 ± 1 mm (1.0 ± 0.02 in.) perpendicular to the direction of the application of the force, and not less than 25 nor more than 50 mm (1.0 nor more than 2.0 in.) parallel to the direction of the application of the force. The back, or bottom, jaw face of each clamp shall be at least as large as its mate. Use of a larger face for the second jaw reduces the problem of front and back jaw misalignment.

NOTE 1—Front (or top) faces measuring 25 by 50-mm (1.0 by 2.0-in.) will not necessarily give the same value as 25 by 25-mm (1.0 by 1.0-in.) faces. For many materials, the former are preferable because of the larger gripping area which tends to reduce slippage. While both sizes of gripping surface are permitted, the face sizes used must be the same for all samples in the test and must be recorded in the report.

6.2.2 At least one clamp should be supported by a free swivel or universal joint to allow the clamp to rotate in the plane of the fabric.

6.3 For inflatable restraints, all test equipment used in accordance with this test method shall be certified for calibration annually by an independent agency or equipment manufacturer whose results are traceable to the National Institute of Science and Technology (NIST) or other national standards laboratory. The test parameters of the equipment shall be tested within the operating ranges covered in the cushion specification or equivalent document.

7. Sampling

7.1 Seam strength testing is a destructive test and therefore necessitates sampling procedures if used in conjunction with lot acceptance.

7.2 For acceptance testing, the lot size is the quantity of cushions produced in one day.

7.3 *Lot Sample*—For acceptance testing, take at random the number of cushions directed in an applicable cushion specification or other agreement between purchaser and supplier. Consider the cushions to be the primary sampling units.

7.4 *Test Specimens*—Select portions of sampled cushions containing seam assemblies as directed in an applicable cushion specification or as agreed upon by purchaser and supplier. If seam efficiency testing is to be done, select a portion of unseamed fabric adjacent to the sampled area, from which the seamed specimen was taken. Wherever possible, such specimens should contain the same yarns as the seam assemblies that are to be placed in the clamps oriented parallel to the traverse direction of test.

NOTE 2—Specimens are usually specified to be taken from a cushion at a location on the cushion seam(s) where the greatest stresses are anticipated. In seams involving woven fabric, this is usually where the warp or filling yarns are parallel to the seam. Cushion design may indicate other stress points of concern.

NOTE 3—Use caution in selecting specimens from areas of the cushion where the seams exhibit sharp radius turns. During seam strength testing, these areas will exhibit uneven point loading at the edges of the test specimen.

NOTE 4—Unless otherwise specified for driver-side cushions, select specimens taken from the perimeter seam at the 0 rad (0°), 0.79 rad (45°), and 1.57 rad (90°) positions, relative to the warp direction of the fabric in the front panel.

7.4.1 Cut each specimen 100 ± 1 mm (4 ± 0.05 in.) wide by at least 150 mm (6 in.) long (Note 5) with the long dimension parallel to the direction of testing and force application. For seamed specimens, the seam shall be centrally located perpendicular to the application of force.

NOTE 5—The length of the specimen depends on the type of clamps being used. The specimen should be long enough to extend through the clamps and project at least 10 mm (0.5 in.) at each end. The specimen length may be calculated using Eq 1 or Eq 2:

$$\text{Specimen length, mm} = C + 2W \quad (1)$$

$$\text{Specimen length, in.} = K + 2W \quad (2)$$

where:

C = 95 mm (constant based on a gage length of 75 plus 20 mm for projections beyond the clamp),

K = 4 in. (constant based on a gage length of 3 plus 1 in. for projections beyond the clamps), and

W = jaw face width in direction of force, mm (in.).

7.4.2 To aid in aligning the specimens in the clamps of the tensile testing machine, draw vertical lines parallel to the long direction (and along a yarn of woven fabric) located 37 ± 1 mm (1.5 ± 0.02 in.) in from the edge of both sides of the specimen. The parallel lines serve as a guide to ensure that the same yarns in the direction of test are gripped in both clamps.

8. Conditioning

8.1 Conditioning of specimens for seam strength testing shall be at the standard atmosphere for testing textiles for at least 4 h prior to test, in accordance with Practice D1776.

9. Procedure

9.1 Select and condition specimens in accordance with Sections 7 and 8 of this test method.

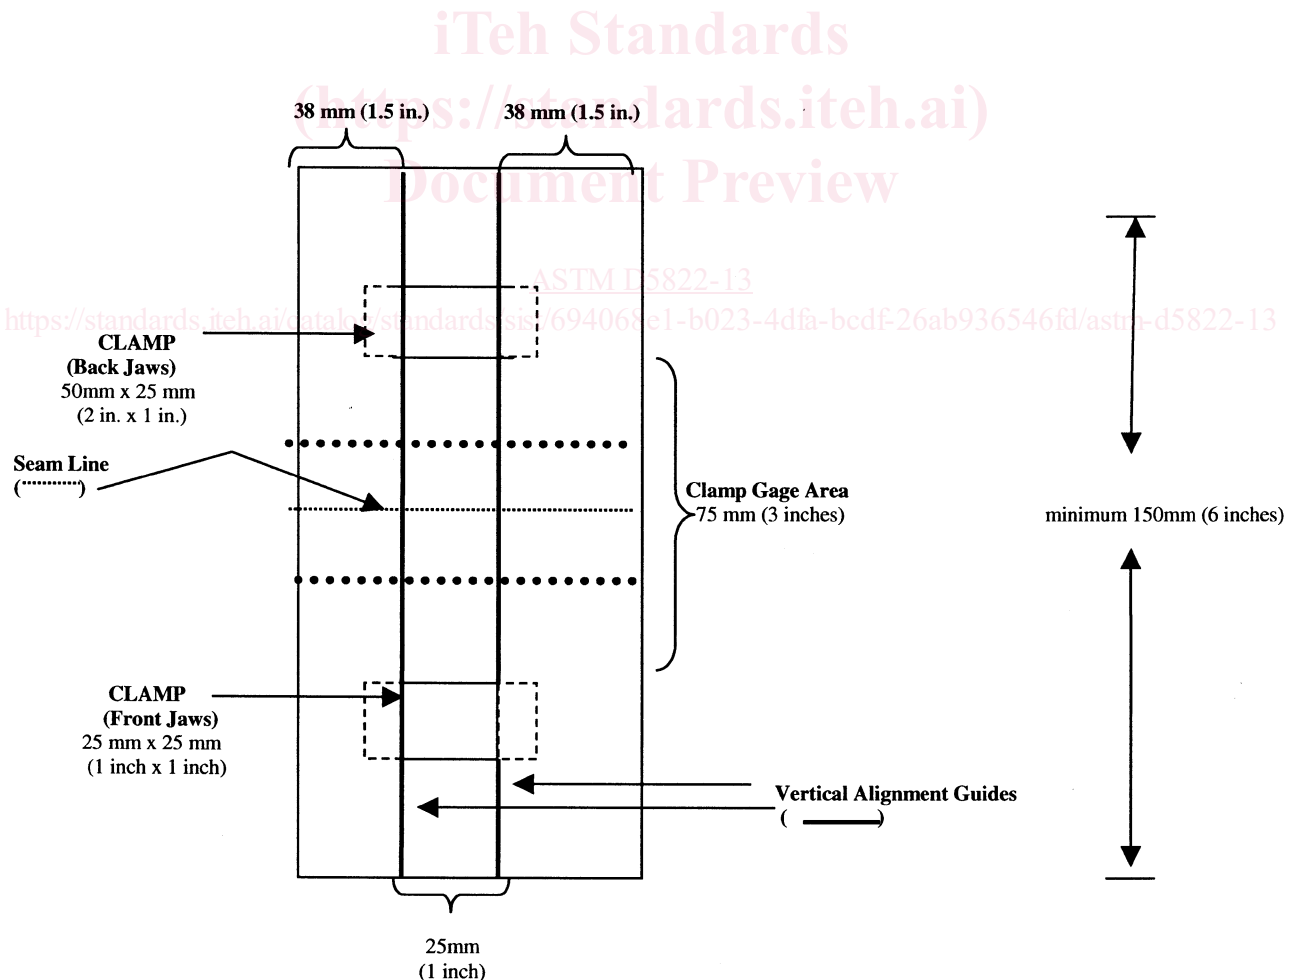


FIG. 1 Specimen Placement in Clamps (Clamp Gage Area and Vertical Alignment Guides)