



Designation: C716 – 06 (Reapproved 2015)

# Standard Specification for Installing Lock-Strip Gaskets and Infill Glazing Materials<sup>1</sup>

This standard is issued under the fixed designation C716; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon ( $\epsilon$ ) indicates an editorial change since the last revision or reapproval.

## 1. Scope

1.1 This specification covers installation procedures for lock-strip gaskets that comply with Specification C542 and for infill glazing materials in lockstrip gasket glazing applications used in building walls which are not more than 15° from a vertical plane. The prime performance considerations are weathertightness against air and water infiltration, and structural integrity under wind loads.

1.2 The values stated in SI units are to be regarded as standard. The values given in parentheses are provided for information only.

1.3 The committee with jurisdiction over this standard is not aware of any comparable standards published by other organizations.

## 2. Referenced Documents

2.1 *ASTM Standards*:<sup>2</sup>

C542 Specification for Lock-Strip Gaskets

C717 Terminology of Building Seals and Sealants

C963 Specification for Packaging, Identification, Shipment, and Storage of Lock-Strip Gaskets

C964 Guide for Lock-Strip Gasket Glazing

## 3. Significance and Use

3.1 This specification can be referred to in contract documents as a method and workmanship standard for the installation of lock-strip gasket glazing systems. See also related standards (Specifications C542 and C963, Guide C964, and Terminology C717).

## 4. Installation

4.1 *Inspection of Components*—Before installing gaskets, the installer shall check the mounting frames to see that they

are within specified dimensional tolerances and not out-of-square or plane, and check all gaskets for type, dimensions, and defects such as misalignment at molded corners and damaged lips. Installation shall not proceed until corrections have been made.

4.2 *Environmental Conditions*—Maximum efficiency and sealing capability of gaskets is achieved in a clean, dry, warm environment, with the gasket kept resilient during the entire installation process. During cold weather the use of temporary enclosures around the units to be glazed or paneled will facilitate temperature control and also aid in keeping open gasket channels clean and dry.

4.3 *Preparation and Conditioning of Gaskets*—Lock-strip gaskets require conditioning prior to installation in order to restore maximum resiliency and remove deformations after prolonged storage in a coiled or stressed position. Gaskets shall be unpacked from their containers and conditioned for 24 h in a temperature not lower than 21.1°C (70°F) by being placed flat or hung on racks to permit recovery of their original shapes. Racks shall be free of rough surfaces, projections, sharp edges, and other conditions that could damage the gaskets. When the ambient temperature is 10°C (50°F) or below and a heated space is not available, gaskets shall be heated by other means to remove deformations and provide a high degree of flexibility and resiliency. This may be done by warming them in hot water or heated containers. Gaskets shall not be heated by being draped over heated units or placed in direct contact with a flame or fired heating device. The installation of glass, panel, and lock-strip shall be completed while the gasket is still warm and pliable and with the gasket channels clean and dry.

4.4 *Use of Tools*—To minimize the possibility of damage, sharp or pointed tools or implements such as screwdrivers or putty knives shall not be used on lock-strip gaskets. Suitable gasket installation tools, such as nonmetallic spatulas and engineered lock-strip insertion devices, are available from the gasket manufacturer.

4.5 *Use of Lubricants*—If necessary a lubricant may be applied to the contact surfaces of the gasket to ease the installation and help prevent damage to the gasket, glass, or panel. The lubricant shall be nonstaining, nontoxic, noncorrosive, chemically stable, compatible with all contact components, easily removable from exposed surfaces by dry

<sup>1</sup> This specification is under the jurisdiction of ASTM Committee C24 on Building Seals and Sealants and is the direct responsibility of Subcommittee C24.73 on Compression Seal and Lock Strip Gaskets.

Current edition approved Dec. 1, 2015. Published December 2015. Originally approved in 1973. Last previous edition approved in 2011 as C716 – 06 (2011). DOI: 10.1520/C0716-06R15.

<sup>2</sup> For referenced ASTM standards, visit the ASTM website, [www.astm.org](http://www.astm.org), or contact ASTM Customer Service at [service@astm.org](mailto:service@astm.org). For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

wiping or with water, and acceptable to the manufacturer of the supporting frame, panel, and gasket.

4.6 *Use of Supplementary Wet Sealants*—The use of supplementary wet sealants in conjunction with lock-strip gasket installations is only required under certain conditions. Such a condition would occur when the outer lip of the gasket extends over a butt joint in the supporting frame. The void formed between the gasket and frame shall be sealed at the time of installation with a wet sealant. However, the sealant may be omitted if the system is designed to drain any water that enters to the exterior, and the omission of a wet sealant is agreeable to the purchaser and seller. Another condition would be at field butt joints in gaskets. Such joints require the use of a sealant installed in, rather than on top of, the joint at the time of the gasket installation. The wet sealant used, as well as the sealant manufacturer's requirements for cleaning and priming the surfaces to be sealed, shall be compatible with the components in contact with it and acceptable to the manufacturers of the components. The use of wet sealants to remedy a defective or damaged gasket or improperly fabricated supporting frame shall not be permitted, unless agreeable to the purchaser and seller.

4.7 *Installation of Single-Opening Gasket Systems:*

4.7.1 *H-Type Gasket*—Install the upper gasket corners first, and then install the lower gasket corners onto the supporting frame. To avoid slippage, engage both horizontal and vertical members for about 304.8 mm (1 ft) in both directions from the corners, and work the gasket until the web is snug against head and jambs and the corners are square. Then work the remainder of the gasket onto the supporting frame by starting from each corner and working towards the center of each side, making sure the gasket web is firmly seated against the frame and that the sealing lips are not curled under, particularly at the corners. Pull each corner of outer flange about 6.4 mm (¼ in.) away from the supporting frame with thumb or nonmetallic spatula and then release to ensure uncurling any corner lips hidden from view.

4.7.2 *Reglet-Type Gasket*—Insert the upper gasket corners first, and then install the lower gasket corners into the groove or reglet of the supporting frame, seating them firmly with a resiliently faced hammer and a wooden or metal block having smooth, rounded edges and corners. Then, on each side, insert the gasket into the groove at the center of each side working from the center to the corners and from the corners to the center, equalizing the crowd over the length of each side until the lips are firmly and continuously seated against the supporting frames.

4.8 *Installation of Multiple-Opening Gasket Systems (See Figs. 1 and 2):*

4.8.1 *Unsupported Vertical Ladder Assembly*—Laterally unsupported vertical ladder type installations as illustrated in Fig. 2, where the vertical load of a light of glass is transferred through the gasket web to the light below, with lateral support at the jambs, are not recommended. Refer to Guide C964 for a discussion of the disadvantages of this type of system.

4.8.2 *Unsupported Horizontal Ladder Assembly*—Mark on the head and sill frame members the exact location of the

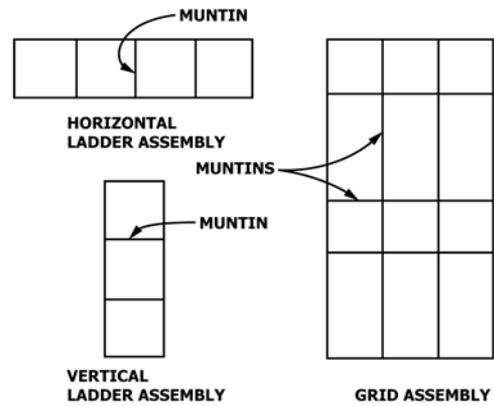


FIG. 1 Gasket Systems

center line of the vertical gasket muntin. Install the jamb section first, then work along the head and sill to the first muntin. Align each gasket muntin with the center lines marked on the head and sill. Install the glass or panel. The installation of setting blocks and edge spacers can be performed as described in 4.10. Then insert the lock-strip at the sill and head, running to within a few inches of the first gasket muntin. Continue the procedure by installing the next glass or panel. Insert the lock-strip into the muntin first and continue with the insertion of the lock-strip at the head and sill members. Repeat the procedure until all glass or panels are installed.

4.8.3 *Supported Vertical Ladder Assembly*—Align and secure the gasket horizontal muntins to the corresponding supporting structural members. The gasket muntins are held in line by the structural supporting muntin members with the entire ladder gasket unit completely supported during the installation procedure.

4.8.4 *Supported Horizontal Ladder Assembly*—Mount the gasket to the peripheral frame first. Then align and secure the vertical gasket muntins to the corresponding structural supporting members. Vertical spacer shims are not required between the glass or panel edge and the gasket web.

4.8.5 *Grid Assembly*—A grid assembly is a combination of the horizontal and vertical ladder assemblies. Supported grid gaskets are mounted to the corresponding frame members following the procedures noted under 4.8.3 and 4.8.4.

4.9 *Installation of Stick System*—A proprietary stick system shall be installed in accordance with the curtain wall manufacturer's instructions.

4.10 *Installation of Glass or Panel into Gasket*—Inspect, clean, and dry the gasket as required and replace, if damaged, before proceeding with the glazing or paneling operation. If necessary, a lubricant recommended by the gasket manufacturer can be used to aid insertion. Lubricate the surface of the exterior flange on the lock-strip side of the gasket channel that is to receive the glass or panel. Beginning approximately 152.4 to 203.2 mm (6 to 8 in.) above the bottom, open the channel lips and engage both lower corners of the glass or panel into the gasket sides and then lower it carefully into the sill channel of the gasket. Maintain the plane of the panel as close to the plane of the opening as possible. Insert a nonmetallic spatula between the edge of the glass or panel and the sealing lip on