

## SLOVENSKI STANDARD SIST ISO 500-1:2015

01-april-2015

Nadomešča: SIST ISO 500:1995

# Kmetijski traktorji - Zadnja priključna gred tipov 1, 2, 3 in 4 - 1. del: Splošne specifikacije, varnostne zahteve, mere za glavni ščit in območje nihanja

Agricultural tractors - Rear-mounted power take-off types 1, 2, 3 and 4 - Part 1: General specifications, safety requirements, dimensions for master shield and clearance zone

## iTeh STANDARD PREVIEW (standards.iteh.ai)

Tracteurs agricoles - Prises de force montées à l'arrière des types 1, 2, 3 et 4 - Partie 1: Spécifications générales, exigences de sécurité, idimensions du bouclier protecteur et de la one de dégagement<sup>s://standards.iteh.ai/catalog/standards/sist/9fb36461-4538-4add-a8f5-70d517c3735d/sist-iso-500-1-2015</sup>

Ta slovenski standard je istoveten z: ISO 500-1:2014

## ICS:

65.060.10 Kmetijski traktorji in

Kmetijski traktorji in prikolice Agricultural tractors and trailed vehicles

SIST ISO 500-1:2015

en,fr



# iTeh STANDARD PREVIEW (standards.iteh.ai)

<u>SIST ISO 500-1:2015</u> https://standards.iteh.ai/catalog/standards/sist/9fb36461-4538-4add-a8f5-70d517c3735d/sist-iso-500-1-2015

#### SIST ISO 500-1:2015

# INTERNATIONAL STANDARD

ISO 500-1

Second edition 2014-04-01

# Agricultural tractors — Rear-mounted power take-off types 1, 2, 3 and 4 —

Part 1:

General specifications, safety requirements, dimensions for master shield and clearance zone

Stracteurs agricoles Prises de force montées à l'arrière des types 1, 2, 3 et 4 —

Partie 1: Spécifications générales, exigences de sécurité, dimensions https://standards.iteh.du.bouglier.protecteur.get.de.lg.zone.de.dégagement 70d517c3735d/sist-iso-500-1-2015



Reference number ISO 500-1:2014(E)

# iTeh STANDARD PREVIEW (standards.iteh.ai)

<u>SIST ISO 500-1:2015</u> https://standards.iteh.ai/catalog/standards/sist/9fb36461-4538-4add-a8f5-70d517c3735d/sist-iso-500-1-2015



## **COPYRIGHT PROTECTED DOCUMENT**

© ISO 2014

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized otherwise in any form or by any means, electronic or mechanical, including photocopying, or posting on the internet or an intranet, without prior written permission. Permission can be requested from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office Case postale 56 • CH-1211 Geneva 20 Tel. + 41 22 749 01 11 Fax + 41 22 749 09 47 E-mail copyright@iso.org Web www.iso.org

Published in Switzerland

Page

## Contents

Forew	ordiv	1
1	Scope 1	L
2	Normative references 1	L
3	Terms and definitions 1	L
4	Specifications 1	L
5	PTO-speed requirements for shiftable PTO	2
6	Safety requirements	2
7	Dimensions for tractor master shield aperture and clearance zone of PTO	2
Biblio	graphy5	5

## iTeh STANDARD PREVIEW (standards.iteh.ai)

<u>SIST ISO 500-1:2015</u> https://standards.iteh.ai/catalog/standards/sist/9fb36461-4538-4add-a8f5-70d517c3735d/sist-iso-500-1-2015

### ISO 500-1:2014(E)

## Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

The procedures used to develop this document and those intended for its further maintenance are described in the ISO/IEC Directives, Part 1. In particular the different approval criteria needed for the different types of ISO documents should be noted. This document was drafted in accordance with the editorial rules of the ISO/IEC Directives, Part 2 (see www.iso.org/directives).

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights. Details of any patent rights identified during the development of the document will be in the Introduction and/or on the ISO list of patent declarations received (see www.iso.org/patents).

Any trade name used in this document is information given for the convenience of users and does not constitute an endorsement.

For an explanation on the meaning of ISO specific terms and expressions related to conformity assessment, as well as information about ISO's adherence to the WTO principles in the Technical Barriers to Trade (TBT) see the following URL: Foreword - Supplementary information

The committee responsible for this document is ISO/TC 23, *Tractors and machinery for agriculture and forestry*, Subcommittee SC 4, *Tractors*.

SIST ISO 500-1:2015

This second edition cancels and replaces the first edition (ISO3500-1:2004)) of which it constitutes a minor revision. It also incorporates the Corrigendum/ISO 500-1:2004/Cor. 1:2005.

ISO 500 consists of the following parts, under the general title *Agricultural tractors* — *Rear-mounted power take-off types 1, 2, 3, and 4*:

- Part 1: General specifications, safety requirements, dimensions for master shield and clearance zone
- Part 2: Narrow-track tractors, dimensions for master shield and clearance zone
- Part 3: Main PTO dimensions and spline dimensions, location of PTO

# Agricultural tractors — Rear-mounted power take-off types 1, 2, 3 and 4 —

## Part 1: General specifications, safety requirements, dimensions for master shield and clearance zone

## 1 Scope

This part of ISO 500 gives general specifications, including speeds, safety requirements, the dimensions for master shield, and clearance zones for rear-mounted power take-offs (PTOs) of types 1, 2, 3, and 4 on agricultural tractors with a track setting of more than 1 150 mm (those with track setting width of 1 150 mm or less are covered in ISO 500-2).

## 2 Normative references

The following documents, in whole or in part, are normatively referenced in this document and are indispensable for its application. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

(standards.iteh.ai) ISO 5673-2, Agricultural tractors and machinery — Power take-off drive shafts and power-input connection — Part 2: Specification for use of PTO\_drive\_shafts, and position and clearance of PTO drive line and PIC for various attachments.iteh.ai/catalog/standards/sist/9fb36461-4538-4add-a8f5-

ISO 6489 (all parts), Agricultural vehicles — Mechanical connections between towed and towing vehicles

## 3 Terms and definitions

For the purposes of this document, the following terms and definitions apply.

#### 3.1 power take-off PTO

external shaft on the rear of the tractor to provide rotational power to implements

## **4** Specifications

**4.1** The tractor rear power take-off (PTO) is classified into four types (see <u>Table 1</u>).

**4.2** The direction of PTO rotation shall be clockwise when viewed from behind the tractor except when a ground-driven PTO is operated with the tractor in reverse direction.

**4.3** The nominal PTO rated rotational frequency can be realized by one or more engine speed ranges.

PTO type	Nominal diameter mm	Number and type of splines	Nominal PTO rated rotational frequency min <sup>-1</sup>	Recommended PTO power at rated engine speed <sup>a</sup> kW		
1	35	6 straight splines	540	<65		
			1 000 <sup>b</sup>	<110		
2	35	21 involute splines	1 000	<130		
3	45	20 involute splines	1 000	<300		
4	57,5	22 involute splines	1 300	<450		
a Determined in	Determined in accordance with ISO 789-1 or OECD code 2.					
<sup>b</sup> This option is	is option is not available in North America.					

### Table 1 — Characteristics of PTO types

## 5 PTO-speed requirements for shiftable PTO

**5.1** Should more than one ratio between the engine speed and the PTO rotation speed be provided, any change of ratio shall be indicated. In addition, specific design measures shall be taken to ensure that unintentional changes of ratio, particularly in changing to a higher rotational speed, cannot occur. This safety device shall operate each time the PTO is engaged.

5.2 A means to indicate when the PTO is operating at which nominal speed shall be provided.

## (standards.iteh.ai)

## 6 Safety requirements

**6.1** The PTO master shield, as shown in Figure 1 and Table 2, shall be supplied by the tractor manufacturer and shall be fixed to the tractor. If the same degree of safety protection is reached and the clearance zone is respected, equivalent protection devices (e.g. towing hook or clevis supports) can be used instead of the master shield. In this case, provisions shall be made for anchoring the restraining member of the PTO drive shaft guard.


**6.2** If necessary, the PTO master shield or a part of the shield can be movable without detachment from the tractor to facilitate attachment of the PTO drive shaft. The movable portion of the master shield shall be resistant to unintentional movement when in the operating position. The master shield can be made of flexible material.

**6.3** If the PTO master shield can be used as a step, it shall withstand a vertical static load of 1 200 N without permanent deformation.

**6.4** An additional non-rotating casing which fully covers the PTO can also be supplied with the tractor to cover the PTO when the PTO is not in use.

## 7 Dimensions for tractor master shield aperture and clearance zone of PTO

The dimensions of the tractor master shield aperture and the clearance zone around the PTO shall be in accordance with <u>Figure 1</u> and <u>Table 2</u>.

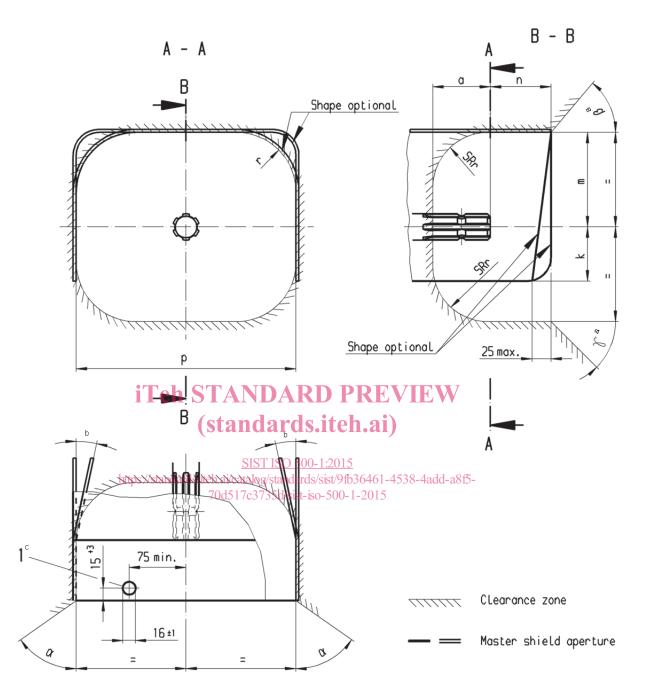

#### Кеу

1 Hole

- <sup>a</sup> The clearance can be restricted by movable and/or detachable devices. The clearance zone on towing vehicles shall be in accordance with ISO 6489 (all parts) and ISO 5673-2.
- <sup>b</sup> Angle optional under consideration of clearance zone.
- <sup>c</sup> For coupling up the restraining member of the PTO drive shaft guard preventing guard rotation.

#### Figure 1 — Tractor master shield aperture and clearance zone around PTO