



Designation: ~~D6666 – 04 (Reapproved 2014)~~ **D6666 – 04 (Reapproved 2019)**

Standard Guide for Evaluation of Aqueous Polymer Quenchants¹

This standard is issued under the fixed designation D6666; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ϵ) indicates an editorial change since the last revision or reapproval.

1. Scope

1.1 This guide provides information, without specific limits, for selecting standard test methods for testing aqueous polymer quenchants for initial qualification, determining quality, and the effect of aging.

1.2 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate ~~safety~~ safety, health, and ~~health~~ environmental practices and determine the applicability of regulatory requirements prior to use.*

1.3 *This international standard was developed in accordance with internationally recognized principles on standardization established in the Decision on Principles for the Development of International Standards, Guides and Recommendations issued by the World Trade Organization Technical Barriers to Trade (TBT) Committee.*

2. Referenced Documents

2.1 ASTM Standards:²

- D95 Test Method for Water in Petroleum Products and Bituminous Materials by Distillation
- D445 Test Method for Kinematic Viscosity of Transparent and Opaque Liquids (and Calculation of Dynamic Viscosity)
- D892 Test Method for Foaming Characteristics of Lubricating Oils
- D1744 Test Method for Determination of Water in Liquid Petroleum Products by Karl Fischer Reagent (Withdrawn 2016)³
- D1747 Test Method for Refractive Index of Viscous Materials
- D1796 Test Method for Water and Sediment in Fuel Oils by the Centrifuge Method (Laboratory Procedure)
- D2624 Test Methods for Electrical Conductivity of Aviation and Distillate Fuels
- D3519 Test Method for Foam in Aqueous Media (Blender Test) (Withdrawn 2013)³
- D3601 Test Method for Foam In Aqueous Media (Bottle Test) (Withdrawn 2013)³
- D3867 Test Methods for Nitrite-Nitrate in Water
- D4327 Test Method for Anions in Water by Suppressed Ion Chromatography
- D5296 Test Method for Molecular Weight Averages and Molecular Weight Distribution of Polystyrene by High Performance Size-Exclusion Chromatography
- D6482 Test Method for Determination of Cooling Characteristics of Aqueous Polymer Quenchants by Cooling Curve Analysis with Agitation (Tensi Method)
- D6549 Test Method for Determination of Cooling Characteristics of Quenchants by Cooling Curve Analysis with Agitation (Drayton Unit)
- E70 Test Method for pH of Aqueous Solutions With the Glass Electrode
- E979 Practice for Evaluation of Antimicrobial Agents as Preservatives for Invert Emulsion and Other Water Containing Hydraulic Fluids
- E2275 Practice for Evaluating Water-Miscible Metalworking Fluid Bioresistance and Antimicrobial Pesticide Performance

3. Terminology

3.1 Definitions of Terms Specific to This Standard:

¹ This guide is under the jurisdiction of ASTM Committee D02 on Petroleum Products, Liquid Fuels, and Lubricants and is the direct responsibility of Subcommittee D02.L0.06 on Non-Lubricating Process Fluids.

Current edition approved May 1, 2014; May 1, 2019. Published July 2014; July 2019. Originally approved in 2001. Last previous edition approved in 2009 as D6666 – 04 (2009); (2014). DOI: 10.1520/D6666-04R14; 10.1520/D6666-04R19.

² For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

³ The last approved version of this historical standard is referenced on www.astm.org.

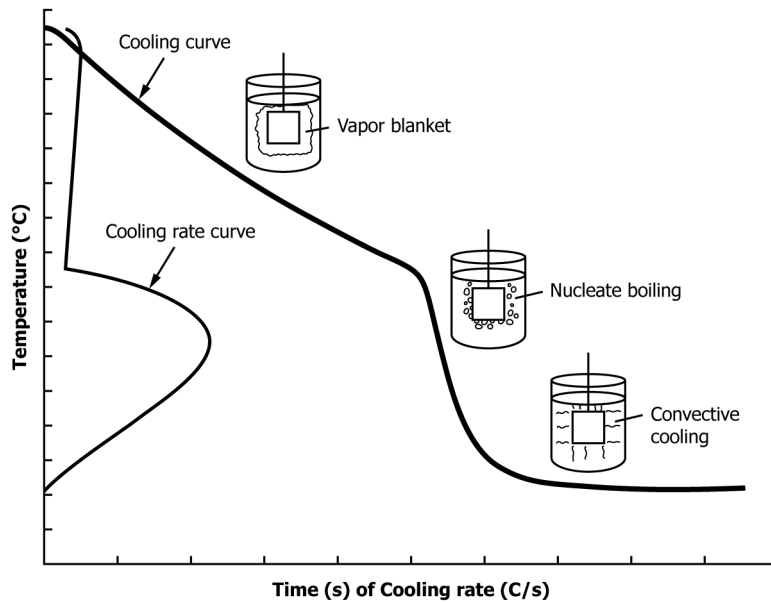


FIG. 1 Cooling Mechanisms of the Quenching Process

3.1.1 *austenite, n*—solid solution of one or more elements in face-centered cubic iron (gamma iron) and unless otherwise designated, the solute is generally assumed to be carbon (1).⁴

3.1.2 *austenitizing, n*—forming austenite by heating a ferrous alloy into the transformation range (partial austenitizing) or above the transformation range (complete austenitizing). When used without qualification, the term implies complete austenitizing (1).

3.1.3 *aqueous polymer quenchant, n*—a solution containing water, and one or more water-soluble polymers including poly(alkylene glycol), poly(vinyl pyrrolidone), poly(sodium acrylate), and poly(ethyl oxazoline) (2, 3) and additives for corrosion and foam control, if needed.

3.1.4 *biodegradation, n*—the process by which a substrate is converted by biological, usually microbiological, agents into simple, environmentally acceptable derivatives. (4)

3.1.5 *biodeterioration, n*—loss of product quality and performance and could be regarded as the initial stages of biodegradation (see 3.1.4), but in the wrong place at the wrong time, that is when the product is stored or in use. (4)

3.1.6 *convective cooling, n*—after continued cooling, and the interfacial temperature between the cooling metal and the aqueous polymer quenchant is less than the boiling point of the water in the quenchant solution at which point cooling occurs by a convective cooling process. For convective cooling, fluid motion is due to density differences and the action of gravity and includes both natural motion and forced circulation (1, 5). This process is illustrated in Fig. 1.

3.1.7 *cooling curve, n*—a graphical representation of the cooling time (t)—temperature (T) response of the probe such as that shown in Fig. 1. (5)

3.1.8 *cooling curve analysis, n*—the process of quantifying the cooling characteristics of a quenchant medium based on the temperature versus time profile obtained by cooling a preheated metal probe assembly (see Fig. 2) under specified conditions which include: probe alloy and dimensions, probe and bath temperature, agitation rate, and aqueous polymer quenchant concentration.

3.1.9 *cooling rate curve, n*—obtained by calculating the first derivative (dT/dt) of the cooling time-temperature curve as illustrated in Fig. 1. (5)

3.1.10 *dragout, n*—solution carried out of a bath on the metal being quenched and associated handling equipment. (1)


3.1.11 *full-film boiling, n*—upon initial immersion of hot steel into a quenchant solution, a vapor blanket surrounds the metal surface resulting in full-film boiling as shown in Fig. 1. (5)

3.1.12 *nucleate boiling, n*—when the vapor blanket surrounding the hot metal collapses and a nucleate boiling process occurs as illustrated in Fig. 1. (5)


3.1.13 *quenchant medium, n*—any liquid or gas, or mixture, used to control the cooling of a metal to facilitate the formation of the desired microstructure and properties. (1)

3.1.14 *quench severity, n*—the ability of a quenchant medium to extract heat from hot metal. (6)

⁴ The boldface numbers in parentheses refer to the list of references at the end of this standard.

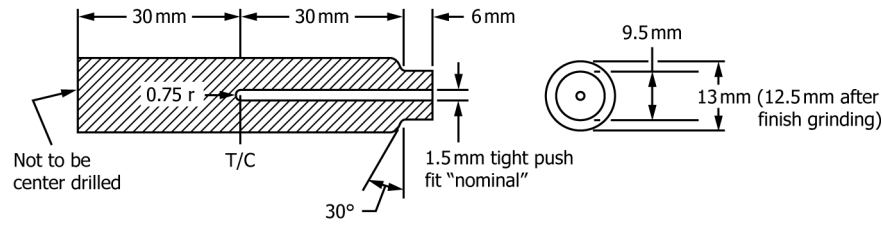

(a) Probe details

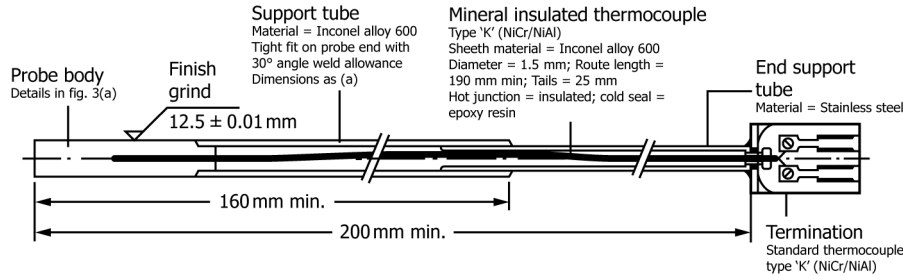

(b) General assembly

NOTE 1—From Wolfson Engineering Group Specification, available from Wolfson Heat Treatment Centre, Aston University, Aston Triangle, Birmingham B4 7ET, England, 1980.

FIG. 2 Schematic Illustration of the Probe Details and Probe Assembly

3.1.15 transformation temperatures, n —characteristic temperatures that are important in the formation of martensitic microstructure of steel including: A_{e1} —equilibrium austenitization phase change temperature; M_s —temperature at which transformation of austenite to martensite starts during cooling and M_f —temperature at which transformation of austenite to martensite is completed during cooling. (1)

4. Significance and Use

4.1 The significance and use of each test method will depend on the system in use and the purpose of the test method listed under Section 7. Use the most recent editions of the test methods: [D6666-04\(2019\)](#)

5. Quenching Process

5.1 *Aqueous Polymer Quenchant Cooling Mechanisms*—*Mechanisms*—Upon initial immersion of a heated metal into a solution of an aqueous polymer quenchant, an insulating polymer film, which controls the heat transfer rate from the hot metal into the cooler quenchant solution, forms around the hot metal which is separated by a vapor film (Fig. 3) (7) for the quenching process in a poly(alkylene glycol) quenchant. The overall heat transfer mediating properties of the film are dependent on both the film thickness (a function of polymer concentration) and interfacial film viscosity (a function of polymer type and bath temperature). The timing of film formation and subsequent film rupture and removal is dependent on the film strength of the polymer, agitation (both direction and mass flow), and turbulence of the polymer solution surrounding the cooling metal.

5.1.1 The cooling process that occurs upon initial immersion of the hot metal into the aqueous polymer quenchant is full-film boiling. This is frequently referred to as the vapor blanket stage. Cooling is slowest in this region. When the metal has cooled sufficiently, the polymer film encapsulating the hot metal ruptures and a nucleate boiling process results. The temperature at the transition from full-film boiling to nucleate boiling is called the Leidenfrost temperature. Cooling is fastest in this region. When the surface temperature of the cooling metal is less than the boiling temperature of water, convective cooling results. All three cooling mechanisms are superimposed on a cooling curve and illustrated in Fig. 3. (7)

6. Sampling

6.1 *Sampling*—Flow is never uniform in agitated quench tanks. There is always variation of flow rate and turbulence from top to bottom and across the tank. This means there may be significant variations of particulate contamination including carbon from the heat treating process and metal scale. For uniform sampling, a number of sampling recommendations have been developed.

6.1.1 *Sampling Recommendations:*

6.1.1.1 *Minimum Sampling Time*—The circulation pumps shall be in operation for at least ± 1 h prior to taking a sample from the quench system.

6.1.1.2 *Sampling Position*—For each system, the well-mixed sample shall be taken from the same position each time that system is sampled. The position in the tank where the sample is taken shall be recorded.

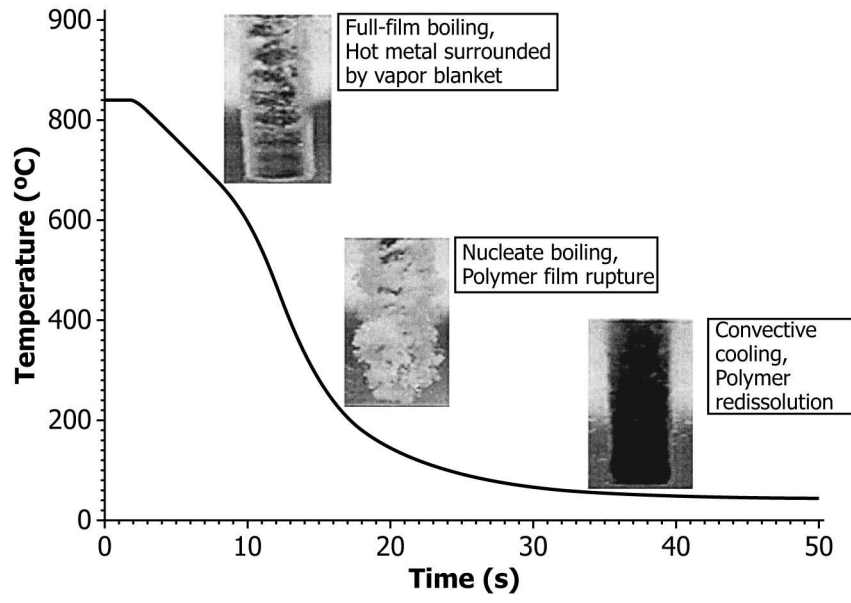


FIG. 3 Illustration of the Three Phases of Cooling

6.1.1.3 *Sampling Values*—If a sample is taken from a sampling valve, then sufficient quenchant should be taken and discarded to ensure that the sampling valve and associated piping has been flushed before the sample is taken.

6.1.1.4 *Effect of Quenchant Addition as Make-Up due to Dragout*—It is important to determine the quantity and frequency of new quenchant additions, as large additions of new quenchant solution will have an effect on the test results, in particular, the cooling curve. If a sample was taken just after a large addition of new quenchant, this shall be taken into consideration when interpreting the cooling curve for this sample.

6.1.1.5 *Sampling Containers*—Samples shall be collected in new containers. Under no circumstances shall used beverage or food containers be used because of the potential for fluid contamination and leakage.

7. Recommended Test Procedures

7.1 Performance-Related Physical and Chemical Properties:


7.1.1 *Appearance*—Contamination of aqueous polymer quenchants by such fluids as hydraulic or quench oils may result in a non-uniform quench with thermal gradients sufficient to cause cracking or increased distortion, or possible staining, of the metal being quenched. The simplest test (and an excellent test) is to examine the appearance of an aqueous polymer quenchant in a clear glass container, such as a bottle. A sample of an oil-contaminated fluid is illustrated in Fig. 4. (7) However, if the oil readily separates from the aqueous polymer quenchant solution (Fig. 4), it may be removed by skimming. On the other hand, oil may form a milky-white emulsion which is not readily reclaimed by heat treaters.

7.1.1.1 Other problems that are easy to identify visually include carbon and sludge contamination which often results in cracking problems. Metal scale contamination is often identifiable by its magnetic properties by placing a magnet on the outside of the bottle next to the scale and determining if the scale exhibits any attraction for the magnet. Carbon, sludge, and scale may be removed from the quenchant by filtration or centrifugation. Alternatively, the quenchant mixture may be allowed to settle, the quenchant solution pumped off, and the separated solids then removed by shoveling. The amount of insoluble suspended solids or tramp oils may be quantified by a modification of Test Method D1796 where the aqueous quenchant is centrifuged without further dilution as described in the method. The amount of tramp oil in the quenchant is determined from the insoluble liquid layer at the top of the centrifuge tube and the volume of the insoluble sediment is taken from the bottom of the centrifuge tube.

7.1.2 *Refractive Index, (Test Method D1747)*—One of the most common methods of monitoring the concentration of aqueous polymer quenchants formulated using poly(alkylene glycol) copolymers is refractive index. As Fig. 5 (7) shows, there is a linear relationship between quenchant concentration and refractive index. The refractive index of the quenchant solution is determined using an Abbé refractometer (Test Method D1747) equipped with a constant temperature bath. Although the refractive index could potentially be used at any temperature within the control limits of the constant temperature bath, typically either 40°C/40°C or 100°F/100 °F is selected.

7.1.2.1 Although refractive index is a relatively simple and a rapid method for determination of polymer quenchant concentration, it is not sensitive to low levels of polymer degradation and it is often significantly affected by solution contamination.

NOTE 1—Refractive index is typically unsuitable for aqueous polymer quenchants formulated with polymers with molecular weights greater than 50 000 to 60 000 because the total concentration is relatively low. Small changes in polymer concentration may result even from normal use which impart

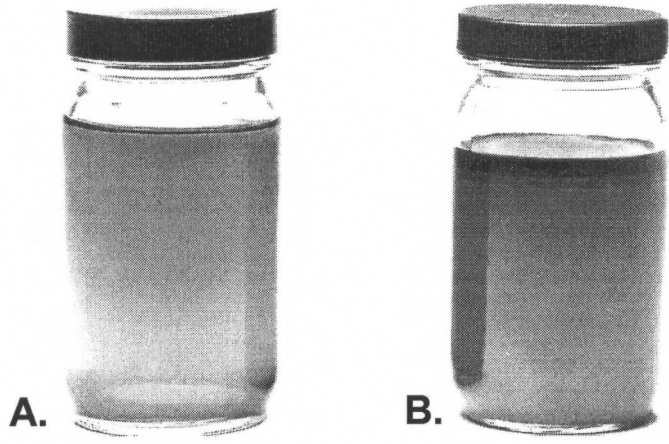

(A) New aqueous polymer quenchant solution.
 (B) Used quenchant solution with oil contamination (see separated upper layer).

(A) New aqueous polymer quenchant solution.
 (B) Used quenchant solution with oil contamination (see separated upper layer).

FIG. 4 Sample of Oil Contaminated Aqueous Polymer Quenchant

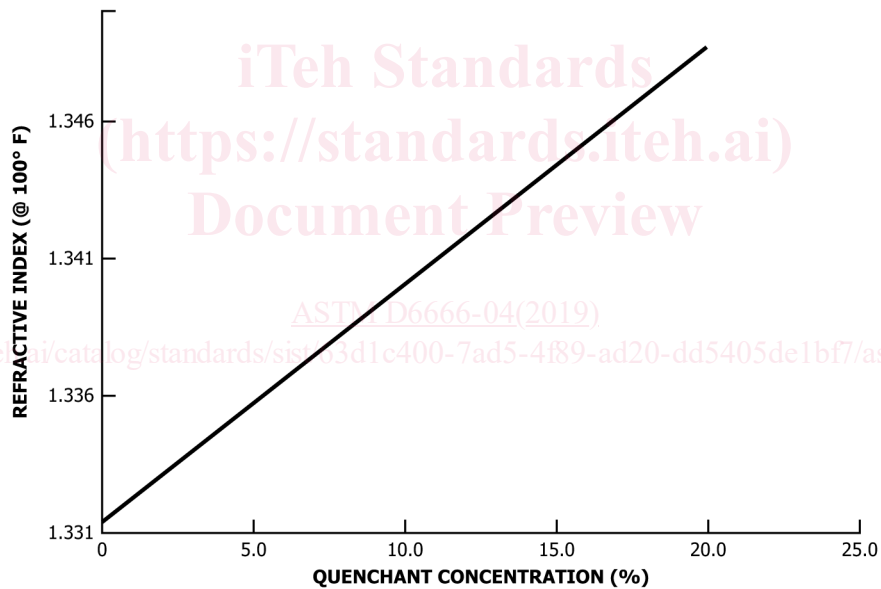


FIG. 5 Illustration of the Linear Relationship Between Refractive Index and Concentration

significant process effects but the corresponding variation in refractive index may not be detectable.

NOTE 2—Although it is most desirable to use an Abbé refractometer because of its sensitivity, this is only practical in a laboratory environment. In the heat treating industry, for tankside monitoring and control, a temperature-compensated handheld refractometer (similar to the one illustrated in Fig. 6) is used. The hand-held refractometer is self-compensated for temperatures between 60°F and 100°F. Although there are various models available, the most common models provide arbitrary refractive index readings in Brix units over a 0° to 30° range. Typically, the smallest scale that can be read directly is in divisions of 0.2° as shown in Fig. 7. A concentration-refractive index curve obtained by a hand-held refractometer is shown in Fig. 8. (7) Hand-held refractometers are available whose scale readings correlate directly to the concentration of the polymer quenchant being used. This is particularly convenient for industrial tank-side use. However, since refractive index varies with contamination (such as dissolved salts) that may accumulate from evaporation of hard water, the actual quenchant concentration shall be verified periodically by other methods, and appropriate correction factors applied. In this case, the refractometer reading multiplied by the correction factor equals actual concentration.

7.1.3 Viscosity, (Test Method D445)—Aqueous polymer quenchant viscosity depends on the quenchant concentration and temperature as shown in Fig. 9. (7) Viscosity is readily determined using a Cannon-Fenske tube (see Fig. 10), stopwatch and constant temperature bath as described in Test Method D445.



(A) Application of the aqueous polymer quenchant to the refractometer.
 (B) Visual reading of the refractometer scale to determine refractance value.
 (A) Application of the aqueous polymer quenchant to the refractometer.
 (B) Visual reading of the refractometer scale to determine refractance value.

FIG. 6 Typical Hand-Held Refractometer

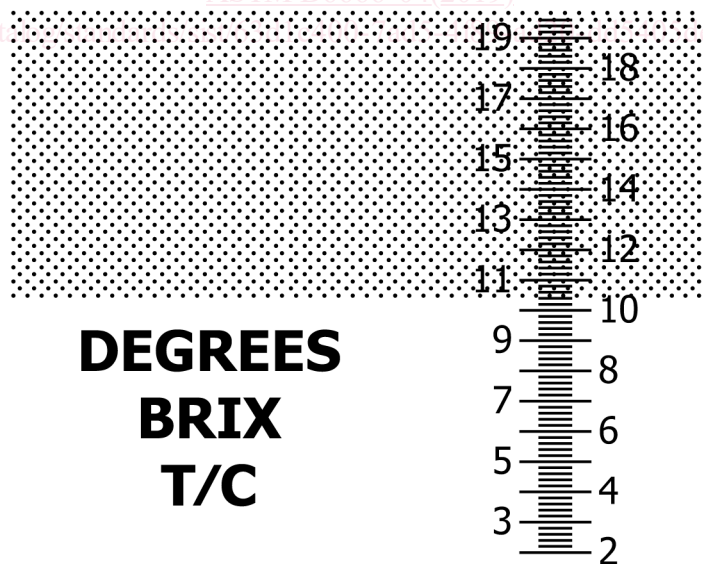


FIG. 7 Illustration of the Degrees Brix Refractive Index Scale Used for the Hand-Held Refractometer

7.1.4 Comparison of Concentration by Refractive Index and Viscosity—A useful procedure for monitoring variations in aqueous polymer quenchants, particularly poly(alkylene glycol) quenchants, is to compare the difference (delta) in the quenchant concentration value obtained by refractive index (C_R) and viscosity (C_V). (8)

$$\Delta = C_R - C_V \quad (1)$$