INTERNATIONAL STANDARD

ISO 12466-1

Second edition 2007-11-15

Plywood — Bonding quality —

Part 1: Test methods

Contreplaqué — Qualité du collage —

Partie 1: Méthodes d'essai iTeh STANDARD PREVIEW (standards.iteh.ai)

<u>ISO 12466-1:2007</u> https://standards.iteh.ai/catalog/standards/sist/79c59b21-2102-449b-8404-5c133c055979/iso-12466-1-2007



Reference number ISO 12466-1:2007(E)

PDF disclaimer

This PDF file may contain embedded typefaces. In accordance with Adobe's licensing policy, this file may be printed or viewed but shall not be edited unless the typefaces which are embedded are licensed to and installed on the computer performing the editing. In downloading this file, parties accept therein the responsibility of not infringing Adobe's licensing policy. The ISO Central Secretariat accepts no liability in this area.

Adobe is a trademark of Adobe Systems Incorporated.

Details of the software products used to create this PDF file can be found in the General Info relative to the file; the PDF-creation parameters were optimized for printing. Every care has been taken to ensure that the file is suitable for use by ISO member bodies. In the unlikely event that a problem relating to it is found, please inform the Central Secretariat at the address given below.

iTeh STANDARD PREVIEW (standards.iteh.ai)

<u>ISO 12466-1:2007</u> https://standards.iteh.ai/catalog/standards/sist/79c59b21-2102-449b-8404-5c133c055979/iso-12466-1-2007



COPYRIGHT PROTECTED DOCUMENT

© ISO 2007

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office Case postale 56 • CH-1211 Geneva 20 Tel. + 41 22 749 01 11 Fax + 41 22 749 09 47 E-mail copyright@iso.org Web www.iso.org Published in Switzerland

Contents

Forew	ord	iv
1	Scope	1
2	Normative references	1
3 3.1 3.2	Test pieces Sampling Shape and size	1
4 4.1 4.2	Apparatus Pre-treatment Shear test	5
5 5.1 5.2	Pre-treatment Sequence of pre-treatment Positioning of test pieces	5
6 6.1 6.2 6.3	Procedure Determination of behaviour of ply bonding by shear test Determination of percentage of apparent cohesive wood failure Alternative procedure	6
7	Expression of results	6
8	Expression of results (standards.itch.ai) Test report	7
Annex	A (normative) Determination of percentage of apparent cohesive wood failure by comparison with reference illustration sindard/sist/79c59b21-2102-449b-	8
Annex	8404-5c133c055979/iso-12466-1-2007 B (normative) Bond testing and evaluation using the chisel/knife testing procedures (suitable for quality control purposes only)	12
Bibliog	graphy	16

Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

International Standards are drafted in accordance with the rules given in the ISO/IEC Directives, Part 2.

The main task of technical committees is to prepare International Standards. Draft International Standards adopted by the technical committees are circulated to the member bodies for voting. Publication as an International Standard requires approval by at least 75 % of the member bodies casting a vote.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights.

ISO 12466-1 was prepared by Technical Committee ISO/TC 89, *Wood-based panels*, Subcommittee SC 3, *Plywood*.

This second edition cancels and replaces the first edition (ISO 12466-1:1999), which has been technically revised.

ISO 12466 consists of the following parts, under the general title *Plywood* — *Bonding quality*:

— Part 1: Test methods

https://standards.iteh.ai/catalog/standards/sist/79c59b21-2102-449b-8404-5c133c055979/iso-12466-1-2007

— Part 2: Requirements

Plywood — Bonding quality —

Part 1: Test methods

1 Scope

This part of ISO 12466 specifies methods for determining the bonding quality of plywood, blockboard, battenboard, and laminboard, bonded with thermosetting resin, by shear testing.

NOTE If it is possible to demonstrate a correlation between the methods defined in this part of ISO 12466 and other methods, these may be used.

2 Normative references

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies. **Including any amendments** appl

ISO 12466-2, Plywood — Bonding quality — Part 2: Requirements ISO 12466-1:2007 ISO 16999, Wood-based panels and Sampling land cutting of test pieces 02-449b-8404-5c133c055979/iso-12466-1-2007

3 Test pieces

3.1 Sampling

Sampling shall be in accordance with ISO 16999.

Test pieces shall be without any visible defect in the testing area.


3.2 Shape and size

The test pieces shall be prepared as shown in Figures 1, 2 and 3.

Each test piece shall be cut so that the grain direction of the layer (ply) between the glue lines under test is perpendicular to the length of the test piece.

The test pieces shall be prepared and nicking (saw cuts) made to allow the examination of each glue line of the panel. The saw cuts shall extend inside the layer.


Test pieces of full-panel thickness may be used for panels with three to nine layers (plies). For panels of more than nine layers, excess layers shall be removed by planing, cutting or sanding.

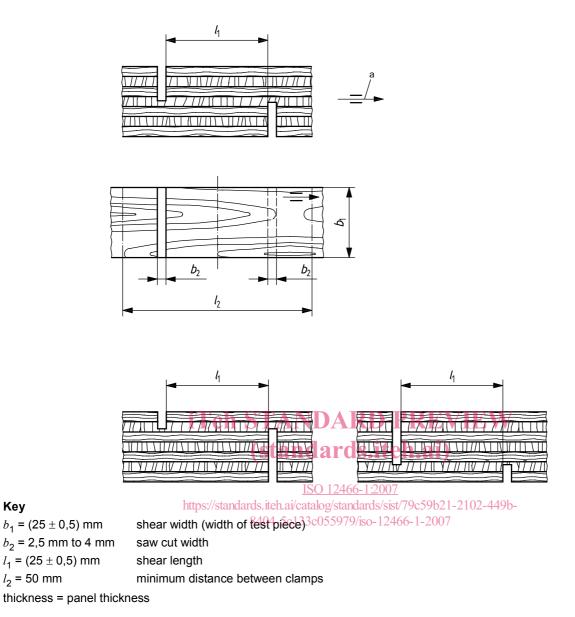


Along the grain direction. а

Key

Figure 1 — Test piece example for a 7-ply veneer plywood

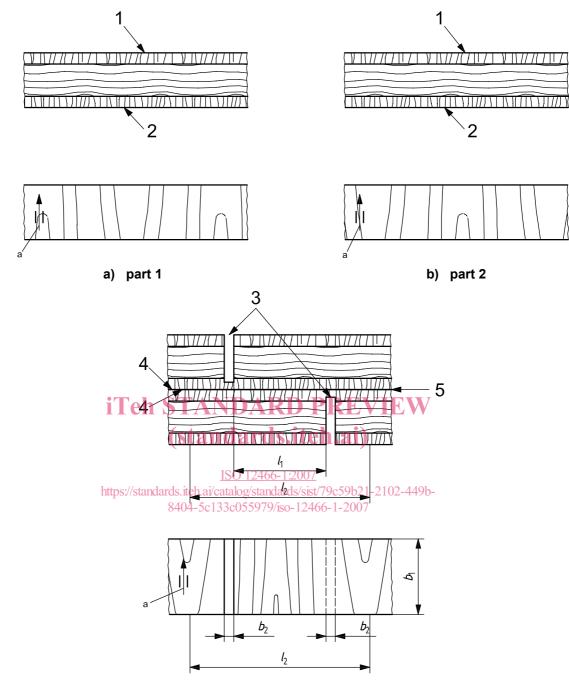


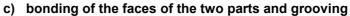

Key		
1	face	
2	back face	
3	saw cuts throughout the face layers	
4	faces of part 1 and part 2 ^b	
5	glue-line not subject to the shear test	
b_1 = (25 ± 0,5) mm	shear width	
b ₂ = 2,5 mm to 4 mm	saw cut width	
l_1 = (25 ± 0,5) mm	shear length	
l ₂ = 50 mm	minimum distance between clamps	
a Along the grain direction		

- ^a Along the grain direction.
- ^b The same set-up shall be made for the back face of part 1 and part 2.

Figure 2 — Composite test piece for blockboard and laminboard

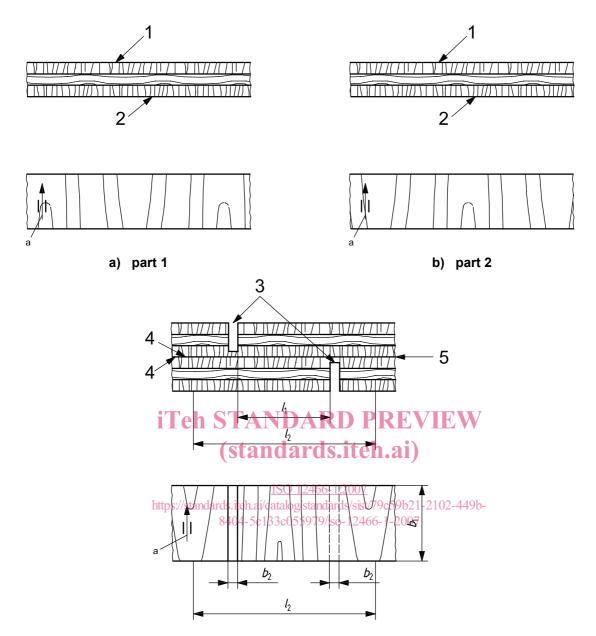

c) bonding of the faces of the two parts and grooving

Кеу	
1	face
2	back face
3	saw cuts throughout the face layers
4	faces of part 1 and part 2 ^b
5	glue-line not subject to the shear test
b_1 = (25 ± 0,5) mm	shear width
b ₂ = 2,5 mm to 4 mm	saw cut width
l_1 = (25 ± 0,5) mm	shear length
l ₂ = 50 mm	minimum distance between clamps

^a Along the grain direction.

^b The same set-up shall be made for the back face of part 1 and part 2.

Figure 3 — Composite test piece for thin-face plywood panel

4 Apparatus

4.1 Pre-treatment

4.1.1 Temperature-controlled water bath suitable for immersing test pieces and capable of maintaining a minimum temperature of 17 °C.

4.1.2 Boiling tank enabling test pieces to be immersed in boiling water.

4.1.3 Ventilated drying oven capable of maintaining a temperature of (60 ± 3) °C at all points.

4.1.4 Vacuum pressure chamber capable of maintaining in water at room temperature a vacuum of 85 kPa for 30 min followed immediately by application of pressure of 450 kPa to 480 kPa for 30 min.

4.1.5 Autoclave capable of maintaining steam pressure at (200 ± 7) kPa for 6 h \pm 15 min.

4.2 Shear test

Tensile testing machine fitted with serrated wedge action grips, capable of operating continuously and measuring the load to an accuracy: ± 1 %.

5 Pre-treatment

5.1 Sequence of pre-treatment

The choice of pre-treatment, described in 5.1.1 to 5.1.6, for particular plywood classes, shall be made in accordance with ISO 12466-2.

5.1.1 24 h Cold soak. immersion for 24 h in water at a temperature not lower than 17 °C.

NOTE (20 ± 3) °C can be considered as a test reference temperature.

5.1.2 6 h Boil: immersion for 6 h in boiling water, followed by cooling in water at less than 30 °C for at least 1 h.

5.1.3 BDB: immersion for 4 h in boiling water, then drying in the ventilated drying oven for 16 h to 20 h at (60 ± 3) °C, then immersion in boiling water for 4 h, followed by cooling in water at less than 30 °C for at least 1 h.

5.1.4 VP: test specimens are immersed in water at room temperature and a vacuum of 85 kPa is applied for 30 min followed by the immediate application of a pressure of 450 kPa to 480 kPa for 30min.

5.1.5 72 h Boil: immersion for (72 ± 1) h in boiling water, followed by cooling in water at less than 30 °C for at least 1 h.

5.1.6 Steam: specimens are placed in steam at (200 \pm 7) kPa pressure for 6 h \pm 15 min followed by cooling for at least 1 h in water at less than 30 °C.

5.2 Positioning of test pieces

The test pieces shall be placed, well separated and free to move, in a wire basket. During soaking, each test piece shall remain completely immersed in water.

6 Procedure

6.1 Determination of behaviour of ply bonding by shear test

Before the water treatment, measure the length and width of the shear area to an accuracy of 0,1 mm and record.

Arrange the shear test pieces in the centre of the clamping device in such a way that the load can be transmitted from the testing machine, via the ends of the test pieces, to the shear area without any transverse load. If slipping occurs, it shall only be allowed in the initial stage of the loading.

Apply the load at a constant speed so that failure occurs within (30 ± 10) s.

Determine and record the load at failure, to an accuracy of 1 %. Calculate the shear strength, in megapascals, in accordance with Clause 7.

After the shear test, determine the apparent cohesive wood failure in accordance with 6.2.

6.2 Determination of percentage of apparent cohesive wood failure

Allow the test pieces to dry before determination of apparent cohesive wood failure.

The percentage of apparent cohesive wood failure shall be determined by comparison with the standard illustrations in Annex A, by 10 % increments from 0 % to 100 %, and recorded.

Failure should normally occur in the wood or in the glue lines between the saw cuts, i.e. within the shear test area. If failure occurs outside the test area, or by cross-grain breaking within 50 % or more of the surface of a face veneer, reject the result and repeat the test with a shear length of 10 mm.

Failures resulting from the presence of strength-reducing/defects/shall also be excluded, with the exception of test pieces containing tape. Test pieces with such defects should normally be identified and replaced during the cutting operation. If the number of test pieces rejected exceeds 20%,7 it is necessary to resample. If the re-sampling is also rejected on this basis, then the batch shall be rejected.

6.3 Alternative procedure

An alternative procedure for bond testing and evaluation, the knife or chisel test, is provided in Annex B. This procedure is deemed suitable for quality control purposes only.

7 Expression of results

Calculate the shear strength, τ , in megapascals, of each test piece, from Equation (1):

$$\tau = \frac{F}{lb} \tag{1}$$

where

- *F* is the force (load), in newtons, at failure of the test piece;
- *l* is the length, in millimetres, of the shear area;
- *b* is the width, in millimetres, of the shear area.

Calculate the mean shear strength, to the nearest 0,01 MPa, and the standard deviation.

Also, determine the average percentage cohesive wood failure, to an accuracy of 10 %.

8 Test report

The test report shall be in accordance with ISO 16999, and shall also contain the following information:

- a) mean shear strength, in megapascals, and the standard deviation;
- b) average percentage apparent cohesive wood failure;
- c) details of pre-treatment (see 5.1);
- d) a reference to this part of ISO 12466.

iTeh STANDARD PREVIEW (standards.iteh.ai)

<u>ISO 12466-1:2007</u> https://standards.iteh.ai/catalog/standards/sist/79c59b21-2102-449b-8404-5c133c055979/iso-12466-1-2007