



Designation: E 834 – 81 (Reapproved 1998)

Standard Practice for Determining Vacuum Chamber Gaseous Environment Using a Cold Finger¹

This standard is issued under the fixed designation E 834; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ϵ) indicates an editorial change since the last revision or reapproval.

1. Scope

1.1 This practice covers a technique for collecting samples of materials that are part of the residual gas environment of an evacuated vacuum chamber. The practice uses a device designated as a “cold finger” that is placed within the environment to be sampled and is cooled so that constituents of the environment are retained on the cold-finger surface.

1.2 The practice covers a method for obtaining a sample from the cold finger and determining the weight of the material removed from the cold finger.

1.3 The practice contains recommendations as to ways in which the sample may be analyzed to identify the constituents that comprise the sample.

1.4 By determining the species that constitute the sample, the practice may be used to assist in defining the source of the constituents and whether the sample is generally representative of samples similarly obtained from the vacuum chamber itself.

1.5 This practice covers alternative approaches and usages to which the practice can be put.

1.6 The degree of molecular flux anisotropy significantly affects the assurance with which one can attribute characteristics determined by this procedure to the vacuum chamber environment in general.

1.7 The temperature of the cold finger significantly affects the quantity and species of materials collected.

1.8 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.* For specific precautionary statements, see Section 8.

2. Referenced Documents

2.1 ASTM Standards:

E 177 Practice for Use of the Terms Precision and Bias in ASTM Test Methods²

¹ This practice is under the jurisdiction of ASTM Committee E-21 on Space Simulation and Applications of Space Technology and is the direct responsibility of Subcommittee E21.05 on Contamination.

Current edition approved Sept. 25, 1981. Published December 1981.

² *Annual Book of ASTM Standards*, Vol 14.02.

3. Terminology

3.1 *pretest cold finger sample residue mass*, M_i —the mass of material collected from the cold finger during the pretest operation and as measured by the techniques specified in Section 9. The mass is based on a sample volume of 50 mL.

3.2 *posttest stock sample residue mass*, M_f —the mass of residue in a sample collected from the cold finger during the posttest operation and as measured by the technique specified in Section 9. The mass is based on a sample volume of 50 mL.

3.3 *pretest stock sample residue mass*, S_i —the mass of residue in a sample of the solvent (used to obtain the pretest cold finger sample) as measured by the technique specified in Section 9. The mass is based on a sample volume of 50 mL.

3.4 *posttest stock sample residue mass*, S_f —the mass of residue in a sample of the solvent (used to obtain the posttest cold finger sample) as measured by the technique specified in Section 9. The mass is based on a sample volume of 50 mL.

3.5 *cold finger*—the device that is used in collecting the sample of the residual gases in an evacuated vacuum chamber (see Fig. 1).


3.6 *CFR*—the residue collected by the cold finger during the vacuum exposure given in milligrams.

4. Summary of Practice

4.1 The cold-finger technique provides a method for characterizing the ambiance in a vacuum chamber when the chamber is being operated with or without a test item.

4.2 In use, the cold finger is installed in the vacuum chamber in such a location as to be exposed to fluxes representative of those in the general ambiance. (Chamber conditions that will exist under vacuum conditions must be considered so as to assess the effects of molecular flux anisotropy.)

4.3 The cold finger is cleaned before the vacuum exposure and a sample of any residue on the surface is obtained. The pretest cleaning and sampling procedure consists of (a) heating the cold finger and scrubbing it with a solution of laboratory detergent and water; (b) rinsing the cold finger with demineralized or distilled water; (c) rinsing the cold finger with 1,1,1-trichloroethane and ethanol mixed 75 + 25 as the solvent;

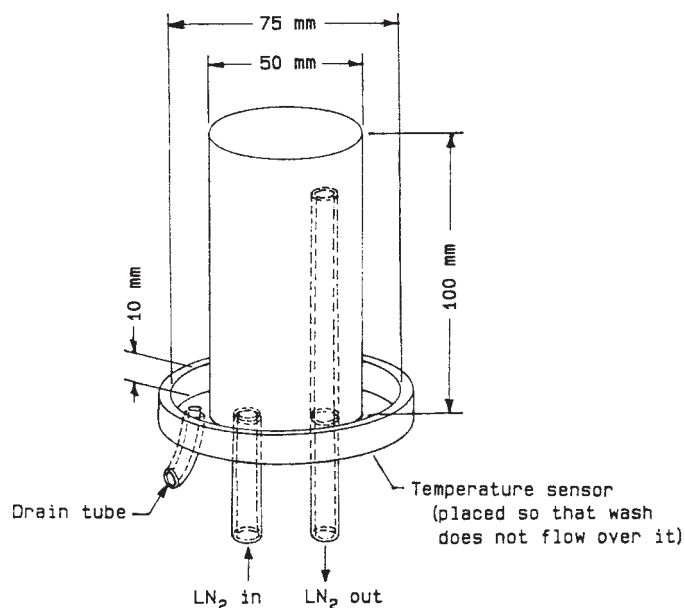

Material:
300 series stainless steel

FIG. 1 Typical Cold Finger Assembly

(d) obtaining a sample of any residue contained in a second rinse with solvent; and (e) obtaining a sample of the solvent.

4.4 The vacuum chamber is then sealed and evacuated; after reaching a pressure of less than 1 mPa (8×10^{-6} torr), a coolant is flowed through the cold finger so that materials in the ambient environment can adhere to the surface. Generally, liquid nitrogen is used as the coolant. Other coolants may be used provided that the coolant temperature is controlled and reported. This coolant flow is continued until the chamber pressure rises to greater than 80 kPa (600 torr) as the chamber is being returned to room ambient conditions using dry gaseous nitrogen. **Caution:** Too rapid a repressurization may dislodge some of the condensate.

4.5 As soon as possible after the chamber door is opened, the solvent is poured over the cold finger and a sample containing any residue from the cold finger is collected. A second sample of the solvent is obtained if the solvent is taken from a container different than that used under 4.3.

4.6 Both the pretest and posttest samples are placed in previously cleaned and weighed evaporating dishes. The dishes containing the samples are placed on a steam bath and the solvent is evaporated. The dishes containing the residue are then weighed using an analytical balance. The samples of the solvent are similarly handled and any residue weighed. The differences of mass between the pretest residue and posttest residue is then determined (corrected if necessary for any significant residue found in the solvent); this difference in mass is taken as the residue collected by the cold finger during its exposure to the vacuum environment, CFR.

4.7 Analytical procedures such as infrared spectroscopy or gas chromatography-mass spectrometry may be used to identify those species that constitute the residue.

5. Significance and Use

5.1 When applied in the case in which there is no test item in the vacuum chamber (such as during bake-out operations), this procedure may be used to evaluate the performance of the vacuum chamber in relation to other data from the same or other chambers given that critical parameters (for example, length of exposure, temperature of the chamber and cold finger, anisotropy, and so forth) can be related.

5.2 The procedure can be used to evaluate the effects of materials found in the residue on items placed in the vacuum chamber.

5.3 The procedure can be used to describe the effect of a prior test on the residual gases within a vacuum chamber.

5.4 By selecting the time at which the coolant is introduced into the cold finger, the environment present during a selected portion of a test can be characterized. This can be used to determine the relative efficacy of certain vacuum chamber procedures such as bake-out.

5.5 The procedure may be used to define the outgassed products of a test item that condense on the cold finger.

5.6 The procedure may be used in defining the relative cleanliness of a vacuum chamber.

5.7 In applying the results of the procedure to the vacuum chamber in general, consideration must be given to the anisotropy of the molecular fluxes within the chamber.

5.8 The procedure is sensitive to both the partial pressures of the gases that form the condensibles and the time of exposure of the cold finger at coolant temperatures.

5.9 The procedure is sensitive to any losses of sample that may occur during the various transfer operations and during that procedure wherein the solvent is evaporated by heating it on a steam bath.

NOTE 1—Reactions between solvent and condensate can occur and would affect the analysis.

6. Apparatus

6.1 The apparatus used in this procedure is termed a cold finger. Fig. 1 is a drawing of the cold finger. The cold finger consists of a stainless steel cylinder approximately 50 mm (2.0 in.) in diameter and 100 mm (4.0 in.) high. The base of the cylinder is extended to form a lip or trap annulus approximately 10 mm ($\frac{1}{2}$ in.) high with a diameter of 75 mm (3 in.) so that fluid poured over the top of the cylinder and running down the sides can be captured. A small drain is provided in this lip and the fluid can drain through this aperture into a receptacle. Two tubes enter the cold finger through the base, one providing the inlet and the other the outlet for the coolant. Temperatures shall be monitored. The coolant recommended in this practice is liquid nitrogen. The apparatus should be thoroughly cleaned after the manufacture.

6.2 Containers must not react with the solvents. Glass, austenitic stainless steels, or PTFE generally are acceptable.

7. Reagents

7.1 Reagent grade 1,1,1-trichloroethane and ethanol mixed 3 + 1 is the solvent used for obtaining the sample from the cold finger and as the final rinse material in the cleaning procedures