



Designation: **G3—13 G3 – 14**

Standard Practice for Conventions Applicable to Electrochemical Measurements in Corrosion Testing¹

This standard is issued under the fixed designation G3; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ϵ) indicates an editorial change since the last revision or reapproval.

1. Scope

1.1 This practice covers conventions for reporting and displaying electrochemical corrosion data. Conventions for potential, current density, electrochemical impedance and admittance, as well as conventions for graphical presentation of such data are included.

1.2 The values stated in SI units are to be regarded as standard. No other units of measurement are included in this standard. See also 7.4.

1.3 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.*

2. Referenced Documents

2.1 *ASTM Standards:*²

IEEE/ASTM SI 10 Standard for Use of the International System of Units (SI) (the Modern Metric System)

3. Significance and Use

3.1 This practice provides guidance for reporting, displaying, and plotting electrochemical corrosion data and includes recommendations on signs and conventions. Use of this practice will result in the reporting of electrochemical corrosion data in a standard format, facilitating comparison between data developed at different laboratories or at different times. The recommendations outlined in this standard may be utilized when recording and reporting corrosion data obtained from electrochemical tests such as potentiostatic and potentiodynamic polarization, polarization resistance, electrochemical impedance and admittance measurements, galvanic corrosion, and open circuit potential measurements.

4. Sign Convention for Electrode Potential

4.1 The Stockholm sign invariant convention is recommended for use in reporting the results of specimen potential measurements in corrosion testing. In this convention, the positive direction of electrode potential implies an increasingly oxidizing condition at the electrode in question. The positive direction has also been denoted as the noble direction because the corrosion potentials of most noble metals, such as gold, are more positive than the nonpassive base metals. On the other hand, the negative direction, often called the active direction, is associated with reduction and consequently the corrosion potentials of active metals, such as magnesium. This convention was adopted unanimously by the 1953 International Union of Pure and Applied Chemistry as the standard for electrode potential (**1**).³


4.2 In the context of a specimen electrode of unknown potential in an aqueous electrolyte, consider the circuit shown in Fig. 1 with a reference electrode connected to the ground terminal of an electrometer. If the electrometer reads on scale when the polarity switch is negative, the specimen electrode potential is negative (relative to the reference electrode). Conversely, if the

¹ This practice is under the jurisdiction of ASTM Committee G01 on Corrosion of Metals and is the direct responsibility of Subcommittee G01.11 on Electrochemical Measurements in Corrosion Testing.

Current edition approved Dec. 15, 2014. Published December 2014. Originally approved in 1968. Last previous edition approved in 2010 as G3-89 (2010)—13. DOI: 10.1520/G0003-13.10.1520/G0003-14.

² For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

³ The boldface numbers in parentheses refer to a list of references at the end of this standard.

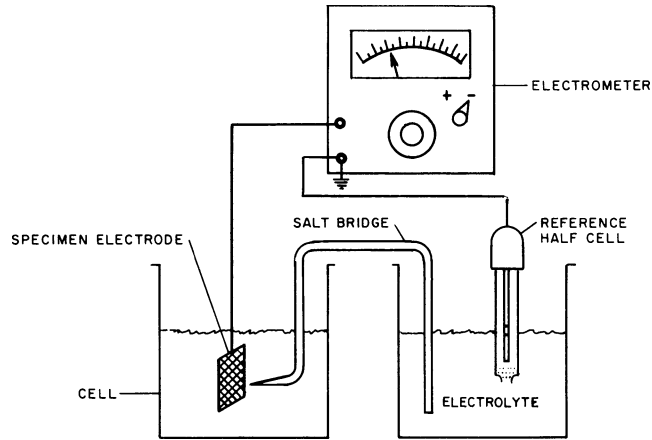

NOTE 1—The electrode potential of specimen is negative as shown.

FIG. 1 Schematic Diagram of an Apparatus to Measure Electrode Potential of a Specimen

electrometer reads on scale when polarity is positive, the specimen potential is positive. On the other hand, if the specimen electrode is connected to the ground terminal, the potential will be positive if the meter is on scale when the polarity switch is negative, and vice versa.

NOTE 1—In cases where the polarity of a measuring instrument is in doubt, a simple verification test can be performed as follows: connect the measuring instrument to a dry cell with the lead previously on the reference electrode to the negative battery terminal and the lead previously on the specimen electrode to the positive battery terminal. Set the range switch to accommodate the dry cell voltage. The meter deflection will now show the direction of positive potential.

Also, the corrosion potential of magnesium or zinc should be negative in a 1 N NaCl solution if measured against a saturated standard calomel electrode (SCE).

iteh Standards
(<https://standards.iteh.ai>)
Document Preview

ASTM G3-14

<https://standards.iteh.ai/catalog/standards/sist/60c9802f-ceaa-4943-ba96-e0b20eb20070/astm-g3-14>

5. Sign Convention for Electrode Potential Temperature Coefficients

5.1 There are two types of temperature coefficients of electrode potential: isothermal temperature coefficients and the thermal coefficients. The sign convention recommended for both types of temperature coefficients is that the temperature coefficient is positive when an increase in temperature produces an increase (that is, it becomes more positive) in the electrode potential. Likewise, the second temperature coefficient is positive when an increase in temperature produces an increase (that is, it becomes more positive) in the first temperature coefficient.

6. Sign Convention for Current and Current Density

6.1 The sign convention in which anodic currents and current densities are considered positive and cathodic currents and current densities are negative is recommended. When the potential is plotted against the logarithm of the current density, only the absolute values of the current density can be plotted. In such plots, the values which are cathodic should be clearly differentiated from the anodic values if both are present.

7. Conventions for Displaying Polarization Data

7.1 *Sign Conventions*—The standard mathematical practice for plotting graphs is recommended for displaying electrochemical corrosion data. In this practice, positive values are plotted above the origin on the ordinate axis and to the right of the origin on the abscissa axis. In logarithmic plots, the abscissa value increases from left to right and the ordinate value increases from bottom to top.

7.2 *Current Density-Potential Plots*—A uniform convention is recommended for plotting current density-potential data, namely, plot current density along the abscissa and potential along the ordinate. In current density potential plots, the current density may be plotted on linear or logarithmic axes. In general, logarithmic plots are better suited to incorporation of wide ranges of current density data and for demonstrating Tafel relationships. Linear plots are recommended for studies in which the current density or potential range is small, or in cases where the region in which the current density changes from anodic to cathodic is important. Linear plots are also used for the determination of the polarization resistance R_p , which is defined as the slope of a potential-current density plot at the corrosion potential E_{corr} . The relationship between the polarization resistance R_p and the corrosion current density i_{corr} is as follows (2, 3):

$$\left[\frac{d(\Delta E)}{di} \right]_{\Delta E=0} = R_p = \frac{b_a b_c}{2.303(b_a + b_c) i_{\text{corr}}} \quad (1)$$

where:

b_a = anodic Tafel slope,

b_c = cathodic Tafel slope, and

ΔE = the difference $E - E_{\text{corr}}$, where E is the specimen potential.

Fig. 2 is a plot of polarization, $E - E_{\text{corr}}$, versus current density i (solid line) from which the polarization resistance R_p has been determined as the slope of the curve at the corrosion potential E_{corr} .

7.3 *Potential Reference Points*—In plots where electrode potentials are displayed, some indication of the conversion of the values displayed to both the standard hydrogen electrode scale (SHE) and the saturated calomel electrode scale (SCE) is recommended if they are known. For example, when electrode potential is plotted as the ordinate, then the SCE scale could be shown at the extreme left of the plot and the SHE scale shown at the extreme right. An alternative, in cases where the reference electrode was not either SCE or SHE, would be to show on the potential axis the potentials of these electrodes against the reference used. In cases where these points are not shown on the plot, an algebraic conversion could be indicated. For example, in the case of a silver-silver chloride reference electrode (1 M KCl), the conversion could be shown in the title box as:

$$\text{SCE} = E - 0.006 \text{ V} \quad (2)$$

$$\text{SHE} = E + 0.235 \text{ V}$$

where E represents electrode potential measured against the silver-silver chloride standard (1 M KCl).

NOTE 2—A table of potentials for various common reference electrodes is presented in Appendix X2.

7.4 *Units*—The recommended unit of potential is the volt. In cases where only small potential ranges are covered, millivolts or microvolts may be used. The SI units for current density are ampere per square metre or milliampere per square centimetre (IEEE/ASTM SI 10). Still in use are units expressed in amperes per square centimetre, and microamperes per square centimetre.

7.5 *Sample Polarization Curves*—Sample polarization plots employing these recommended practices are shown in Figs. 2-6. Fig. 3 and Fig. 4 are hypothetical curves showing active and active-passive anode behavior, respectively. Fig. 5 and Fig. 6 are actual polarization data for Type 430 stainless steel (UNS 43000) (4) and two aluminum samples (5). Fig. 3 and Fig. 4 are exhibited to illustrate graphically the location of various points used in discussion of electrochemical methods of corrosion testing. The purpose of Fig. 5 and Fig. 6 is to show how various types of electrode behavior can be plotted in accordance with the proposed conventions.

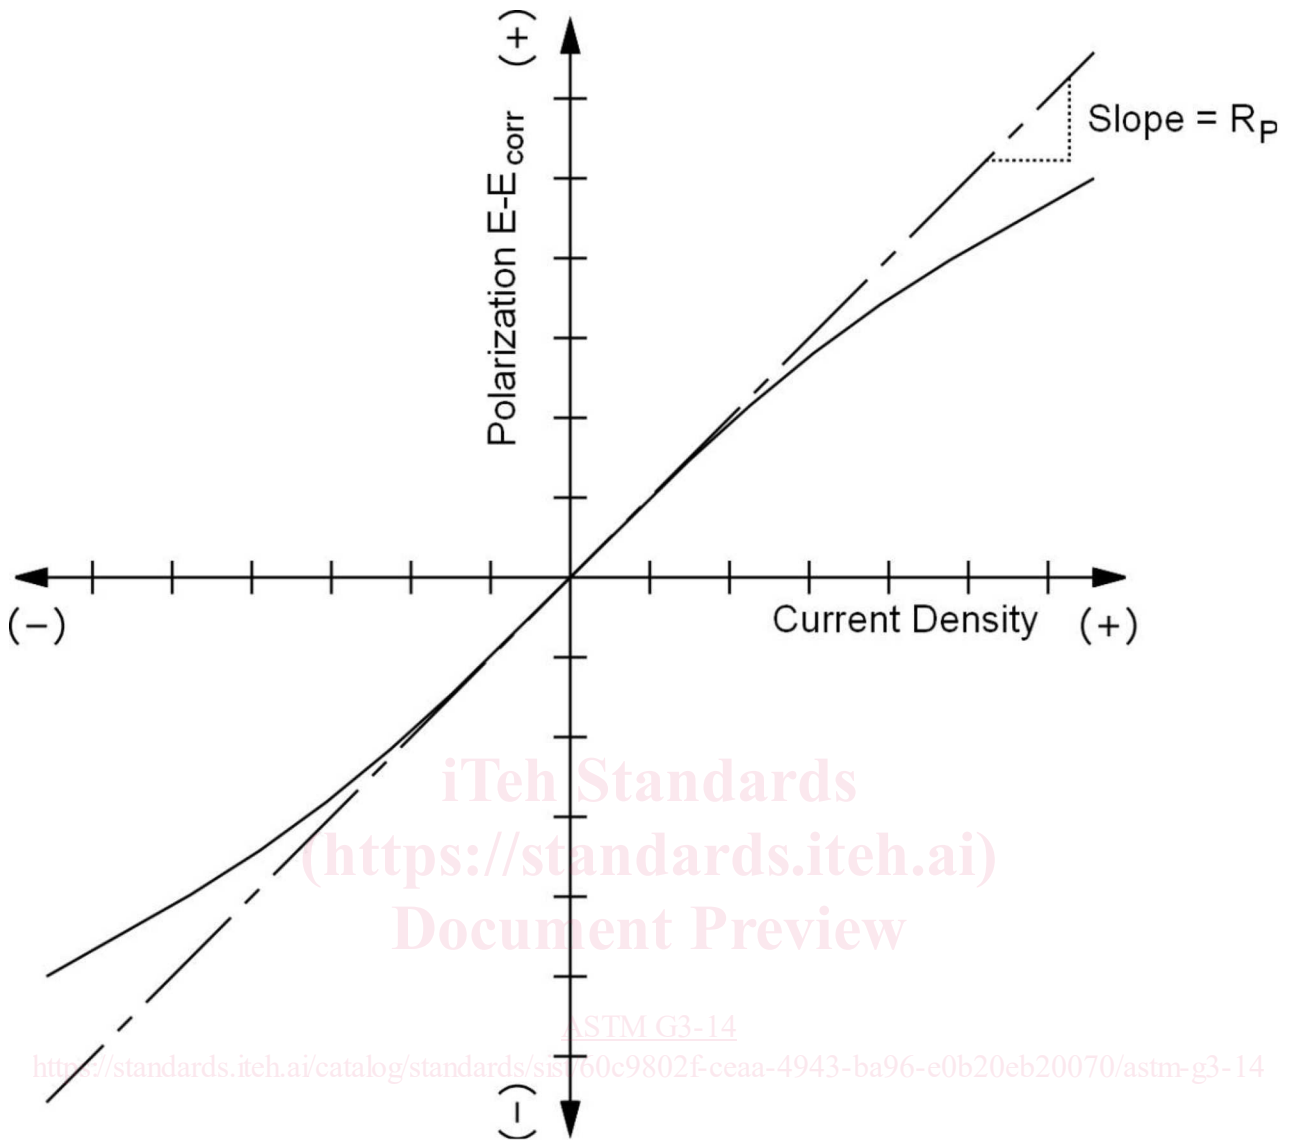


FIG. 2 Hypothetical Linear Polarization Plot

8. Conventions for Displaying Electrochemical Impedance Data

8.1 Three graphical formats in common use for reporting electrochemical impedance data are the Nyquist, Bode, and Admittance formats. These formats are discussed for a simple electrode system modelled by an equivalent electrical circuit as shown in Fig. 7. In the convention utilized the impedance is defined as:

$$Z = Z' + j Z'' \tag{3}$$

where:

- Z = real or in-phase component of impedance,
- Z'' = the imaginary or out-of-phase component of impedance, and
- j² = -1.

The impedance magnitude or modulus is defined as |Z|² = (Z')² + (Z'')². For the equivalent electrical circuit shown in Fig. 7, the imaginary component of impedance

$$Z'' = \frac{-1}{2\pi f C} \tag{4}$$

where:

- f = frequency in cycles per second (or hertz, Hz, where one Hz is equal to 2π radians/s, and ω = 2πf, where the units for ω are radians/s), and

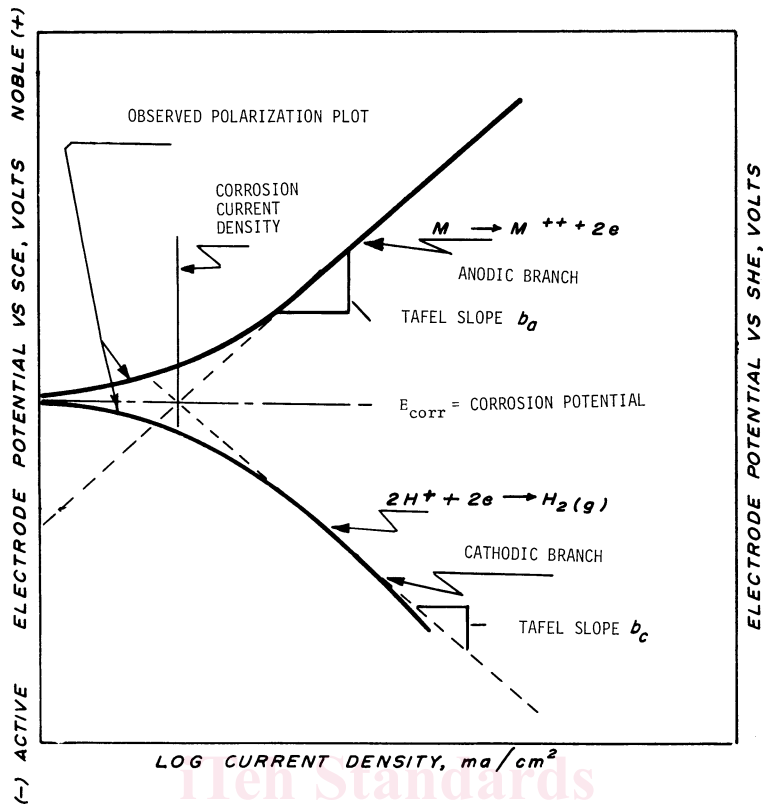


FIG. 3 Hypothetical Cathodic and Anodic Polarization Diagram

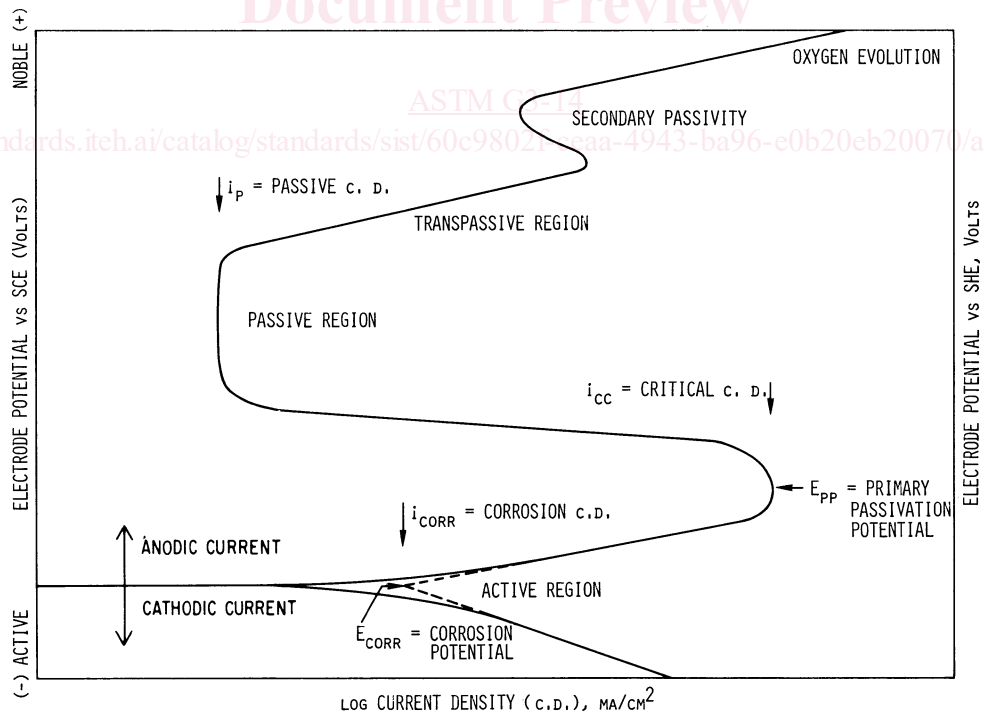


FIG. 4 Hypothetical Cathodic and Anodic Polarization Plots for a Passive Anode

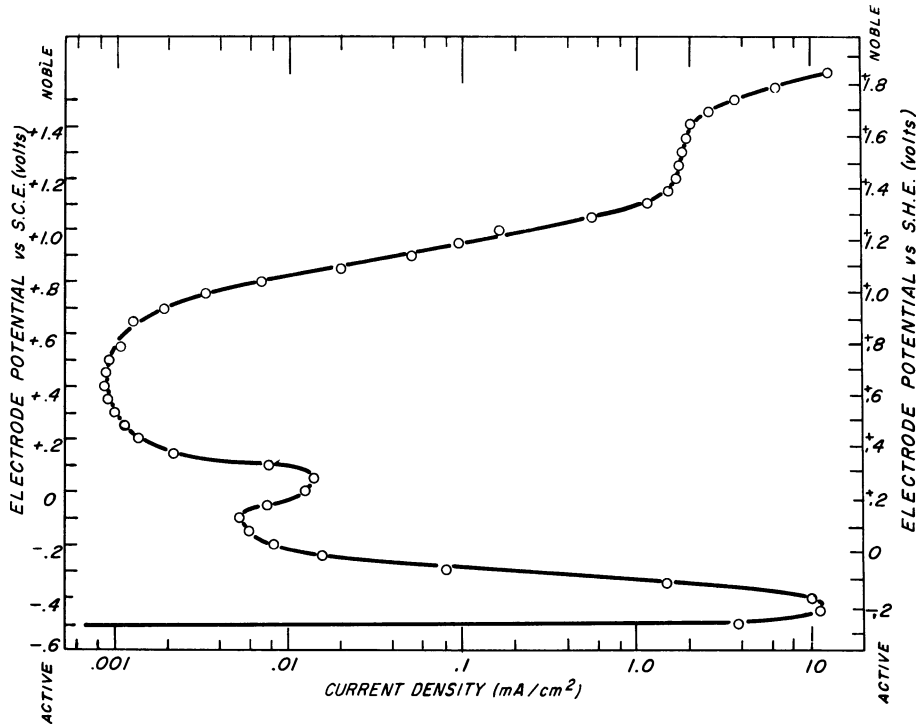


FIG. 5 Typical Potentiostatic Anodic Polarization Plot for Type 430 Stainless Steel in 1.0 N H₂SO₄

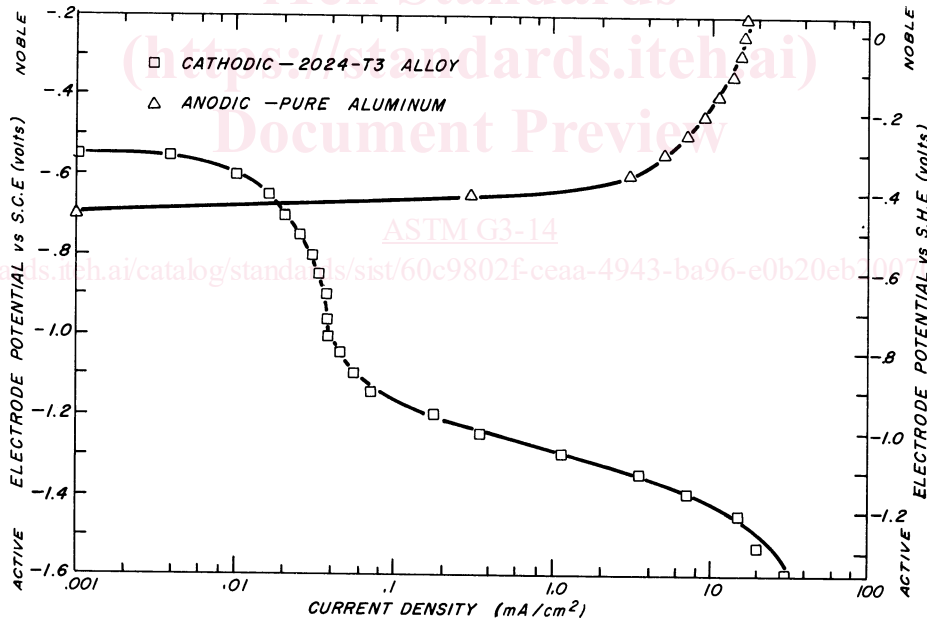


FIG. 6 Typical Polarization Plots for Aluminum Materials in 0.2 N NaCl Solution

C = capacitance in farads.

The phase angle, θ is defined as:

$$\theta = \arctan(Z''/Z') \quad (5)$$

The admittance, Y , is defined as

$$1/Z = Y = Y' + jY'' \quad (6)$$

where: