

SLOVENSKI STANDARD SIST EN 15355:2008+A1:2010

01-december-2010

Železniške naprave - Zavore - Krmilni ventili in naprave za ločitev krmilnih ventilov od zavornega voda

Railway applications - Braking - Distributor valves and distributor-isolating devices

Bahnanwendungen - Bremse - Steuerventile und Bremsabsperreinrichtungen

Applications ferroviaires - Freinage - Distributeurs de freinage et robinet d'isolement (standards.iteh.ai)

Ta slovenski standard je istoveten z: EN 15355:2008+A1:2010

https://standards.iteh.ai/catalog/standards/sist/67bdb9e0-3e92-4d8b-8e8c-

3000d50d0d83/sist-en-15355-2008a1-2010

ICS:

45.040 Materiali in deli za železniško Materials and components

tehniko for railway engineering

SIST EN 15355:2008+A1:2010 en,fr

SIST EN 15355:2008+A1:2010

iTeh STANDARD PREVIEW (standards.iteh.ai)

<u>SIST EN 15355;2008+A1;2010</u> https://standards.iteh.ai/catalog/standards/sist/67bdb9e0-3e92-4d8b-8e8c-3000d50d0d83/sist-en-15355-2008a1-2010 **EUROPEAN STANDARD**

EN 15355:2008+A1

NORME EUROPÉENNE

EUROPÄISCHE NORM

October 2010

ICS 45.060.01

Supersedes EN 15355:2008

English Version

Railway applications - Braking - Distributor valves and distributor-isolating devices

Applications ferroviaires - Freinage - Distributeurs de freinage et robinet d'isolement

Bahnanwendungen - Bremse - Steuerventile und Bremsabsperreinrichtungen

This European Standard was approved by CEN on 24 August 2008 and includes Amendment 1 approved by CEN on 30 August 2010.

CEN members are bound to comply with the CEN/CENELEC Internal Regulations which stipulate the conditions for giving this European Standard the status of a national standard without any alteration. Up-to-date lists and bibliographical references concerning such national standards may be obtained on application to the CEN Management Centre or to any CEN member.

This European Standard exists in three official versions (English, French, German). A version in any other language made by translation under the responsibility of a CEN member into its own language and notified to the CEN Management Centre has the same status as the official versions.

CEN members are the national standards bodies of Austria, Belgium, Bulgaria, Croatia, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Iceland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Switzerland and United Kingdom.

<u>SIST EN 15355:2008+A1:2010</u> https://standards.iteh.ai/catalog/standards/sist/67bdb9e0-3e92-4d8b-8e8c-3000d50d0d83/sist-en-15355-2008a1-2010



EUROPEAN COMMITTEE FOR STANDARDIZATION COMITÉ EUROPÉEN DE NORMALISATION EUROPÄISCHES KOMITEE FÜR NORMUNG

Management Centre: Avenue Marnix 17, B-1000 Brussels

Contents		Page
Forewo	ord	5
1	Scope	6
-	Normative references	
2		
3	Symbols, and abbreviations, terms and definitions	6
3.1	Symbols	
3.2 3.3	Abbreviations Terms and definitions	
4	Design and manufacture	
4.1 4.2	General Functional requirements	
4.2	Control volume (control chamber)	
4.4	Pilot volume and product classification	
4.5	Shock and vibration	
4.6	Service life	
4.7	Compressed air quality	
4.8	Ambient temperature	17
4.9		
4.10	Humidity Other environmental specifications and ards, iteh, ai	17
4.11 4.11.1	Rain	17
4.11.1		
4.11.3		17 18
4.11.4	Pollution https://standards.iteh.avcatalog/standards/sist/67bdb9e0-3e92-4d8b-8e8c-	18
4.12	Solar radiation	18
4.13	Tightness	18
4.14	Fire behaviour	19
5	Materials	19
6	Functional requirements and tests	19
6.1	General	
6.2	Type test	
6.2.1	Type test procedure	
6.2.2	Test benches for performing type tests	
6.2.3	Certification	_
6.2.4 6.3	ModificationsCompatibility	
6.4	Documentation	
6.5	Miscellaneous	
6.6	Function requirements and tests	
6.6.1	General	
6.6.2	Automatic braking	
6.6.3	Inexhaustibility	
6.6.4	Compensation of output pressure during brake application	
6.6.5	Operating pressure	
6.6.6	Released and stand-by position	
6.6.7 6.6.8	Brake application and brake release operations Maximum output pressure	
6.6.9	Braking modes	
6.6.10		
	Sone itivity	32

C C 42	Insensitivity	
	Control sensitivity	
	HysteresisQuick service function	
	Inshot function	
6.6.17		
6.6.18		
6.6.19 6.6.20	Protection against input pressure overcharge Energy supply management — General	
6.6.21	Charging of auxiliary (supply) reservoir and other braking devices of a vehicle	
6.6.22	Maximum supply pressure	49
6.6.23	Tightness	
6.6.24 6.6.25		
	·	
7	Type validation	
8	Designation	
9	Identification and marking	
9.1 9.2	Distributor valve Distributor-isolating device	
	A (normative) Single wagon test bench – Type A	
	B (normative) Handle for operating the distributor-isolating device	
Annex	C (normative) In-service trial ZA (informative) M Relationship between this European Standard and the Essential	58
	Requirements of EU Directive 2008/57/EC of the European Parliament and of the Council of 17 June 2008 on the interoperability of the rail system within the Community (Recast)	59
Aı) dele	eted text (A) SIST EN 15355;2008+A1:2010	
_	https://standards.iteh.ai/catalog/standards/sist/67bdb9e0-3e92-4d8b-8e8c-	GE
σιυποί	graphy3000d50d0d83/sist-en-15355-2008a1-2010	65
Figure	•	
	•	
Figure	1 — Distributor valve – Main function, block diagram	
Figure Figure	Distributor valve – Main function, block diagram Distributor valve – Main function, pressure diagram	8
Figure Figure	1 — Distributor valve – Main function, block diagram	8
Figure Figure Figure	Distributor valve – Main function, block diagram Distributor valve – Main function, pressure diagram	8 9
Figure Figure Figure Figure	Distributor valve – Main function, block diagram Distributor valve – Main function, pressure diagram	8 9 10
Figure Figure Figure Figure Figure	1 — Distributor valve – Main function, block diagram	8 9 10
Figure Figure Figure Figure Figure	1 — Distributor valve – Main function, block diagram	8 9 10 11
Figure Figure Figure Figure Figure Figure	1 — Distributor valve – Main function, block diagram	8 9 10 11
Figure Figure Figure Figure Figure Figure	1 — Distributor valve – Main function, block diagram	8 9 11 13 14
Figure Figure Figure Figure Figure Figure Figure	1 — Distributor valve – Main function, block diagram 2 — Distributor valve – Main function, pressure diagram	8 9 10 13 14 22
Figure Figure Figure Figure Figure Figure Figure Figure Figure	1 — Distributor valve – Main function, block diagram 2 — Distributor valve – Main function, pressure diagram. 3 — Service and emergency brake application. 4 — Emergency braking (emergency brake application). 5 — Brake release	8 9 11 13 14 22
Figure	1 — Distributor valve – Main function, block diagram 2 — Distributor valve – Main function, pressure diagram 3 — Service and emergency brake application 4 — Emergency braking (emergency brake application) 5 — Brake release 6 — Sensitivity respectively insensitivity areas and limits 7 — Inshot function, comparision between output pressure development with and without inshot function 8 — Test 6.6.3.2-1 9 — Test 6.6.3.2-2 recorded on the first single wagon 10 — Test 6.6.4-1 11 — Test 6.6.4-2	8 9 10 13 14 22 24
Figure	1 — Distributor valve – Main function, block diagram 2 — Distributor valve – Main function, pressure diagram	89111314222425
Figure	1 — Distributor valve – Main function, block diagram 2 — Distributor valve – Main function, pressure diagram 3 — Service and emergency brake application 4 — Emergency braking (emergency brake application) 5 — Brake release 6 — Sensitivity respectively insensitivity areas and limits 7 — Inshot function, comparision between output pressure development with and without inshot function 8 — Test 6.6.3.2-1 9 — Test 6.6.3.2-2 recorded on the first single wagon 10 — Test 6.6.4-1 11 — Test 6.6.4-2	8 9 11 13 14 22 24 25 26

Figure 15 — Test 6.6.8-1	30
Figure 16 — Test 6.6.10.2	32
Figure 17 — Test 6.6.11.2	33
Figure 18 — Test 6.6.12.2	34
Figure 19 — Test 6.6.13.2	35
Figure 20 — Test 6.6.14.2	36
Figure 21 — Test 6.6.16.2	37
Figure 22 — Test 6.6.17.3-1	38
Figure 23 — Test 6.6.17.5-2	39
Figure 24 — Test 6.6.17.7-3	39
Figure 25 — Test 6.6.18.2.1.2	41
Figure 26 — Test 6.6.18.2.1.4	43
Figure 27 — Test bench components for individual testing of distributor-isolating device	44
Figure 28 — Test 6.6.18.2.2.2	45
Figure 29 — Test 6.6.19-1	46
Figure 30 — Test 6.6.19-2	47
Figure 31 — Test 6.6.21 Figure 32 — Function of a distributor dump valve version D. PREVIEW	49
Figure 32 — Function of a distributor dump valve version 1	52
Figure A.1 — Test bench components(standards.iteh.ai)	56
Figure B.1 — Handle of the distributor-isolating device	57
SIST EN 15355:2008+A1:2010 https://standards.iteh.ai/catalog/standards/sist/67bdb9e0-3e92-4d8b-8e8c-	
Tables 3000d50d0d83/sist-en-15355-2008a1-2010	
Table 1 — Pollution requirements	
Table ZA.1 —Correspondence between this European Standard, the HS TSI RST published in th OJEU dated 26 March 2008 and Directive 2008/57/EC	
Table ZA.2 — Correspondence between this European Standard, the CR TSI RST Freight Wagon dated July 2006, published in the OJEU on 8 December 2006 and its intermediate revisio published in the OJEU on 14 February 2009 and Directive 2008/57/EC	n
Table ZA.3 — Correspondence between this European Standard, the CR LOC and PASS RST TS	
(final draft Rev 4.0 dated 24 November 2009) and Directive 2008/57/EC	62

Foreword

This document (EN 15355:2008+A1:2010) has been prepared by Technical Committee CEN/TC 256 "Railway applications", the secretariat of which is held by DIN.

This European Standard shall be given the status of a national standard, either by publication of an identical text or by endorsement, at the latest by April 2011, and conflicting national standards shall be withdrawn at the latest by April 2011.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. CEN [and/or CENELEC] shall not be held responsible for identifying any or all such patent rights.

This document includes Amendment 1, approved by CEN on 2010-08-30.

This document supersedes EN 15355:2008.

The start and finish of text introduced or altered by amendment is indicated in the text by tags [A].

This document has been prepared under a mandate given to CEN/CENELEC/ETSI by the European Commission and the European Free Trade Association, and supports essential requirements of EU Directive 2008/57/EC.

Teh STANDARD PREVIEW

For relationship with EU Directive 2008/57/EG, see informative Annex ZA, which is an integral part of this document. (4)

According to the CEN/CENELEC Internal Regulations, the national standards organizations of the following countries are bound to implement this European Standard: Austria, Belgium, Bulgaria, Croatia, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Switzerland and United Kingdom.

1 Scope

This European Standard applies to distributor valves and distributor-isolating devices.

The distributor valves contained in this European Standard are of graduated release type. Direct release types are not included.

Functionally they are regarded as not containing relay valves of any type, even if the relay valves are physically an integral part of the distributor valves.

This European Standard applies to both distributor-isolating devices mounted separate from the distributor valve and distributor-isolating devices integral with the distributor valve.

This European Standard specifies the requirements for the design, testing and quality assurance of distributor valves and distributor-isolating devices.

For interoperable freight wagons, these devices which are operated by compressed air according to EN 14198 are assessed according to the respective technical specification of interoperability.

2 Normative references

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

EN 14198, Railway applications — Braking — Requirements for the brake system of trains hauled by a locomotive

SIST EN 15355:2008+A1:2010

EN 14478:2005, Railway applications and Braking tale Generic Vocabilitary e0-3e92-4d8b-8e8c-3000d50d0d83/sist-en-15355-2008a1-2010

EN 60721-3-5:1997, Classification of environmental conditions — Part 3: Classification of groups of environmental parameters and their severities — Section 5: Ground vehicle installations (IEC 60721-3-5:1997)

EN 61373:1999, Railway applications — Rolling stock equipment — Shock and vibration tests (IEC 61373:1999)

EN ISO/IEC 17025, General requirements for the competence of testing and calibration laboratories (ISO/IEC 17025:2005)

ISO 8573-1, Compressed air — Part 1: Contaminants and purity classes

3 Symbols, and abbreviations, terms and definitions

For the purposes of this document, the terms and definitions given in EN 14478:2005 and the following symbols, abbreviations, terms and definitions apply.

3.1 Symbols

- t time
- p pressure

3.2 Abbreviations

- P Braking mode "passenger"
- G Braking mode "goods" (freight)

3.3 Terms and definitions

3.3.1

general

some of the curves in this clause are simplified, not showing the real pressure development. This is considered to be sufficient for the purpose of this clause

3.3.2

distributor valve

apparatus to control a pneumatic output pressure as an inverse function of the variation of an input pressure as the main function

NOTE 1 See Figure 1 and Figure 2.

NOTE 2 For the purpose of this European Standard, input pressure is considered to be the brake pipe pressure and output pressure is considered to be the brake cylinder pressure or the pilot pressure, which controls the brake cylinder pressure via a relay valve.



Key

1

SIST EN 15355:2008+A1:2010


https://standards.iteh.ai/catalog/standards/sist/67bdb9e0-3e92-4d8b-8e8c-3000d50d0d83/sist-en-15355-2008a1-2010

2 distributor valve

input pressure

3 output pressure

Figure 1 — Distributor valve – Main function, block diagram

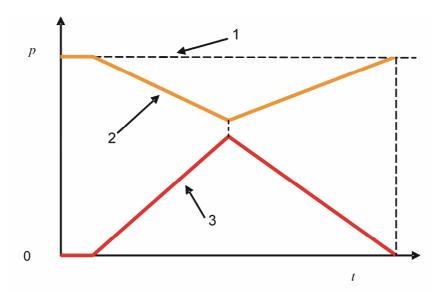

Key

- 1 operating pressure
- 2 input pressure
- 3 output pressure

Figure 2 — Distributor valve - Main function, pressure diagram


3.3.3

(standards.iteh.ai)

brake application

defined drop of input pressure (brake pipe pressure) in the range of pressure from the released position (operating pressure) to the pressure which causes the distributor valve to establish a corresponding output pressure level fed by the auxiliary (supply) reservoir (supply) re

NOTE See Figure 3.

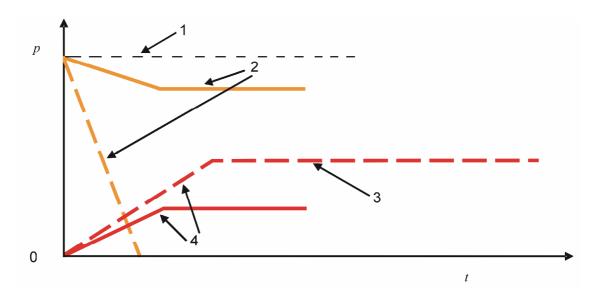

Key

- 1 operating pressure
- 2 input pressure
- 3 maximum output pressure
- 4 output pressure Teh STANDARD PREVIEW

service brake application

— — emergency brake application tandards.iteh.ai)

SIST EN 15355:2008+A1:2010

https://sFigure 3-haiService and emergency brake application

3000d50d0d83/sist-en-15355-2008a1-2010

3.3.3.1

service brake application

defined drop of input pressure (brake pipe pressure) beginning at the operating pressure level down to a value between the minimum reduction and the level of input pressure necessary for reaching maximum output pressure

NOTE This pressure drop causes the distributor valve to establish a corresponding output pressure.

3.3.3.2

graduated braking

incremental increase of the output pressure controlled by an incremental reduction of the input pressure in the range of pressure from released position to the pressure corresponding to a full service braking

3.3.3.3

full service brake application

defined drop of input pressure (brake pipe pressure) beginning at the operating pressure level down to the input pressure level which causes the distributor valve to establish maximum output pressure


3.3.3.4

emergency braking (emergency brake application)

increase of output pressure up to the maximum output pressure caused by a drop of input pressure starting with the value for operating pressure down to the level necessary for reaching the maximum output pressure in time t_1 , faster than the specified time for reaching the maximum output pressure, t_2

NOTE 1 This causes the distributor valve to operate at his maximum capacity, meeting the system requirements (see Figure 4).

NOTE 2 Usually during emergency braking the input pressure is reduced to 0.

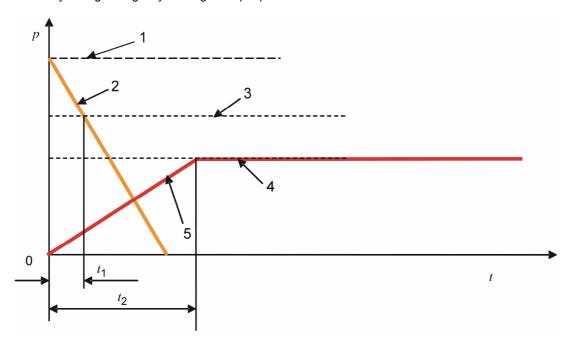

Key

- 1 operating pressure
- iTeh STANDARD PREVIEW
- 2 input pressure

- input pressure (standards.iteh.ai) input pressure level necessary for reaching maximum output pressure 3
- 4 maximum output pressure

SIST EN 15355:2008+A1:2010

- output pressure 5
- https://standards.iteh.ai/catalog/standards/sist/67bdb9e0-3e92-4d8b-8e8c-3000d50d0d83/sist-en-15355-2008a1-2010
- time to reach the input pressure necessary to establish maximum output pressure
- time to reach the maximum output pressure t_2


Figure 4 — Emergency braking (emergency brake application)

3.3.4

brake release

increase of input pressure (brake pipe pressure) after a brake application which causes the distributor valve to vent the output pressure to atmosphere

NOTE See Figure 5.

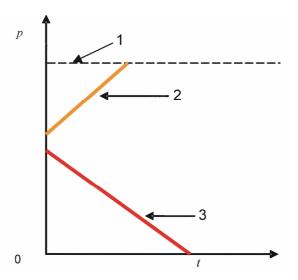

Key

- 1 operating pressure
- 2 input pressure
- 3 output pressure

Figure 5 — Brake release

3.3.4.1 iTeh STANDARD PREVIEW

full release

increase of input pressure (brake pipe pressure) after a brake application up to the operating pressure level, causing the complete venting of output pressure

SIST EN 15355:2008+A1:2010

3.3.4.2 https://standards.iteh.ai/catalog/standards/sist/67bdb9e0-3e92-4d8b-8e8c-

graduated release

3000d50d0d83/sist-en-15355-2008a1-2010

incremental reduction of output pressure by an incremental increase of input pressure in the range of pressure from full service braking to full release

3.3.5

brake application time

time for increasing output pressure from when it starts to rise from 0 bar up to 95% of the maximum output pressure, when input pressure is reduced from operating pressure level down to 0 bar with a time of less than 2 s for the first pressure drop of 1,5 bar

3.3.6

release time

time for reducing the output pressure from when it starts to fall from maximum down to 0,4 bar, when input pressure is increased up to the operating pressure level, starting from 1,5 bar below it, in less than 2 s

3.3.7

manual release

function which requires deliberate and intentional manual action in order to cancel brake application (to release the distributor valve) provided by one distributor valve

NOTE Manual release function can be achieved in two ways as defined in 3.3.7.1 and 3.3.7.2.

3.3.7.1

automatic manual release

operation requires short action by the command element after which the release function is completed automatically

3.3.7.2

non-automatic manual release

operation requires action by the command element during the entire process until the release function is completed

NOTE Stopping action before complete release results in incomplete release.

3.3.8

braking mode

state of the distributor valve in which it provides categories of application and release times for the output pressure, which a distributor valve might be able to provide depending on the operating conditions

3.3.8.1

braking mode "passenger" (short form "P")

braking mode characterized by fast brake application and release times specific for distributor valves used on trains for passenger traffic

3.3.8.2

braking mode "goods "("freight") (short form "G")

braking mode characterized by slow brake application and release times specific for distributor valves used on freight trains for slow speed

3.3.9

automatic braking

ability of the distributor valve to ensure the maximum output pressure in case of loss of input pressure

3.3.10

inexhaustibility

inexhaustibility capability to ensure a significant level of output pressure from the distributor valve under all operating conditions

SIST EN 15355:2008+A1:2010

iTeh STANDARD PREVIEW

https://standards.iteh.ai/catalog/standards/sist/67bdb9e0-3e92-4d8b-8e8c-

stand by position/ready for operation 3000d50d0d83/sist-en-15355-2008a1-2010

condition of the distributor valve in which braking can be initiated in compliance with all specifications

3.3.12

operating pressure

reference input pressure in full released position

3.3.13

sensitivity

ability of the distributor valve to supply an output pressure under certain conditions of input pressure reduction

NOTE 1 See Figure 6.


If a certain value is specified, it gives the minimum gradient of input pressure reduction which causes the distributor valve to react after a certain time.

3.3.14

insensitivity

ability of the distributor valve to avoid supplying an output pressure under certain conditions of input pressure reduction

NOTE If a certain value is specified it gives the maximum (fastest) gradient of the input pressure reduction which will not cause the distributor valve to react.

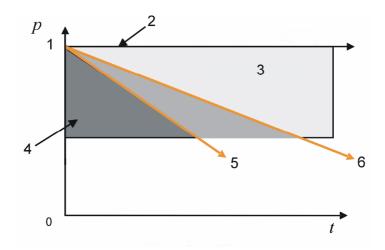

Key

- distributor valve shall react distributor valve may react distributor valve shall not react
- 1 input pressure
- 2 operating pressure
- 3 insensitivity area
- 4 sensitivity area
- 5 sensitivity limit

iTeh STANDAR6D insensitivity limit W

(standards.iteh.ai)

Figure 6 — Sensitivity respectively insensitivity areas and limits

3.3.15 SIST EN 15355:2008+A1:2010

quick service functions://standards.iteh.ai/catalog/standards/sist/67bdb9e0-3e92-4d8b-8e8c-

function of a distributor valve which allows, when applying the brake from stand-by and released position, the local fast venting of brake pipe pressure by a certain specified amount and at a certain specified gradient, to provide pneumatic brake signal transmission through a train

3.3.16

propagation time

time between the initiation of a brake application by the driver's brake handle and the beginning of brake cylinder pressure build-up on the last vehicle of a train

3.3.17

propagation speed

propagation time related to the length of brake pipe

NOTE The length of brake pipe is measured from the driver's brake valve to the end cock located at the end of the last vehicle of the train and does not take into consideration any branches.

3.3.18

operating pressure overcharge

build up of distributor valve input pressure above operating pressure to reduce the release time of a train and/or to adjust the distributors control reservoir pressure of all vehicles of a complete train

3.3.19

inshot function

function of the distributor valve which allows, when operated in the braking mode "goods" ("freight"), a faster increase of the output pressure at the beginning of brake application (t_1 against t_2 without inshot function). The purpose is quick build up of the necessary pressure for initiating the friction braking process (see Figure 7)