

INTERNATIONAL STANDARD



Fibre optic interconnecting devices and passive components – Basic test and measurement procedures –
Part 3-30: Examinations and measurements – ~~Polish angle and fibre position on single ferrule multifibre connectors~~ Endface geometry of rectangular ferrule

IEC 61300-3-30:2020

<https://standards.iteh.ai/catalog/standards/iec/6c7e4349-3b62-435f-bfb0-48615d0cd319/iec-61300-3-30-2020>





THIS PUBLICATION IS COPYRIGHT PROTECTED
Copyright © 2020 IEC, Geneva, Switzerland

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either IEC or IEC's member National Committee in the country of the requester. If you have any questions about IEC copyright or have an enquiry about obtaining additional rights to this publication, please contact the address below or your local IEC member National Committee for further information.

IEC Central Office
3, rue de Varembe
CH-1211 Geneva 20
Switzerland

Tel.: +41 22 919 02 11
info@iec.ch
www.iec.ch

About the IEC

The International Electrotechnical Commission (IEC) is the leading global organization that prepares and publishes International Standards for all electrical, electronic and related technologies.

About IEC publications

The technical content of IEC publications is kept under constant review by the IEC. Please make sure that you have the latest edition, a corrigendum or an amendment might have been published.

IEC publications search - webstore.iec.ch/advsearchform

The advanced search enables to find IEC publications by a variety of criteria (reference number, text, technical committee,...). It also gives information on projects, replaced and withdrawn publications.

IEC Just Published - webstore.iec.ch/justpublished

Stay up to date on all new IEC publications. Just Published details all new publications released. Available online and once a month by email.

IEC Customer Service Centre - webstore.iec.ch/csc

If you wish to give us your feedback on this publication or need further assistance, please contact the Customer Service Centre: sales@iec.ch.

Electropedia - www.electropedia.org

The world's leading online dictionary on electrotechnology, containing more than 22 000 terminological entries in English and French, with equivalent terms in 16 additional languages. Also known as the International Electrotechnical Vocabulary (IEV) online.

IEC Glossary - std.iec.ch/glossary

67 000 electrotechnical terminology entries in English and French extracted from the Terms and Definitions clause of IEC publications issued since 2002. Some entries have been collected from earlier publications of IEC TC 37, 77, 86 and CISPR.

International
Standards
IEC Standards
Document Preview

[IEC 61300-3-30:2020](https://standards.iteh.ai/catalog/standards/iec/6c7e4349-3b62-435f-bfb0-48615d0cd319/iec-61300-3-30-2020)

<https://standards.iteh.ai/catalog/standards/iec/6c7e4349-3b62-435f-bfb0-48615d0cd319/iec-61300-3-30-2020>



IEC 61300-3-30

Edition 2.0 2020-12
REDLINE VERSION

INTERNATIONAL STANDARD



Fibre optic interconnecting devices and passive components – Basic test and measurement procedures –
Part 3-30: Examinations and measurements – ~~Polish angle and fibre position on single ferrule multifibre connectors~~ Endface geometry of rectangular ferrule

[IEC 61300-3-30:2020](https://standards.iteh.ai/catalog/standards/iec/6c7e4349-3b62-435f-bfb0-48615d0cd319/iec-61300-3-30-2020)

<https://standards.iteh.ai/catalog/standards/iec/6c7e4349-3b62-435f-bfb0-48615d0cd319/iec-61300-3-30-2020>

INTERNATIONAL
ELECTROTECHNICAL
COMMISSION

ICS 33.180.20

ISBN 978-2-8322-9205-1

Warning! Make sure that you obtained this publication from an authorized distributor.

CONTENTS

FOREWORD.....	4
1 Scope.....	6
2 Normative references	6
3 Terms and definitions	6
4 General description	6
5 Measurement regions	7
6 Apparatus.....	8
6.1 General.....	9
6.2 Ferrule holder	9
6.3 Positioning stage	9
6.4 Three-dimensional interferometry analyser	9
7 Procedure.....	10
Measurement regions	10
Method for analysis.....	10
8 Details to be specified	15
Annex A (informative normative) Formulae for calculating approximating the end face geometry	17
A.1 Approximation of the ferrule surface.....	17
A.2 Approximation of the fibre tip radii.....	17
Annex B (normative) Surface angle sign convention (shown graphically)	18
Annex C (normative) Fibre counting convention (shown graphically).....	20
Annex D (normative) Minus coplanarity and fibre plane angle determination	21
D.1 Overview.....	21
D.1.1 General	21
D.1.2 Minus coplanarity.....	21
D.1.3 Fibre plane x-axis and y-axis angles	21
D.2 Method for analysis.....	21
D.2.1 Single row ferrules.....	21
D.2.2 Multi-row ferrules.....	21
D.3 Documentation.....	22
Annex E (normative) Calculation of core dip using the paraboloid method.....	23
E.1 General.....	23
E.2 Method for analysis.....	23
Annex F (normative) Calculation of <i>GL</i> parameter	24
F.1 General.....	24
F.2 Method for analysis.....	24
Bibliography.....	26
Figure 1 – Three-dimensional interferometry analyser.....	8
Figure 2 – Measurement regions on ferrule.....	9
Figure 3 – Multimode fibre core dip regions	9
Figure 1 – Measurement regions on ferrule and fibre	8
Figure 2 – Measurement setup.....	9

Figure B.1 – Surface angle sign convention	19
Figure C.1 – Fibre counting convention	20
Figure E.1 – Paraboloid fit to a fibre endface exhibiting core dip	23
Table 1 – Ferrule measurement areas	8
Table 2 – Multimode core dip areas	25
Table 1 – Ferrule measurement areas and parameters	8
Table F.1 – Parameter constants for 4-fibre ferrules	25
Table F.2 – Parameter constants for 8-fibre ferrules	25
Table F.3 – Parameter constants for 12-fibre ferrules	25

iTeh Standards
(<https://standards.iteh.ai>)
Document Preview

[IEC 61300-3-30:2020](#)

<https://standards.iteh.ai/catalog/standards/iec/6c7e4349-3b62-435f-bfb0-48615d0cd319/iec-61300-3-30-2020>

INTERNATIONAL ELECTROTECHNICAL COMMISSION

FIBRE OPTIC INTERCONNECTING DEVICES AND PASSIVE COMPONENTS – BASIC TEST AND MEASUREMENT PROCEDURES –

Part 3-30: Examinations and measurements – ~~Polish angle and fibre position on single ferrule multifibre connectors~~ Endface geometry of rectangular ferrule

FOREWORD

- 1) The International Electrotechnical Commission (IEC) is a worldwide organization for standardization comprising all national electrotechnical committees (IEC National Committees). The object of IEC is to promote international co-operation on all questions concerning standardization in the electrical and electronic fields. To this end and in addition to other activities, IEC publishes International Standards, Technical Specifications, Technical Reports, Publicly Available Specifications (PAS) and Guides (hereafter referred to as "IEC Publication(s)"). Their preparation is entrusted to technical committees; any IEC National Committee interested in the subject dealt with may participate in this preparatory work. International, governmental and non-governmental organizations liaising with the IEC also participate in this preparation. IEC collaborates closely with the International Organization for Standardization (ISO) in accordance with conditions determined by agreement between the two organizations.
- 2) The formal decisions or agreements of IEC on technical matters express, as nearly as possible, an international consensus of opinion on the relevant subjects since each technical committee has representation from all interested IEC National Committees.
- 3) IEC Publications have the form of recommendations for international use and are accepted by IEC National Committees in that sense. While all reasonable efforts are made to ensure that the technical content of IEC Publications is accurate, IEC cannot be held responsible for the way in which they are used or for any misinterpretation by any end user.
- 4) In order to promote international uniformity, IEC National Committees undertake to apply IEC Publications transparently to the maximum extent possible in their national and regional publications. Any divergence between any IEC Publication and the corresponding national or regional publication shall be clearly indicated in the latter.
- 5) IEC itself does not provide any attestation of conformity. Independent certification bodies provide conformity assessment services and, in some areas, access to IEC marks of conformity. IEC is not responsible for any services carried out by independent certification bodies.
- 6) All users should ensure that they have the latest edition of this publication.
- 7) No liability shall attach to IEC or its directors, employees, servants or agents including individual experts and members of its technical committees and IEC National Committees for any personal injury, property damage or other damage of any nature whatsoever, whether direct or indirect, or for costs (including legal fees) and expenses arising out of the publication, use of, or reliance upon, this IEC Publication or any other IEC Publications.
- 8) Attention is drawn to the Normative references cited in this publication. Use of the referenced publications is indispensable for the correct application of this publication.
- 9) Attention is drawn to the possibility that some of the elements of this IEC Publication may be the subject of patent rights. IEC shall not be held responsible for identifying any or all such patent rights.

This redline version of the official IEC Standard allows the user to identify the changes made to the previous edition. A vertical bar appears in the margin wherever a change has been made. Additions are in green text, deletions are in strikethrough red text.

International Standard IEC 61300-3-30 has been prepared by subcommittee 86B: Fibre optic interconnecting devices and passive components, of IEC technical committee 86: Fibre optics.

This second edition cancels and replaces the first edition published in 2003. This edition constitutes a technical revision.

This edition includes the following significant technical changes with respect to the previous edition:

- a) measurement of the individual fibre tip radii;
- b) introduction of the geometry limit (GL) metric;
- c) introduction of the minus coplanarity metric;
- d) new method for measuring the core dips;
- e) all measurement regions are now identical for MM and SM fibres;
- f) the ferrule surface angle sign convention has been changed.

The text of this International Standard is based on the following documents:

FDIS	Report on voting
86B/4357/FDIS	86B/4378/RVD

Full information on the voting for the approval of this International Standard can be found in the report on voting indicated in the above table.

This document has been drafted in accordance with the ISO/IEC Directives, Part 2.

A list of all parts in the IEC 61300 series, published under the general title *Fibre optic interconnecting devices and passive components – Basic test and measurement procedures*, can be found on the IEC website.

The committee has decided that the contents of this document will remain unchanged until the stability date indicated on the IEC website under "<http://webstore.iec.ch>" in the data related to the specific document. At this date, the document will be

- reconfirmed,
- withdrawn,
- replaced by a revised edition, or
- amended.

IMPORTANT – The 'colour inside' logo on the cover page of this publication indicates that it contains colours which are considered to be useful for the correct understanding of its contents. Users should therefore print this document using a colour printer.

FIBRE OPTIC INTERCONNECTING DEVICES AND PASSIVE COMPONENTS – BASIC TEST AND MEASUREMENT PROCEDURES –

Part 3-30: Examinations and measurements – ~~Polish angle and fibre position on single ferrule multifibre connectors~~ Endface geometry of rectangular ferrule

1 Scope

This part of IEC 61300 describes a ~~procedure to assess~~ method of measuring the end face geometry ~~in guide pin based multifibre ferrules and connectors~~ of rectangular multifibre ferrules having an IEC defined optical interface. The primary attributes are fibre position relative to the end face, either ~~undercut~~ withdrawal or protrusion, end face angle relative to the guide pin bores, fibre tip radii and core dip for multimode fibres.

2 Normative references

~~The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.~~

There are no normative references in this document.

3 Terms and definitions

IEC 61300-3-30:2020

<https://standards.iteh.ai/catalog/standards/iec/6c7e4349-3b62-435f-bfb0-48615d0cd319/iec-61300-3-30-2020>

No terms and definitions are listed in this document.

ISO and IEC maintain terminological databases for use in standardization at the following addresses:

- IEC Electropedia: available at <http://www.electropedia.org/>
- ISO Online browsing platform: available at <http://www.iso.org/obp>

4 General description

Guide pin based multifibre connectors ~~plugs~~ typically have a rectangular end face with a long axis and a short axis. Ideally, a flat polish is desired on the end face with the fibres protruding slightly and all in the same plane to assure physical contact of the fibre cores when two connectors are intermated. In practice, the end face typically has two different curvatures across the surface along the long and short axis. Since mated ferrules are aligned by pins in the guide holes, the end face of the ferrule ~~must~~ shall be properly oriented (~~X and Y angle~~ S_x and S_y angles) with respect to the guide holes to achieve positive contact. The end face angle S_x in the x axis and the end face angle S_y in the y axis are measured by finding the best fit plane based on a percentage of the highest points in a specified region of interest. The highest points typically show the greatest modulation from an interferometric standpoint. This allows for more robust measurements and greater repeatability between different interferometers.

The angle of the best fit plane is calculated by comparing it to the reference plane which is perpendicular to the axis of each guide hole. ~~The fibre protrusion, (+p), or undercut, (-p), of the~~

~~fibres is a planar height defined as the distance between the fibre end face and the best fit planar surface previously described. Core dip is specific to multimode fibres because the large core is softer than the edge of the fibre and tends to polish away faster. Core dip is calculated by subtracting the average height of the core area from the average height of an annular area near the edge of the fibre.~~ The height H (positive is a protrusion) of the fibres is a planar height defined as the distance between the fibre end face and the best fit plane. Core dip is of more relevance to multimode fibres because the large core is softer than the cladding of the fibre and tends to polish away faster. Core dip is calculated using the paraboloid method described in Annex E.

One method is described for ~~this procedure~~ measuring polish angle and fibre position for a single ferrule multifibre connector by analysing the endface with a three-dimensional interferometry type surface analyser.

5 Measurement regions

The following regions shall be defined on the ferrule end face.

- a) Region of interest (ROI): the ROI is set on the ferrule surface and defined by a rectangular region having a long axis (x axis) of length, L , and a short axis (y axis) of height, H . The region of interest is chosen to cover the intended contact zone of the ferrule end face when the ferrules are mated. The region of interest shall be centred on the fibre array. See Figure 1. Refer to Table 1 for measurement areas to be used for different connectors.
- b) Extracting region: the extracting region, which includes the fibre end face regions and the associated adhesive regions, is defined by circles having a diameter E , centred on each fibre;
- c) Averaging region: the averaging region is set on the fibre surfaces to be used to calculate the fibre height, and is defined by a circle having a diameter F . The averaging region is the same for singlemode (SM) fibres and multimode (MM) fibres.
- d) Core dip region: the core dip region is set on the fibre surfaces to be used to calculate the fibre core-dip using the paraboloid method, and is defined by circles having a diameter CD , centred on each fibre.

Core dip adjustment constant: the calculated core dip amplitude following the fit of a paraboloid function to the fibre endface is adjusted by means of constant R_1 .

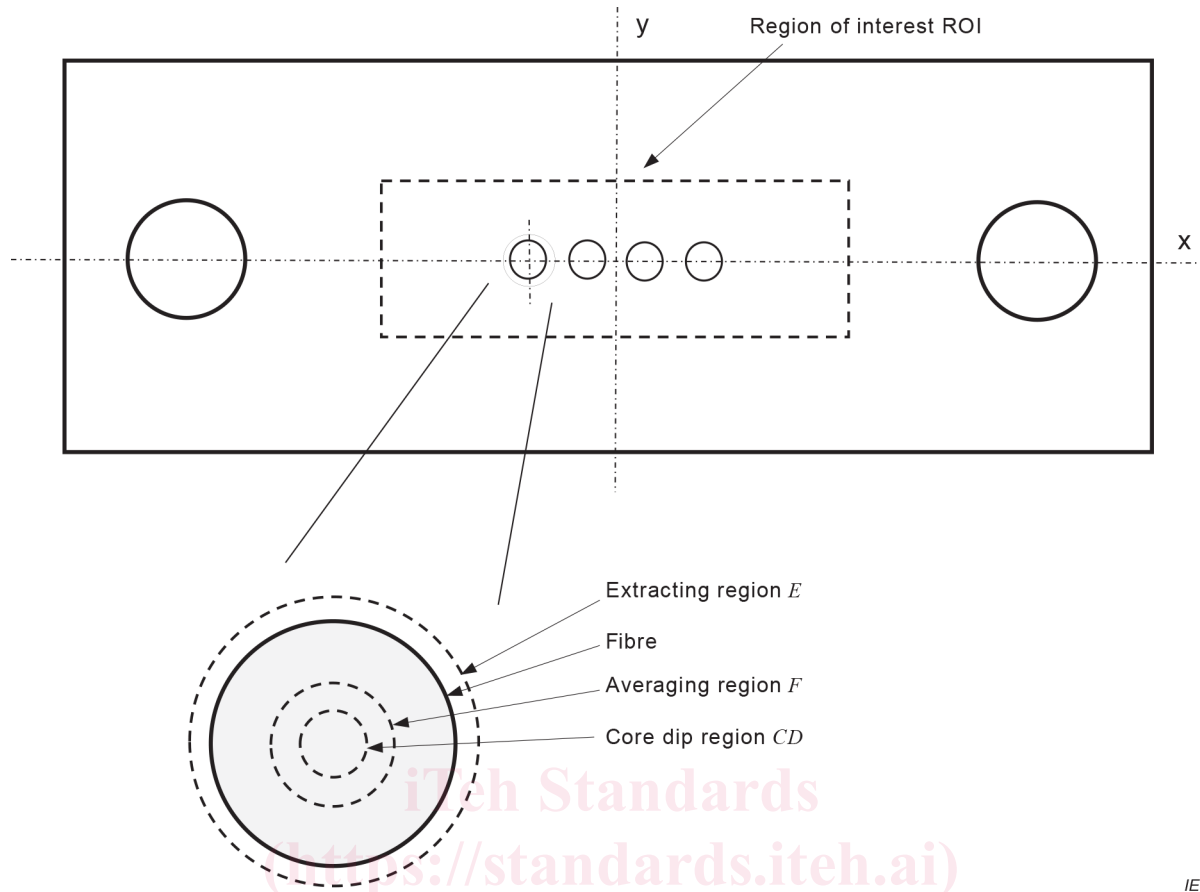


Figure 1 – Measurement regions on ferrule and fibre

Table 1 – Ferrule measurement areas and parameters

Ferrule type (variant number) ^a	Description	Region of interest, ROI (L × H) mm ²	% top pixels excluded	Next % top pixels used	Extracting region (diameter E) mm	Averaging region-SM + MM (diameter F) mm	Core dip fitting region (diameter CD) mm	Core dip adjustment constant R ₁ (see Annex E)
x104	MT-04	2,900 × 0,675	3	20	0,140	0,05	0,03	0,03
x108	MT-08	2,900 × 0,675	3	20	0,140	0,05	0,03	0,03
x112	MT-12	2,900 × 0,675	3	20	0,140	0,05	0,03	0,03
x124	MT-24	2,900 × 1,160	3	20	0,140	0,05	0,03	0,03
1002	MiniMT	0,900 × 0,675	3	20	0,140	0,05	0,03	0,03

^a The x defines 1 for polyphenylene sulfide (PPS) resin ferrule materials and 2 for thermoset materials; the second digit represents 2,45 mm × 4,4 mm with 0 and 2,45 mm × 6,4 mm with 1; and the last two digits designates the number of fibres (see Table 1 of IEC 61755-3-31:2015 and Table 1 of IEC 61755-3-32:2015).


6 Apparatus

~~Three-dimensional surface analysis by an interferometer system.~~

~~The apparatus shown in Figure 1 consists of a suitable ferrule holder, a positioning stage and a three-dimensional interferometry analyser capable of analyzing rough surfaces and step heights.~~

6.1 General

The apparatus shown in Figure 2 consists of a positioning stage, a ferrule holder, an interferometric video microscope, a Personal Computer based fringe interpretation unit and a monitor to view the ferrule endface interferogram and display the analysis results.

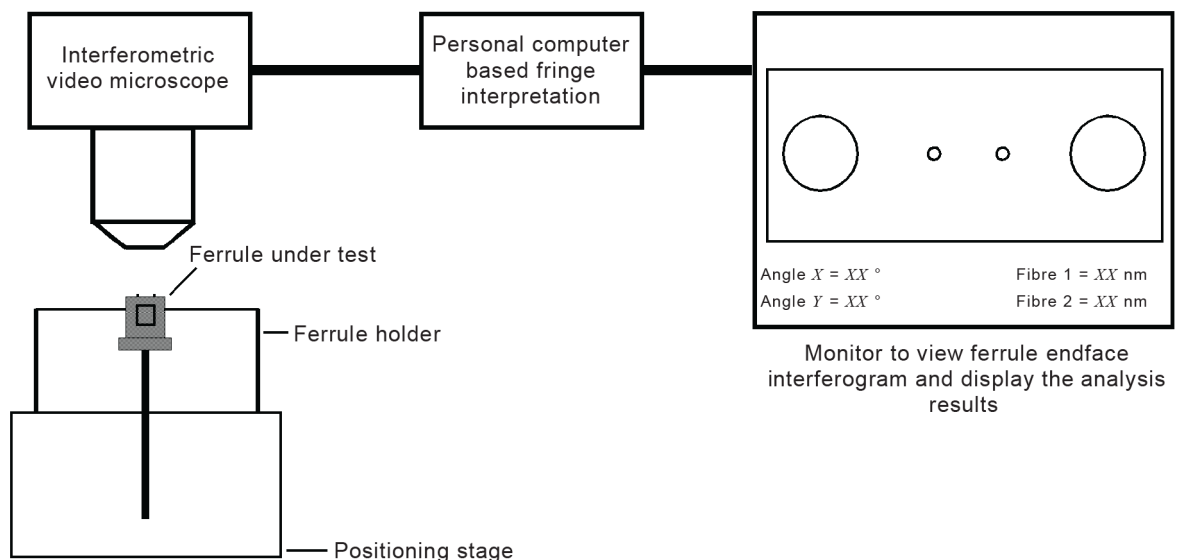

IEC

Figure 2 – Measurement setup

6.2 Ferrule holder

The ferrule holder is a suitable device to hold the ferrule in a fixed position, either vertical or horizontal, or in a tilted position in the case of an angled ferrule type. Some method ~~must~~ shall be used to ~~reference~~ determine the axis of each guide hole and the average plane perpendicular ~~angle to them, which shall be considered the ideal end face angle to the guide hole axes. This will typically entail the use of guide pins inserted into the guide holes or similar devices to transfer the axis of each guide hole to a measurable surface angle.~~ This plane shall be considered as the reference plane *P* for reference to subsequent measurements.

6.3 Positioning stage

The ferrule holder is fixed to the positioning stage, which shall enable the ferrule holder to be moved to the appropriate position. The stage shall have ~~enough~~ sufficient rigidity ~~so as~~ to allow measurement of the ferrule end face parameters within the required ~~accuracy~~ uncertainties detailed in 6.4.

6.4 Three-dimensional interferometry analyser

The three-dimensional interferometry analyser shall have the ability to measure the fibre heights on the ferrule end face with an ~~accuracy of~~ uncertainty better than ± 50 nm and the core dips with an uncertainty better than ± 20 nm. The analyser shall consist of an interferometric video microscope unit, a Personal Computer based fringe interpretation (surface data processing) unit and a monitor.

The ~~interferometric video~~ microscope unit shall consist of an interference microscope, a phase shift actuator, an image detector and ~~a frame grabber~~ an image acquisition and processing setup. The interference microscope equipped with an objective is arranged so as to view the end face of the ferrule.

~~The surface data processing unit shall be able to process the surface height information so as to measure the radius of curvature in the X and Y axis, the angle of the end face in the X and~~

~~Y axis and the protrusion or undercut of the fibres from the best fit planar surface. A flatness deviation shall be calculated to determine if the connector has too great a curvature to consider the surface a plane.~~

The following parameters of the interference microscope shall be calibrated:

- optical magnification of the microscope;
- Z travel of the phase shift actuator;
- ferrule holder tilt angle in the case of an angled ferrule type.

The surface data processing unit shall be able to process the surface height information so as to measure the following parameters:

- ferrule surface x-angle S_x (refer to Figure B.1 a) for the sign convention);
- ferrule surface y-angle S_y (refer to Figure B.1 b) for the sign convention);
- fibre array minus coplanarity CF ;
- fibre plane x-angle G_x ;
- fibre plane y-angle G_y ;
- fibre tip spherical radii RF (some conditions apply; see Clause 7, m); refer to Figure C.1 for fibre counting convention);
- core dip CD (some conditions apply; see Clause 7, l); refer to Figure C.1 for fibre counting convention);
- geometry limit GL ;
- ferrule surface x-radius R_x ;
- ferrule surface y-radius R_y ;
- fibre height H (refer to Figure C.1 for fibre counting convention);
- adjacent fibre height differential HA (refer to Figure C.1 for fibre counting convention);

The monitor shall display the measured and calculated surface profiles along each axis.

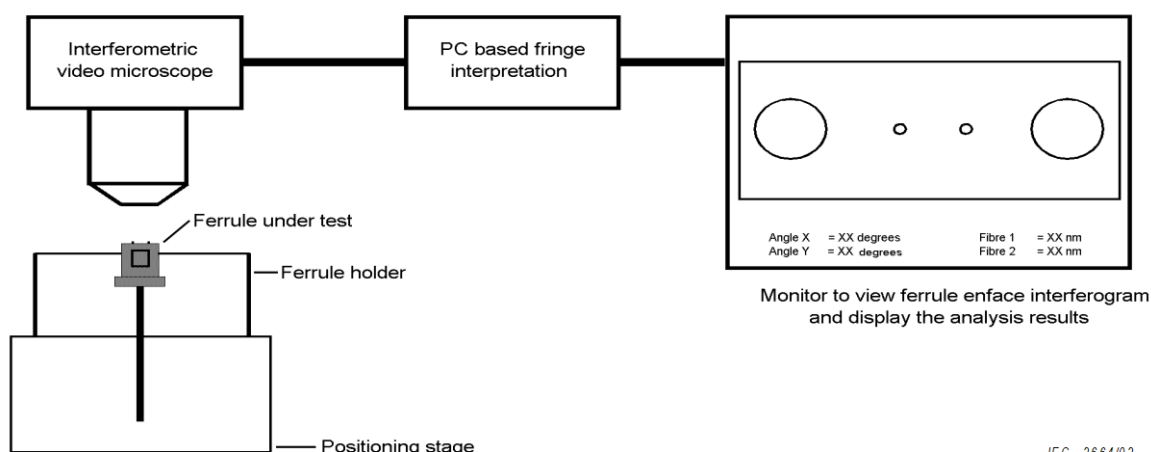



Figure 1 – Three-dimensional interferometry analyser

7 Procedure

5.1 Measurement regions


~~The following regions shall be defined on the ferrule end face for the measurement.~~

- a) ~~Region of interest (ROI): the ROI is set on the ferrule surface and defined by a rectangular region having a long axis (X axis) of length, L , and a short axis (Y axis) of height, H . The region of interest is chosen to cover the intended contact zone of the ferrule end face when the ferrules are mated. The region of interest shall be centred on the fibre array. See Figure 2. Refer to Table 1 for measurement areas to be used for different connectors.~~
- b) ~~Extracting region: the extracting region, which includes the fibre end face regions and the associated adhesive regions, are defined by circles having a diameter E , centred on each fibre;~~
- c) ~~Fitting region: the fitting region is the region of interest excluding the extracting regions and is the data set used in making calculations for the ferrule surface. It is assumed that the surface points on the ferrule outside the fitting region will be lower than the surface points in the fitting region.~~
- d) ~~Averaging region: the averaging region is set on the fibre surfaces to be used to calculate the fibre height, and is defined by a circle having a diameter F . The averaging region is different for singlemode (SM) fibres and multimode (MM) fibres.~~
- e) ~~To assess core dip in MM fibres, two averaging regions are used. The first is the core fitting region with a diameter D_{core} . The second region is an annular area bound by a maximum annular ring of diameter D_{max} and a minimum annular ring of D_{min} . See Figure 3. Refer to Table 2 for measurement areas.~~

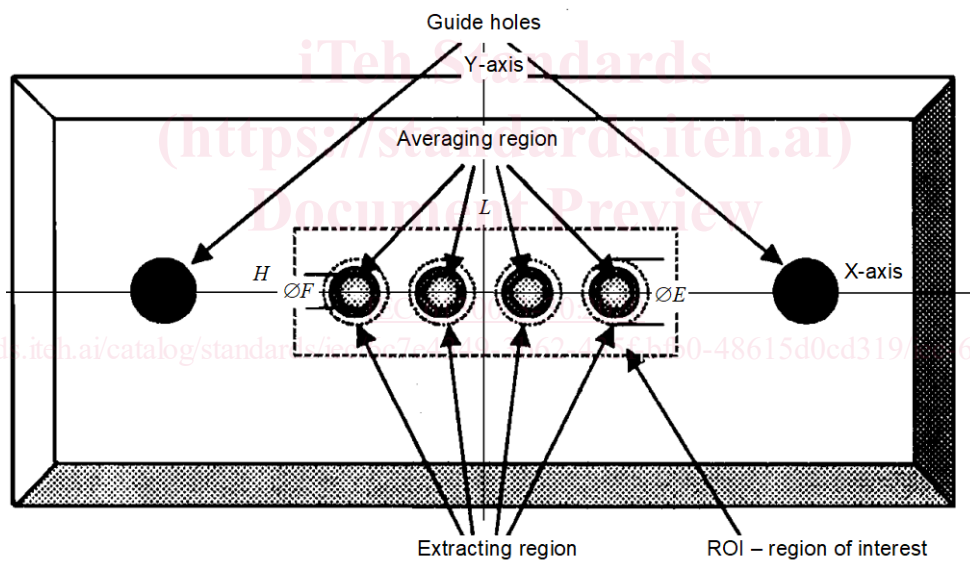

IEC 2665/02

Figure 2 – Measurement regions on ferrule

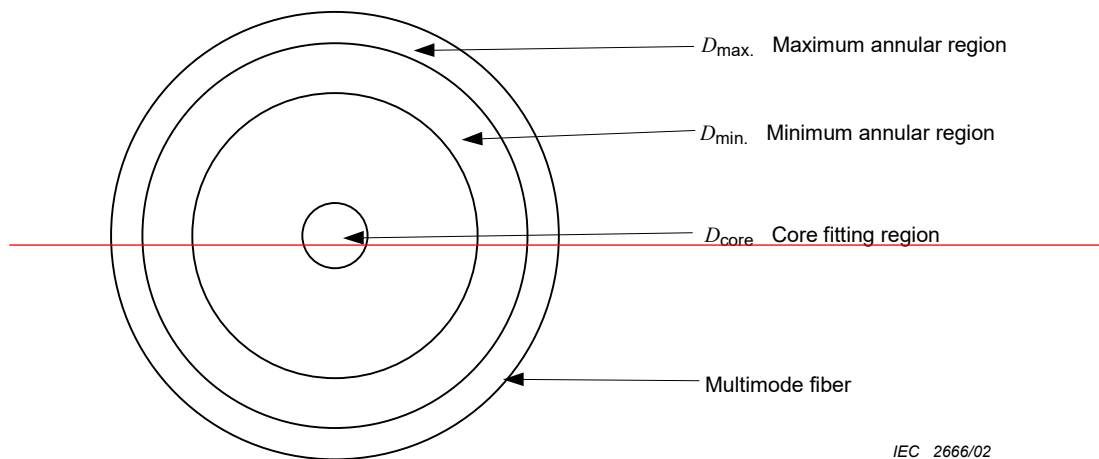

IEC 2666/02


Figure 3 – Multimode fibre core dip regions

5.2 Method for analysis


5.2.1 Affix the ferrule in the ferrule holder so that the end face is held sufficiently steady with respect to the interferometer.

5.2.2 Focus the microscope and/or the sample until the fringes are in position to scan the surface.


5.2.3 Map the surface of the ferrule. To create data set "A", use only the pixels contained within the ROI.

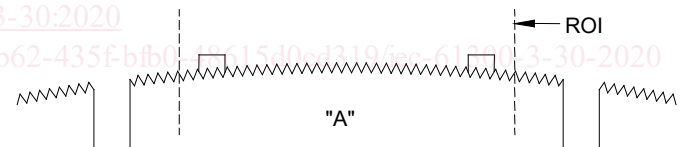


5.2.4 Create data set "B" by removing the extraction regions around the fibres.

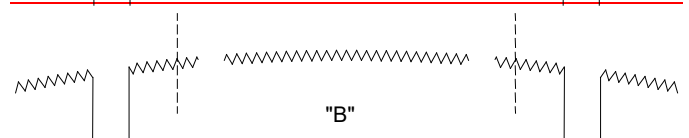

5.2.5 Create surface "C" by fitting a biparabolic curve to data set "B". (See Annex A for a suggested curve fitting routine.)

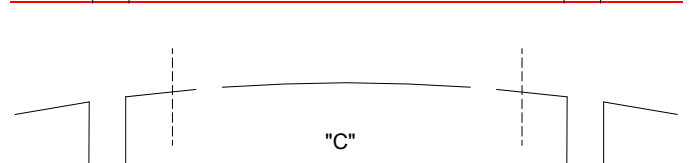

5.2.6 Create data set "D" by subtracting surface "C" from data set "B".

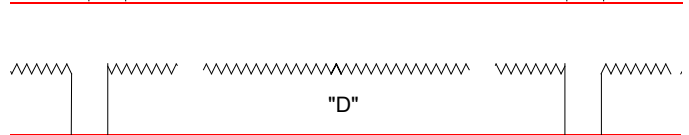

5.2.7 Create data set "E" by removing the highest 3 % of all pixels in data set "D". This removes any small points that are extremely high compared to the others. It is assumed these will break off when the connectors contact.

