



SLOVENSKI STANDARD
oSIST prEN 50438:2012
01-oktober-2012

Nadomešča:
SIST EN 50438:2008

Zahteve za vzporedno vezavo mikro generatorjev z javnim nizkonapetostnim razdelilnim omrežjem

Requirements for the connection of micro-generators in parallel with public low-voltage distribution networks

Anforderungen für den Anschluss von Klein-Generatoren an das öffentliche Niederspannungsnetz

Prescriptions pour le raccordement de micro-générateurs en parallèle avec les réseaux publics de distribution à basse tension

Ta slovenski standard je istoveten z: prEN 50438:2012

ICS:

29.160.20 Generatorji Generators

oSIST prEN 50438:2012 **en**

English version

Requirements for the connection of micro-generators in parallel with public low-voltage distribution networks

Prescriptions pour le raccordement de micro-générateurs en parallèle avec les réseaux publics de distribution à basse tension

Anforderungen für den Anschluss von Klein-Generatoren an das öffentliche Niederspannungsnetz

This draft European Standard is submitted to CENELEC members for CENELEC enquiry.
Deadline for CENELEC: 2013-01-11.

It has been drawn up by CLC/TC 8X.

If this draft becomes a European Standard, CENELEC members are bound to comply with the CEN/CENELEC Internal Regulations which stipulate the conditions for giving this European Standard the status of a national standard without any alteration.

<http://www.cenelec.eu> This draft European Standard was established by CENELEC in three official versions (English, French, German). A version in any other language made by translation under the responsibility of a CENELEC member into its own language and notified to the CEN-CENELEC Management Centre has the same status as the official versions.

CENELEC members are the national electrotechnical committees of Austria, Belgium, Bulgaria, Croatia, Cyprus, the Czech Republic, Denmark, Estonia, Finland, Former Yugoslav Republic of Macedonia, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, the Netherlands, Norway, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Switzerland, Turkey and the United Kingdom.

Recipients of this draft are invited to submit, with their comments, notification of any relevant patent rights of which they are aware and to provide supporting documentation.

Warning : This document is not a European Standard. It is distributed for review and comments. It is subject to change without notice and shall not be referred to as a European Standard.

CENELEC

European Committee for Electrotechnical Standardization
Comité Européen de Normalisation Electrotechnique
Europäisches Komitee für Elektrotechnische Normung

Management Centre: Avenue Marnix 17, B - 1000 Brussels

Contents

Foreword	4
1 Scope	5
2 Normative references	5
3 Terms and definitions	6
4 Connection requirements	9
4.1 The electrical installation	9
4.1.1 General	9
4.1.2 Over-current protection	9
4.1.3 Earthing	9
4.2 Frequency response to overfrequency	9
4.3 Interface protection	10
4.3.1 General	10
4.3.2 Interface protection settings	11
4.3.3 Automatic reconnection	12
4.3.4 Synchronisation	12
5 Power quality	13
5.1 DC injection	14
5.2 Power factor	14
6 Operation and safety of the micro-generator	14
6.1 General	14
6.2 Safety	14
6.3 Information plate	14
6.4 Labelling	15
6.5 Maintenance and routine testing	15
7 Commissioning	15
Annex A (normative) Interface protection settings, national deviations	17
A.1 General	17
A.2 AT – Austria	17
A.3 BE – Belgium	18
A.4 CY – Cyprus	18
A.5 CZ – Czech Republic	19
A.6 DE – Germany	19
A.7 DK – Denmark	20
A.8 ES – Spain	21
A.9 FI – Finland	22
A.10 FR – France	22
A.11 GB – United Kingdom	23
A.12 IE – Ireland	24
A.13 IT – Italy	25
A.14 NL – The Netherlands	25
A.15 NO – Norway	26
A.16 PL – Poland	26
A.17 SE – Sweden	27

A.18	SI – Slovenia	28
Annex B	(informative) Notification sheets.....	29
B.1	General	29
B.2	Application for connection of micro-generators.....	29
B.3	Notification of micro-generator decommissioning	32
Annex C	(informative) Interface protection – Compliance type testing general arrangements	33
C.1	General	33
C.2	Compliance testing	33
C.3	Type testing of the interface protection	33
C.4	Type testing	36
Annex D	(informative) Type certification test results sheet	38
Annex E	(informative) Commissioning.....	42
E.1	Installation.....	42
E.2	Notification procedure.....	42
E.3	Decommission arrangements.....	42
E.4	Replacement arrangements	43
Annex F	(normative) Countries allowing extension of the scope > 16 A.....	44
F.1	General	44
F.2	CY – Cyprus	44
F.3	FI – Finland.....	44
F.4	IE – Ireland	44
Annex G	(informative) Abbreviations.....	45
Annex H	(informative) A-deviations	46
Bibliography		47
Figure 1: Explanatory diagram for Operate time.....		8
Figure 2 – Example of a warning label both for size and content		15
Figure C.1 – LoM test arrangement		35
Figure C.2 – Power factor test arrangement.....		36
Table 1 Standard settings for frequency response to overfrequency		10
Table 2 – Default interface protection performance		12
Table 3 – Harmonics and flicker emission standards		13

Foreword

This document [prEN 50438:2012] has been prepared by CLC/TC 8X "System aspects of electrical energy supply".

This document is currently submitted to the Enquiry.

This document will supersede EN 50438: 2007.

prEN 50438:2012 includes the following significant technical changes with respect to EN 50438: 2007:

- introduction of a power reduction capability in case of over frequency;
- update of national protection parameters settings in the Annex A;
- modification of tests for the verification of interface protections (voltage and frequency);
- modification of the test for islanding detection;
- addition of a test for direct current injection.

iTeh **STANDARD PREVIEW**
(standards.iteh.ai)

SIST EN 50438:2014

<https://standards.iteh.ai/catalog/standards/sist/081f4b6c-1334-45ca-98ef-bc783e98ae/sist-en-50438-2014>

1 Scope

This European Standard specifies technical requirements for connection and operation of fixed installed micro-generators and their protection devices, irrespective of the micro-generators primary source of energy, in parallel with public low-voltage distribution networks, where micro-generation refers to equipment rated up to and including 16 A per phase, single or multi phase 230/400 V or multi phase 230 V (phase-to-phase voltage).

In some countries this document may be applied to generators with higher ratings used mostly in domestic and small commercial installations. These countries are listed in Annex F.

Whenever the scope is extended to equipment rated greater than 16 A per phase additional standards could be applicable.

The electrical interface is the principal focus and this includes the method of connection, the settings and protection requirements for connection, the operation of the electrical interface under normal conditions, emergency shutdown, distribution network-independent operation, start-up and distribution network synchronisation.

The provisions of this European Standard are not intended to ensure by themselves the safety of DNO personnel or their contracted parties.

The intention of this European Standard is to ensure that the micro-generator satisfies appropriate provisions for

- the requirements of the DNO,
- information to electricians working in the electrical installation
- quality of supply.

The following aspects are included in the scope:

- all micro-generation technologies are applicable.

The following aspects are excluded from the scope:

- multiple units that for one installation, in aggregate, exceed 16 A;
- issues of revenue rebalancing, metering or other commercial matters;
- generators never working in parallel with the public low-voltage distribution network;
- requirements related to the primary energy source e.g. matters related to gas fired generator units;
- intended network independent operation.

NOTE If independent operation is intended, generally preliminary agreement of the DNO shall be obtained, however this is out of the scope of this document. Specific additional requirements most likely could be applicable.

2 Normative references

The following documents, in whole or in part, are normatively referenced in this document and are indispensable for its application. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

EN 50110 series, Operation of electrical installations

EN 50160, Voltage characteristics of electricity supplied by public distribution systems

EN 60255-1, Measuring relays and protection equipment - Part 1: Common requirements

EN 60664-1, Insulation coordination for equipment within low-voltage systems – Part 1: Principles, requirements and tests (IEC 60664-1)

EN 61000-6-1, Electromagnetic compatibility (EMC) – Part 6-1: Generic standards – Immunity for residential, commercial and light-industrial environments

EN 61000-6-3+A1:20072011, Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments

IEC/TR 61000-3-15, Electromagnetic compatibility (EMC) - Part 3-15: Limits - Assessment of low frequency electromagnetic immunity and emission requirements for dispersed generation systems in LV network

HD 60364 series, Low-voltage electrical installations

IEC 60364-5-55, Electrical installations of buildings – Part 5-55: Selection and erection of electrical equipment - Other equipment

3 Terms and definitions

For the purposes of this document, the following terms and definitions apply.

3.1

cogeneration

combined heat and power (CHP)

combined generation of electricity and heat by an energy conversion system and the concurrent use of the electric and thermal energy from the conversion system

Note 1 to entry: In the context of small-scale generation this concept is sometimes referred to as “micro-CHP”.

3.2

commissioning

process of putting into operation a micro-generator, apparatus, equipment, building, or facility

3.3

decommissioning

process of removing a micro-generator, apparatus, equipment, building, or facility from operation

3.4

disconnection

separation of the active parts of the micro-generator from the network with mechanical contacts providing at least the equivalent of basic insulation

Note 1 to entry: Passive components like filters, auxiliary power supply to the micro-generator and sense lines can remain connected.

Note 2 to entry: For the design of basic insulation all voltage sources have to be considered.

3.5

LV distribution network

low voltage part of the electric power system used for the transfer of electricity within an area of consumption to consumers

3.6**distribution network operator (DNO)**

natural or legal person responsible for operating, ensuring the maintenance of and, if necessary, developing the distribution network in a given area and, when applicable, its interconnections with other systems and for ensuring the long term ability of the system to meet reasonable demands for the distribution of electricity (DNO equals DSO, Distribution System Operator)

3.7**droop (derived from IEV 603-04-08)**

the ratio of the per-unit change in frequency $(\Delta f)/f_n$ (where f_n is the nominal frequency) to the per-unit change in power $(\Delta P)/P_M$ (where P_M is the actual active power at the instance when the frequency reaches the frequency threshold):

$$s = - (\Delta f/f_n) / (\Delta P/P_M)$$

3.8**electrical installation**

assembly of wiring and electrical equipment that is used within the domestic premises for the distribution and/or use of electric energy

3.9**fuel cell**

electrochemical device that converts chemical energy directly into heat and electricity

3.10**inform & fit**

process of installing and commissioning a micro-generator with prior notification of the DNO, followed by commencement of operation without the need of prior formal approval of the DNO

3.11**installer¹⁾**

person who has received sufficient training to apply safe methods of work to install a micro-generator in compliance with the requirements of this standard

3.12**interface protection**

electrical protection required to ensure that the micro-generator is disconnected for any event that could impair the integrity or degrade the safety of the distribution network

3.13**islanding**

situation where a section of the electricity network, containing generation, becomes physically disconnected from the rest of distribution network or user's network and one or more generators maintain a supply of electrical energy to the isolated section of the network

3.14**isolation**

cut off for reasons of safety from all or a discrete section of the electrical installation by separating the electrical installation or section from every source of electrical energy

3.15**Loss of Mains (LoM) detection**

function that will detect the micro-generator operating in an islanding situation

¹⁾ Based on national regulations, other terms may apply.

3.16**low voltage (LV)**

for the purpose of this standard a voltage, used for the supply of electricity, whose upper limit of nominal r.m.s. value is 1 kV

3.17**micro-generator (from 617-04-10)**

source of electrical energy and all associated interface equipment able to be connected to a regular electric circuit in a low voltage electrical installation and designed to operate in parallel with a public low voltage distribution networks rated up to and including 16A per phase

3.18**nominal voltage**

voltage by which a supply network is designated or identified and to which certain operating characteristics are referred

Note 1 to entry: The standard nominal voltage U_n for public low voltage is $U_n = 230$ V, either between phase and neutral, or between phases.

3.19**notification**

process of informing the DNO of the commissioning of a micro-generation system, or its decommissioning

3.20**opening time of an output-break circuit (from IEV 447-05-01)**

duration of the time interval between the instant when the characteristic quantity of a measuring relay in reset condition is changed, under specified conditions, and the instant when a specified output break circuit first opens

Note 1 to entry: *it is the sum of operate time and circuit breaker opening time, the latter in the range 50 ms - 70 ms for MV circuit breakers, nearly half this time for LV circuit breakers*

3.21**operate time (from IEV 447-05-05)**

duration of the time interval between the instant when the characteristic quantity of a measuring relay in reset condition is changed, under specified conditions, and the instant when the relay operates

Note 1 to entry: *it includes start time, intentional delay and bounce time*

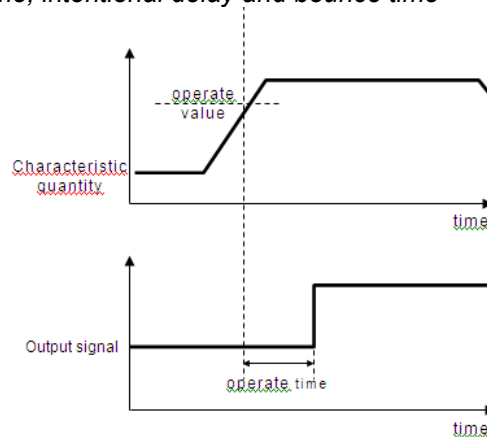


Figure 1: Explanatory diagram for Operate time

**3.22
user**²⁾

person with responsibility for the premises in which the micro-generator is installed, normally referred to in other documentation as the customer / consumer / network user

4 Connection requirements**4.1 The electrical installation****4.1.1 General**

The unit shall be connected in compliance with HD 60364 series and the relevant national standards.

Low voltage electrical installations shall comply with national and local regulation whether the installation is supplied by generation running in parallel with the distribution network, solely by the distribution network or islanded.

In case of any hardware malfunctioning, disconnection is required by means of a galvanic break device.

4.1.2 Over-current protection

The micro-generator installation shall be protected against over-current according to HD 60364 series. When selecting the overcurrent protection within the domestic installation it is necessary to ensure correct discrimination with the DNO's protection devices.

4.1.3 Earthing

Earthing shall be according to HD 60364-5-551 and the relevant national standards.

When a micro-generator is operating in parallel with the distribution network, there shall be no direct connection between the generator winding (or pole of the primary energy source in the case of a DC sourced micro-generator) and the DNO's earth terminal. For installations where the customer provides his own earth terminal, e.g. when connected to a TT system, it is also advisable to avoid connecting the generator winding to this earth terminal. The reason for this precaution is to avoid damage to the generator during faults on the distribution network and to ensure correct operation of protective devices.

For a micro-generator which is designed to operate in parallel with a distribution network but which is connected via an inverter (e.g. a PV array or fuel cell) it is permissible to connect one pole of the DC side of the inverter to the distribution network if there is insulation between the AC and the DC sides of the inverter. In such cases the installer / Manufacturer shall take all reasonable precautions to ensure that the micro-generator unit will not impair the integrity of the distribution network and will not suffer unacceptable damage for all credible operating conditions, including faults on the distribution network.

4.2 Frequency response to overfrequency

Unless stated otherwise in Annex A the generating unit shall be capable of activating active power frequency response at a programmable frequency threshold f_1 between and including 50,2 Hz and 50,5 Hz with a programmable droop in a range of 2 % – 12 %. The droop is relative to P_M , the actual AC output power at the instance when the frequency reaches the threshold f_1 . The insensitivity range of the frequency measurement shall be +/- 10 mHz or less.

²⁾ Based on national regulations other terms may apply.

NOTE 1 The active power droop relative to the actual power might also be defined as an active power gradient relative to the actual power. A Droop in the range of 2 % - 12% represents a gradient of $100 - 16,7\% P_M / \text{Hz}$

The initial intentional delay is programmable between 0 s and 2 s. When applying the frequency droop the actual frequency shall be used at any time

National settings for the threshold frequency f_1 and the droop are listed in Annex A. If no national settings are provided for a particular country, the default settings in Table 1 should be applied.

Table 1 Standard settings for frequency response to overfrequency

Parameter	Value
Threshold frequency	50,3 Hz
Droop	2,4%
Initial intentional delay	0 s

NOTE 2 The Active Power Frequency Response shall be activated as fast as technically feasible with an initial delay that shall be as short as possible and reasonably justified if greater than 2 seconds [ENTSO-E]

NOTE 3 It must be taken into account that, in case of islanding, a power reduction would correct any excess of generation leading to a generation-consumption balance. In these circumstances an islanding situation with stable frequency would take place, in which the correct behaviour of any protections based on frequency, as those mentioned in 4.3.2 and 4.3.4, would be hindered.

Generators not having the ability to reduce power over the full droop range have to activate active power frequency response as above in the controllable range of output power. Once minimum output power is reached, this power level is maintained constant. The unit has to shut off at a random frequency between the frequency threshold f_1 and 52Hz.

NOTE 4 The behaviour required for uncontrollable and partly controllable generating units will for a part of the network with many such units result in a similar droop as stated above for controllable generating units and hence will provide for the necessary system stability

NOTE 5 PV is considered to have the ability to reduce power over the full droop range.

NOTE 6 Protection setting overrules this behaviour

NOTE 7 Similar functions as response to underfrequency are under consideration

4.3 Interface protection

4.3.1 General

4.3.1.1 Introduction

The purpose of the interface protection is to ensure that the connection of a micro-generator unit will not impair the integrity or degrade the safety of the distribution network. The interface protection shall be insensitive to voltage and frequency variations in the distribution network within the voltage and frequency settings.

The interface protection, monitoring and control functions may be incorporated into the micro-generator control system, or may be fitted as discrete separate mounted devices.

4.3.1.2 Default settings versus national settings

If no national settings are provided for a particular country (Annex A), the default settings in Table 1 shall be applied.

4.3.1.3 Response to protection operation

The micro-generator shall disconnect from the network in response to an interface protection operation.

4.3.1.4 Accessibility of isolation switching devices

Under HD 60364 series there is a requirement that means shall be provided to enable a generator set to be isolated from the public supply.

Where this means of isolation is not accessible for the DNO at all times the micro-generator shall have two means of automatic disconnection, with a single control. At least one of the means of disconnection must be afforded by the separation of mechanical contacts.

4.3.1.5 Place of the interface protection

The interface protection can either be incorporated within the micro-generator or afforded by separate devices. In either case the interface protection shall meet the relevant requirements of EN 60255-1 and the manufacturer of the micro-generator shall declare that the combined devices fulfil these requirements.

4.3.1.6 Changing settings of the interface protection

The interface protection settings may only be altered, from those in place at the time of commissioning, with the written agreement of the DNO and then only in accordance with the manufacturer instructions.

It shall not be permissible for the user to alter the interface protection settings.

NOTE Alteration of the settings of the interface protection may cause a breach of the type-certificate making re-testing necessary unless the micro-generator is type-tested on the full setting range of the interface protection.

4.3.1.7 Combined protection device for multiple generators

It is allowed to use a protection device that affords interface protection for 2 or more micro-generators up to and including 16 A per phase in aggregate. However the possibility to use Inform and Fit then depends on the conditions of the type certificate of the protection device.

If two or more micro-generators, each with their own interface device, are placed in parallel, the proper combined working of the protection devices shall be ensured.

In the case of adding a generator to the combined protection device the DNO shall be consulted.

4.3.2 Interface protection settings

National settings are listed in Annex A. If no national settings are provided for a particular country, the default values in Table 2 should be applied. The measurement point can be inside the micro-generator or anywhere between the micro-generator terminals and up to but not including the connection to the DNO network.